

# C&C Technologies

## Important Notice

### C-Nav1000 R4 Navigation Sensor Installation

The shield of the Navigation Sensor power and data cable is connected to the navigation sensor internal ground, referenced to the negative DC supply for the unit. For this reason, the **free end of the cable shield must not be connected to the ship's structure**. For the same reason, don't connect the Navigation Sensor alarm acknowledge ground, the speed log pulse ground or the cable shield for the GPS antenna to the ship's structure.

