

# C-Nav<sup>®</sup>

## C-Nav3050<sup>®</sup> User Guide

Revision 12

Revision Date: September 10, 2018

C-Nav<sup>®</sup> Positioning Solutions  
730 E. Kaliste Saloom Road  
Lafayette, LA 70508 U.S.A.  
[oceanengineering.com/cnav](http://oceanengineering.com/cnav)



**Release Notice**

This is the September 2018 release of the C-Nav3050<sup>®</sup> User Guide.

**Revision History**

12	9/10/2018	Updated logo and registered marks. Updated ITRF2008 to ITRF2014. Update NMEAPNCTDTM message definition. Updated Part Numbers Added Bundle U Added C-Nav289 Antenna specs	TN/LC
11	3/27/2018	Changed logos to OI Standards	LC
10	6/08/2015	Added C-Nav286 and AD591 Antenna specs. Added Mailing List info Updated Appendix G	LC
9	10/28/2014	Appendix A: Added description of Rapid Recovery with QuickStart. Changed RTK Extend operating time to 15 minutes for Non NCT base station. Added note regarding RTK Extend maximum performance. Added specs and note for RTK-WL mode Added specs for CCS-LP Added pull-in time for CCS-LP Appendix C: Added C-Nav <sup>®</sup> CCS ITRF-2008 transition information Added Appendix I: RoHS Certification	LC
8	7/08/2014	Updated options' part numbers	LC
7	4/8/2014	Introduced the C-Nav3050 <sup>®</sup> without the standard antenna. Removed the High Latitude Antenna	J. Hauschildt
6	10/16/2013	Introduced new user guide format. Added High Latitude Antenna Added Web Interface Updated Measurement Performance Added CCS Rapid Recovery	J. Hauschildt
5	1/24/2013	Deleted all references to Galileo, E1 and E5A. Manual to comply with V3.0.16.0 Software Ensemble. Certain NMEA sentences to comply with NMEA-0183 v4.1. Revised figure for Unterminated Power Cable Pin-Out (P/N NAV94-310274-3010LF).	J. Hauschildt

		Includes information on C-Nav® Correction Services Over-The-Internet (CCS OTI). Replaced Website with cnav.com. Deleted all references to RTG. Replaced with C-Nav Correction Services (CCS). Changed Revisions from a letter to number format.	
NCT Rev. E C-Nav Rev. F	Nov 2011	Corrected 1PPS pulse characteristics in <i>Chapter 3 – Interfacing</i> and <i>Appendix A – Specifications</i> . Added updated C-NavC <sup>2</sup> ® performance specifications throughout. Changed C-Nav® Subscription Service availability to '10 degree look angle' in <i>Appendix C – C-Nav® Subscription Services</i> Removed references to AC Power Supply Kit (P/N CNV82-020007-3001LF) and DC Power Cable (P/N NAV94-310274-3010LF) as optional equipment throughout; Added new \$PNCTGGA message tables to <i>Appendix D – NMEA Data Output Messages</i> .	
NCT Rev. D C-Nav Rev. E	Aug 2011	Added C-NavC <sup>2</sup> ® Subscription Service information and description to <i>Appendix C – C-Nav® Subscription Service</i> . Added Russian Type Approval Certificates to <i>Appendix G – Type Approval Certificates</i> Added RS-232/RS-422 Dual-data adapter and 1PPS adapter pin assignment to <i>Chapter 3 – Communication Ports Section</i>	
NCT Rev. D	Jan 2011	Removed C&C Technologies name from title page, replaced with C-Nav® World DGNSS; Added Software License Agreement statement to <i>Notices</i> section; Updated <i>Table of Contents</i> , <i>List of Figures</i> and <i>List of Tables</i> as necessary; Added NTRIP to <i>Related Standards</i> section; Added 1PPS Adapter to Supplied Equipment List, <i>Table 1</i> and <i>Figure 3</i> ; Changed all references to supplied Y-Cable, Positronic 9-Pin Male to Ethernet RJ45 Plug & DB9S (RS-232/1PPS), 6 ft data cable part number from P/N NAV94-310272-3006LF to P/N NAV94-310272-3006LFB; Added RTK, RTK Extend and 1PPS Software options to Additional Software Options, <i>Table 5</i> ; Corrected P/N description in Software Bundle A from GPS L1-only to GNSS L1/G1/E1 Navigation; Changed all references to: Cable, Power / 1PPS /Event, Positronic 9-Pin Female	

		<p>             Unterminated, 10ft, w/ Filter, part number changed from P/N NAV94-310262-3010LF to P/N NAV94-310274-3010LF;              Removed P/N NAV94-310261-3012LF – 12' TNC-BNC Antenna cable;              Added L1/G1 Antenna (P/N NAV82-001017-0001LF) to <i>Available Antennas</i> section (<i>Figure 8, Table 10</i>), <i>Chapter 2 - Antennas</i> section, and <i>Appendix B – Antenna Specifications</i> section (<i>Table B2, Figures B7 &amp; B8</i>);              Added additional information to RTK paragraph in <i>Chapter 2 - System Overview</i> section;              Added L1-RTK information to <i>Chapter 2 - Accuracy</i> section;              Added RTK Extend, Multi-Format RTK, User-Defined Datum, Heading, Coordinated Machines, Internal Memory, Ethernet Connection, Control of Power Consumption, Continuously Operating Reference Station (CORS) Support and NTRIP Support information to <i>Chapter 2 - Unique Features</i> section;              Updated description of Airborne Antenna in <i>Chapter 2 - Antennas</i> section;              Added information on equipment required to pass the conducted MED type emission criteria to <i>Chapter 3 - Electrical Power</i> section and <i>Appendix A - Physical and Environmental</i> section;              Changed Positronic Socket type connector from P/N FR11FP9ZZLM0/AA to P/N FR11FP922LM0/AA in <i>Chapter 3 - Electrical Power</i> section;              Added information on proper shutdown of the C-Nav3050<sup>®</sup> via the ignition pin to <i>Chapter 3 - Electrical Power</i> section;              Added <i>Figure 14: Proper External Power Source Setup</i> to <i>Chapter 3 - Electrical Power</i> section;              Added part number for Data Cable Positronic plug and pin type (Plug P/N FR11MP922LM0/AA, Pin Type: MC422N/AA) to <i>Chapter 3 – Communication Ports</i> section;              Added 1PPS Pin-outs to Positronic 9-Pin Male to Ethernet (LAN)/DB9S (RS-232/1PPS) (P/N NAV94-310272-3006LFB) cable, <i>Table 14</i> and <i>Figure 16</i>;              Added information on Data I/O LED functionality, specifically regarding data           </p>	
--	--	---	--

		<p>logging indicators to <i>Chapter 3 – Data I/O Active LEDs</i> section, updated <i>Table 24</i>;          Removed C-Nav<sup>®</sup> Subscription information from <i>Chapter 5 – Configuration</i> and consolidated all subscription information in <i>Appendix C – C-Nav<sup>®</sup> Subscription Service</i>;          Added additional features to <i>Appendix A - Features</i> section;          Added Multi-Frequency RTK, Heading, Slew and Velocity to <i>Appendix A - Measurement Performance</i> section;          Added PDOP disclaimer to <i>Appendix A - Measurement Performance</i> section;          Added RTK Extend information on rover receiver to <i>Appendix A - Measurement Performance</i> section;          Changed all instances of 'dual-frequency' to 'multi-frequency' in <i>Appendix C - Infrastructure</i> section;          Added changes to C-Nav<sup>®</sup> Subscription Service Satellites based on C-Nav3050<sup>®</sup> firmware to <i>Appendix C - C-Nav<sup>®</sup> Subscription Service Satellites</i> section, <i>Table C1 &amp; C2</i>;          Added <i>Appendix H – Software License Agreement</i>;          Replaced all references, logos and URLs, E-mail addresses to 'C-Nav<sup>®</sup> GPS' with 'C-Nav<sup>®</sup> GNSS';          Removed all references to High-latitude L-Band Antenna and Signal Combiner;          Removed all references to NCT RTK 0x5D Message Type.</p>	
NCT Rev. A	Sept 2009	Initial Release	
Revision	Date	Description	Author

## Trademarks

The Oceaneering logo is a trademark of Oceaneering International, Inc. *C-Nav<sup>®</sup>*, *C-Nav3050*, *C-NavC<sup>1</sup>*, *C-NavC<sup>2</sup>*, and *C-Monitor* are trademarks of Oceaneering International, Inc. All other brand names are trademarks of their respective holders.

## Disclaimer of Warranty

EXCEPT AS INDICATED IN “LIMITED WARRANTY” HEREIN, OCEANEERING INTERNATIONAL, INC. SOFTWARE, FIRMWARE AND DOCUMENTATION ARE PROVIDED “AS IS” AND WITHOUT EXPRESSED OR LIMITED WARRANTY OF ANY KIND BY EITHER OCEANEERING INTERNATIONAL, INC., OR ANYONE WHO HAS BEEN INVOLVED IN ITS CREATION, PRODUCTION, OR DISTRIBUTION INCLUDING BUT NOT LIMITED TO THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE. THE ENTIRE RISK, AS TO THE QUALITY AND PERFORMANCE OF THE OCEANEERING INTERNATIONAL, INC. HARDWARE, SOFTWARE, FIRMWARE AND DOCUMENTATION, IS WITH YOU. SOME STATES DO NOT ALLOW THE EXCLUSION OF IMPLIED WARRANTIES, SO THE ABOVE EXCLUSION MAY NOT APPLY TO YOU.

## Limitation of Liability

IN NO EVENT WILL OCEANEERING INTERNATIONAL, INC., OR ANY PERSON INVOLVED IN THE CREATION, PRODUCTION, OR DISTRIBUTION OF THE OCEANEERING INTERNATIONAL, INC. SOFTWARE, HARDWARE, FIRMWARE AND DOCUMENTATION BE LIABLE TO YOU ON ACCOUNT OF ANY CLAIM FOR ANY DAMAGES, INCLUDING ANY LOST PROFITS, LOST SAVINGS, OR OTHER SPECIAL, INCIDENTAL, CONSEQUENTIAL, OR EXEMPLARY DAMAGES, INCLUDING BUT NOT LIMITED TO ANY DAMAGES ASSESSED AGAINST OR PAID BY YOU TO ANY THIRD PARTY, ARISING OUT OF THE USE, LIABILITY TO USE, QUALITY OR PERFORMANCE OF SUCH OCEANEERING INTERNATIONAL, INC. SOFTWARE, HARDWARE, AND DOCUMENTATION, EVEN IF OCEANEERING INTERNATIONAL, INC., OR ANY SUCH PERSON OR ENTITY HAS BEEN ADVISED OF THE POSSIBILITY OF DAMAGES, OR FOR ANY CLAIM BY ANY OTHER PARTY. SOME STATES DO NOT ALLOW THE LIMITATION OR EXCLUSION OF LIABILITY FOR INCIDENTAL OR CONSEQUENTIAL DAMAGES SO, THE ABOVE LIMITATIONS MAY NOT APPLY TO YOU

## Table of Contents

C-Nav3050® User Guide .....	1
Trademarks .....	6
Disclaimer of Warranty .....	6
Limitation of Liability .....	6
Table of Contents.....	7
List of Figures .....	12
List of Tables .....	14
Manual Organization .....	16
Related Documents.....	19
Related Standards.....	19
Publicly-Operated SBAS Signals.....	20
Manual Conventions.....	22
Section 1 - Getting Started.....	23
Hardware Setup .....	23
C-Nav3050® GNSS System Supplied Equipment .....	26
Antennas .....	28
Receiver Software Options.....	29
Data Output Rates.....	29
Electrical Power.....	31
Data and Antenna Optional Cables .....	32
Controllers .....	33
Miscellaneous.....	35
Section 2 - Introduction .....	36
System Overview .....	36
Applications.....	37
Features That Apply to All Bundles .....	38
Accuracy .....	39
NCT Binary Proprietary Data.....	40
RTCM Data .....	40
NMEA-0183 Data .....	41
Unique Features.....	42
Antennas .....	46
Section 3 - Interfacing .....	50

Electrical Power.....	50
Communication Ports.....	53
COM1 - LAN & Ethernet / 1PPS / DB9S Y-Cable.....	54
COM2 - USB & USB / DB9S Y-Cable.....	55
RS-232 / RS-422 Dual-data Adapter.....	56
Accessories.....	56
DB9S Cable (Connected to COM1).....	60
DB9S Cable (Connected to COM2).....	61
Event.....	62
1PPS.....	62
Indicator Panel.....	64
GNSS LEDs.....	64
Section 4 - Installation.....	67
GNSS Antenna.....	67
Antenna Location.....	68
Antenna Mounting Pole.....	69
Antenna Mounting Pole Adaptor.....	69
Antenna Installation.....	70
Coaxial Cable.....	70
Cable Route.....	71
Coaxial Cable Installation.....	71
Lightning Protection.....	72
GNSS Sensor.....	73
Communication Port Connectivity.....	73
Basics of RTK Surveying.....	74
Section 5 - Configuration.....	76
Output Messages.....	77
NMEA Messages.....	78
RTCM Messages.....	78
Base and Rover Navigation Setup.....	79
Profiles.....	79
Section 6 - Safety Instructions.....	81
Transport.....	81
Maintenance.....	81
External Power Source.....	81



Safety First .....	82
Appendix A - GNSS Sensor Specifications .....	83
Features .....	83
Performance .....	84
Tracking Characteristics .....	84
Pull-In Times .....	84
Signals Tracked .....	85
Time-To-First-Fix (measured per ION-STD 101) .....	85
Signal Reacquisition .....	85
Measurement Performance .....	87
Receiver Noise Figure .....	88
Dynamics .....	88
1PPS .....	88
Data Latency and Memory .....	88
Connector Assignments .....	89
Physical and Environmental Specifications .....	89
Satellite Based Augmentation System Signals (SBAS) .....	90
LED Display Functions .....	90
Input / Output Data Messages .....	90
CCS Rapid Recovery .....	91
CCS Rapid Recovery with Quick Start .....	91
Quick Start .....	91
Block Diagrams .....	92
Appendix B - Antenna Specifications .....	94
C-Nav286 Specification Sheet .....	97
C-Nav286 Drawing .....	98
C-Nav289 Specification Sheet .....	99
C-Nav289 Drawing .....	100
AD591 Antenna Specification .....	101
AD591 Antenna Drawing .....	102
Standard & Airborne Antenna Radiation Patterns .....	105
Base Antenna Radiation Pattern .....	105
Appendix C - C-Nav <sup>®</sup> Corrections Service (CCS) .....	106
Description .....	106
Infrastructure .....	106

Reliability .....	108
CCS Dual Frequency .....	108
C-Nav <sup>®</sup> Corrections Service (CCS) Satellites .....	109
CCS Over-The-Air C-Nav <sup>®</sup> Licensing .....	110
How to Obtain a C-Nav <sup>®</sup> License .....	110
Over-The-Air (OTA) Broadcast.....	111
Verify License Is Active .....	111
C-Nav <sup>®</sup> Corrections Service Over-The-Internet (CCS OTI) .....	112
Hardware Setup and Configuration .....	113
Appendix D - NMEA Data Output Messages .....	114
NMEAALM (ASCII).....	114
NMEADTM (ASCII) .....	115
NMEAGBS (ASCII).....	117
NMEAGFA (ASCII).....	118
NMEAGGA (ASCII) .....	120
NMEAGLL (ASCII) .....	122
NMEAGNS (ASCII) .....	123
NMEAGRS (ASCII) .....	125
NMEAGSA (ASCII).....	126
NMEAGST (ASCII).....	127
NMEAGSV (ASCII).....	128
NMEAMLA (ASCII).....	129
NMEARMC (ASCII) .....	130
NMEARRE (ASCII).....	132
NMEATTM (ASCII).....	133
NMEAVTG (ASCII).....	135
NMEAZDA (ASCII).....	136
NMEAPNCTDTM (ASCII).....	137
NMEAPNCTGGA (ASCII) .....	139
NMEAPNCTGST (ACSII) .....	144
NMEAPNCTMDE (ASCII) .....	145
NMEAPNCTSET (ASCII) .....	146
Appendix E - L-Band Correction Signals.....	147
Appendix G - Standards.....	149
Appendix H - Software License Agreement .....	150

Open Source Software License Appendix.....	156
License Text - Module/Component: freeRTOS v4.7.2.....	156
License Text - Module/Component: lwIP v1.2.0 .....	164
Appendix I - RoHS Certification .....	167
Glossary.....	169
Abbreviations.....	169
Definitions .....	172

## List of Figures

Figure 1: C-Nav3050 <sup>®</sup> GNSS Receiver Rear View .....	24
Figure 2: C-Nav3050 <sup>®</sup> LED Indicator Panel .....	25
Figure 3: C-Nav3050 <sup>®</sup> GNSS System Supplied Equipment .....	26
Figure 4: Optional Antennas .....	28
Figure 5: DC Power Cable w/ Filter .....	31
Figure 6: AC Power Supply Kit .....	31
Figure 7: Optional Data Cables .....	32
Figure 8: Optional Antenna Cable .....	33
Figure 9: C-NaviGator III Control & Display Unit .....	33
Figure 10: Ruggedized Transportation Case .....	35
Figure 11: Unterminated Power Cable With Filter .....	50
Figure 12: Unterminated Power Cable Pin-Out .....	50
Figure 13: Universal Power Adapter and Power Cord .....	51
Figure 14: Proper External Power Source Setup .....	53
Figure 15: C-Nav3050 <sup>®</sup> GNSS Receiver Rear View .....	53
Figure 16: Ethernet (LAN) / RS-232 / 1PPS Y-Cable Pin Assignment .....	54
Figure 17: Optional USB Device / RS-232 / RS-422 Y-Cable Pin Assignment ...	55
Figure 18: RS-232 / RS-422 Dual-data Adapter .....	56
Figure 19: RS-232 / RS-422 Dual-data Adapter Pin Assignment .....	56
Figure 20: Optional Data Cables .....	57
Figure 21: Optional USB Host Cable Pin Assignment .....	58
Figure 22: USB Device Cable Pin Assignment .....	59
Figure 23: Optional Ethernet Cable Pin Assignment .....	59
Figure 24: COM1 Serial Cable Pin Assignment .....	60
Figure 25: COM2 Serial Cable Pin Assignment .....	61
Figure 26: 1PPS Adapter .....	63
Figure 27: 1PPS Adapter Pin Assignment .....	63
Figure 28: C-Nav3050 <sup>®</sup> GNSS Receiver Indicator Panel .....	64
Figure 29: Standard GNSS Antenna .....	67
Figure 30: Antenna Mounting Poles .....	69
Figure 31: Antenna Mounting Pole and Adaptor .....	69
Figure 32: Antenna, Adaptor and Mounting Pole .....	69
Figure 33: C-Nav3050 <sup>®</sup> GNSS Receiver Antenna Mast Installation .....	70

Figure 34: Communication Port Connections .....	74
Figure 35: RTK Setup - Good Line of Sight .....	75
Figure 36: RTK Setup - Poor Line of Sight.....	75
Figure 37: C-Nav3050 <sup>®</sup> Base Plate Dimensions Without Mounting Brackets .....	92
Figure 38: C-Nav3050 <sup>®</sup> Base Plate Dimensions With Mounting Brackets .....	93
Figure 39: Standard Antenna Dimensions .....	96
Figure 40: C-Nav286 Antenna Drawing .....	98
Figure 41: C-Nav289 Antenna Drawing .....	100
Figure 42: AD591 Antenna diagram.....	102
Figure 43: Airborne Antenna Dimensions .....	103
Figure 44: Base Antenna Dimensions.....	104
Figure 45: Standard & Airborne Antenna Radiation Pattern .....	105
Figure 46: Base Antenna Radiation Pattern.....	105
Figure 47: Front Panel C-Nav <sup>®</sup> Status LED - Showing Active C-Nav <sup>®</sup> License.	111
Figure 48: C-Nav <sup>®</sup> Corrections Service Coverage Map .....	112
Figure 49: DTE to DCE RS-232 Pin Assignments .....	177

## List of Tables

Table 1: C-Nav3050 <sup>®</sup> GNSS Sensor Kit Bundle - Part Numbers .....	27
Table 2: Optional Antennas - Part Numbers .....	28
Table 3: C-Nav3050 <sup>®</sup> Software Bundles - Part Numbers .....	29
Table 4: Data Output Rates - Part Numbers .....	29
Table 5: Additional Software Options - Part Numbers.....	30
Table 6: DC Power Cable w/ Filter - Part Numbers.....	31
Table 7: AC Power Supply Kit - Part Numbers .....	32
Table 8: Optional Data Cables - Part Numbers.....	32
Table 9: Optional Antenna Cable - Part Numbers.....	33
Table 10: C-NaviGator III Bundle - Part Numbers.....	34
Table 11: Optional Ruggedized Transportation Cases - Part Numbers .....	35
Table 12: DC Power Cable Pin Assignments.....	51
Table 13: Ethernet (LAN) / RS-232 / 1PPS Y-Cable Pin Assignment .....	54
Table 14: Optional USB Device / RS-232 / RS-422 Y-Cable Pin Assignment ....	55
Table 15: Optional Data Cables .....	57
Table 16: Optional USB Host Cable Pin Assignment.....	58
Table 17: USB Device Cable Pin Assignment .....	58
Table 18: Optional Ethernet Cable Pin Assignment .....	59
Table 19: Optional Ethernet Cable Pin Assignment .....	59
Table 20: COM1 Serial Cable Pin-Outs .....	60
Table 21: COM2 Serial Cable Pin-Outs .....	61
Table 22: GNSS LED Indication.....	65
Table 23: C-Nav <sup>®</sup> Link LED Indication .....	65
Table 24: Data I/O Active LED Indication (serial connections only) .....	66
Table 25: Bluetooth Connectivity LED Indication .....	66
Table 26: Acceptable Coaxial Cable Lengths .....	72
Table 27: Standard, Base, and Airborne Antennas.....	94
Table 28: C-Nav286 Antenna Specification Sheet.....	97
Table 29: C-Nav289 Antenna Specification Sheet.....	99
Table 30: AD591 Antenna Specification Sheet .....	101
Table 31: C-Nav <sup>®</sup> Corrections Service Satellites .....	109
Table 32: ALM Message Output Format .....	114
Table 33: DTM Message Output Format.....	115

Table 34: DTM Message Output for Each Nav Mode .....	116
Table 35: GBS Message Output Format.....	117
Table 36: GFA Message Output Format .....	118
Table 37: GGA Message Output Format .....	121
Table 38: GLL Message Output Format.....	122
Table 39: GNS Message Output Format.....	124
Table 40: GRS Message Output Format.....	125
Table 41: GSA Message Output Format.....	126
Table 42: GST Message Output Format .....	127
Table 43: GSV Message Output Format.....	128
Table 44: MLA Message Output Format .....	129
Table 45: RMC Message Output Format .....	131
Table 46: RRE Message Output Format.....	132
Table 47: TTM Message Output Format .....	133
Table 48: VTG Message Output Format .....	135
Table 49: ZDA Message Output Format .....	136
Table 50: PNCTDTM Message Output Format.....	137
Table 51: PNCTDTM Message Output for Each Nav Mode.....	138
Table 52: PNCTGGA Message Output Format.....	140
Table 53: Beam Selection ID .....	140
Table 54: Signal ID .....	141
Table 55: Navigation Mode .....	143
Table 56: PNCTGST Message Output Format .....	144
Table 57: PNCTMDE Message Output Format.....	145
Table 58: PNCTSET Message Output Format.....	146
Table 59: L-Band Correction Signals* .....	147
Table 60: Toxic or Hazardous Substances or Elements Discloure .....	167

## Manual Organization

This section describes how the manual is laid out. It gives one or two sentence descriptions about each major section.

[Section 1 - Getting Started](#) (Page 23) provides instructions to enable the robust functionality of the **Oceaneering<sup>®</sup> C-Nav3050<sup>®</sup>** GNSS receiver.

[Section 2 - Introduction](#) (Page 36) introduces the user to the system overview of the C-Nav3050<sup>®</sup> GNSS receiver.

[Section 3 - Interfacing](#) (Page 50) instructs the user on how to interface with the C-Nav3050<sup>®</sup> GNSS receiver.

[Section 4 - Installation](#) (Page 67) provides installation instructions.

[Section 5 - Configuration](#) (Page 76) provides instructions on four ways to configure a C-Nav3050<sup>®</sup> GNSS receiver.

[Section 6 - Safety Instructions](#) (Page 81) provides the safety information for the user.

[Appendix A - GNSS Sensor Specifications](#) (Page 83) provides the user with specifications on the C-Nav3050<sup>®</sup> GNSS receiver.

[Appendix B - Antenna Specifications](#) (Page 94) provides specifications for the antennas that are used with the C-Nav3050<sup>®</sup> GNSS receiver.

[Appendix C - C-Nav<sup>®</sup> Corrections Service \(CCS\)](#) (Page 106) provides information on the **Oceaneering<sup>®</sup> C-Nav<sup>®</sup>** corrections service.

[Appendix D - NMEA Data Output Messages](#) (Page 114) describes the many different NMEA messages that the C-Nav3050<sup>®</sup> GNSS receiver can output.

[Appendix E - L-Band Correction Signals](#) (Page 147) provides the user information on L-Band correction signals for the C-Nav3050<sup>®</sup> GNSS receiver.



[Appendix G - Standards](#) (Page 149) provides the information of the testing standards that the C-Nav3050<sup>®</sup> GNSS receiver is designed to.

[Appendix H - Software License Agreement](#) (Page 150) provides legal information in regards to the software used in the C-Nav3050<sup>®</sup> GNSS receiver.

[Appendix I - RoHS Certification](#) (Page 167) provides information on Restriction of Use of Hazardous Substances.

[Glossary](#) (Page 169) provides the user with abbreviations and definitions relative to the C-Nav3050<sup>®</sup> GNSS receiver.

### FCC Notice

This device complies with Part 15 Subpart B Class B of the FCC Rules. Operation is subject to the following two conditions:

1. This device may not cause harmful interference, and
2. This device must accept any interference received, including interference that may cause undesired operation.

The GNSS sensor has been tested in accordance with FCC regulations for electromagnetic interference. This does not guarantee non-interference with other equipment. Additionally, the GNSS sensor may be adversely affected by nearby sources of electromagnetic radiation.

### C-Nav<sup>®</sup> Licensing

Access to the C-Nav<sup>®</sup> Corrections Service (CCS) requires a subscription that must be purchased. Licenses are non-transferable, and are subject to the terms of the C-Nav<sup>®</sup> License Agreement. Subscriptions are based upon a predetermined period of usage. Subscriptions can be left to expire, or if service is no longer needed prior to the date of expiration of service, a deactivation code can be obtained by contacting C-Nav<sup>®</sup> Authcode ([cnavauthcode@oceanengineering.com](mailto:cnavauthcode@oceanengineering.com)).

For further details on the C-Nav<sup>®</sup> Corrections Service, subscriptions, deactivations, terms, conditions and its capabilities, refer to [Appendix C - C-Nav<sup>®</sup> Corrections Service \(CCS\)](#) (Page 106), of this manual or send an email inquiry to C-Nav<sup>®</sup> Support ([cnavsupport@oceanengineering.com](mailto:cnavsupport@oceanengineering.com)).

### Software License Agreement

By powering on and using this GNSS C-Nav<sup>®</sup> Corrections Service receiver, you agree to the terms and conditions of the C-Nav<sup>®</sup> World DGNSS Receiver Software License and Open Source Software Licenses. The complete terms and conditions of these software licenses may be found in the C-Nav3050<sup>®</sup> User Guide, [Appendix H - Software License Agreement](#) (Page 150).

### USG FAR

Technical Data Declaration (Jan 1997)

The Contractor, Oceaneering International, Inc., hereby declares that, to the best of its knowledge and belief, the technical data delivered herewith under Government contract (and subcontracts, if appropriate) are complete, accurate, and comply with the requirements of the contract concerning such technical data.

### Global Navigation Satellite Systems

Global Navigation Satellite Systems (i.e., GPS and GLONASS) are under the control of the respective Governmental agency and the operation of these satellites may be changed at any time without warning.

GPS Selective availability (S/A code) was disabled on 02 May 2000 at 04:05 UTC. The United States government has stated that present GPS users use the available signals at their own risk.

The U.S. State Department International Traffic in Arms Regulations (ITAR) limits the performance of commercial GNSS products. As a result, access to satellite measurements and navigation results will be limited from display and recordable output when predetermined values of velocity and altitude are exceeded. These threshold values are far in excess of the normal and expected operational parameters of the C-Nav3050<sup>®</sup> GNSS receiver.

Revisions to this User Guide can be obtained in a digital format from the C-Nav<sup>®</sup> website ([oceanengineering.com/cnav](http://oceanengineering.com/cnav)).

## **Related Documents**

### C-Nav3050<sup>®</sup> Quick Start Guide

Provides instructions to quickly set up the standard configuration of the C-Nav3050<sup>®</sup> GNSS receiver, and how to obtain a C-Nav<sup>®</sup> license.

## **Related Standards**

### ICD-GPS-200

NAVSTAR GPS Space Segment / Navigation User Interfaces Standard. ARINC Research Corporation; 2250 E. Imperial Highway; El Segundo, California 90245  
IEC 60945, IEC 61108-1, IEC 61162-1, IEC 61162-2

### GLONASS ICD, Version 5.0, 2002

Russian Space Agency, Information Analytical Centre  
Internet: <http://glonass-iac.ru/en/>

### RTCM-SC-104

Recommended Standards For Differential GNSS Service. Radio Technical Commission For Maritime Services; 1611 N. Kent St, Suite 605; Arlington, Virginia 22209

### NTRIP

Radio Technical Commission for Maritime Services (RTCM) Standard 10410.0 (RTCM Paper 200-2004/SC104-STD, Version 1.0 for Networked Transport of RTCM via Internet Protocol (NTRIP))

Radio Technical Commission for Maritime Services (RTCM) Standard 10410.1 (RTCM Paper 111-2009-SC104-STD, Version 2.0 for Networked Transport of RTCM via Internet Protocol (NTRIP))

### CMR, CMR+

Compact Measurement Record; Trimble Navigation Limited; 935 Stewart Drive; Sunnyvale, CA 94085

## RINEX

Receiver Independent Exchange Format; Astronomical Institute of the University of Bern

## QZSS

Quasi Zenith Satellite System. Japan Aerospace Exploration Agency (JAXA). 7-44-1 Jindaiji Higashi-machi, Chofu-shi, Tokyo 182-8522.

## NMEA-0183

National Marine Electronics Association Standard For Interfacing Marine Electronic Devices. NMEA National Office; 7 Riggs Avenue; Severna Park, Maryland 21146

## SJ/T11363-2006

Standard of the Electronics Industry of the People's Republic of China.

Issued: 11-06-2006 Implemented 11-06-2006

Issued by: Ministry of Information Industry of the People's Republic of China.

## **Publicly-Operated SBAS Signals**

### RTCA/DO-229D

The Radio Technical Commission for Aeronautics (RTCA) develops consensus-based recommendations regarding communications, navigation, surveillance, and air traffic management (CNS/ATM) system issues.

RTCA. 1828 L Street, NW, Suite 805, Washington, DC 20036.

These organizations implement the RTCA/DO-229D standard set by RTCA:

### WAAS (Wide Area Augmentation System)

U.S. Department of Transportation. Federal Aviation Administration. 800 Independence Ave, SW, Washington, DC 20591

EGNOS (European Geostationary Navigation Overlay Service)

European Space Agency. 8, 10 rue Mario-Nikis,  
F-75738 Paris Cedex 15, France.

MSAS (MTSAT Satellite-based Augmentation System)

Japan Civil Aviation Bureau. Ministry of Transport. Kasumigaseki 2-1-3, Chiyoda-ku, Tokyo 100, Japan.

GAGAN (GPS Aided Geo Augmented Navigation)

Indian Space Research Organization. Antariksh Bhavan, New Bel Road,  
Bangalore - 560 094, India.

## Manual Conventions

Arial font is used for plain text in this document.

*Arial italic* font is used for settings names.

“Arial quoted” font is used for settings values.

**Arial Bold** font is used for button names.

***Arial Bold Italic*** font is used for menu items.

[Arial Blue](#) font is used for cross-references.

[Arial Blue Underline](#) font is used for hyperlinks.

*Arial red italic* is used for typed commands.

**Arial Bold** font size 10 is used for captions.

**ARIAL BLACK ALL-CAPS** font is used for port connection names.



This symbol means Reader Be Careful. It indicates a caution, care, and/or safety situation. The user might do something that could result in equipment damage or loss of data.



This symbol means Danger. You are in a situation that could cause bodily injury. Before you work on any equipment, be aware of the hazards involved with electrical and RF circuitry and be familiar with standard practices for preventing accidents.

Important notes are displayed in shaded text boxes

***Please note:***

Such note box displays important information which should not be ignored.

Simple file content is displayed in Courier New Black font in a text box.

```
#Sample File  
Version 0.1
```

# Section 1 - Getting Started

## Hardware Setup

This chapter provides instructions to enable the robust functionality of the C-Nav3050® GNSS receiver.

Confirm that all ordered equipment is delivered. Refer below for the following tables:

- Supplied Equipment: [Table 1](#)
- Software Bundles: [Table 3](#)
- Additional Software Options: [Table 5](#)
- Data Output Rates: [Table 4](#)
- Electrical Power: [Table 6](#) & [Table 7](#)
- Data and Antenna Cables (optional): [Table 8](#) & [Table 9](#)
- Antennas (optional): [Table 2](#): Optional Antenna
- Controllers (optional): [Table 10](#)
- Miscellaneous (optional): [Table 11](#)

If any items are missing or damaged immediately contact C-Nav® Support:

Telephone: +1 337 210-0000

E-mail: [cnavsupport@oceanengineering.com](mailto:cnavsupport@oceanengineering.com)

Join the C-Nav® alert mailing list (<https://www.oceanengineering.com/positioning-solutions/c-nav-alert-signup/>) to receive important announcements from C-Nav® Support.

***Please note:***

Your C-Nav3050® GNSS receiver has already been tested and configured by qualified C-Nav® service technicians. Refer to the following steps to connect equipment and operate the receiver.



Figure 1: C-Nav3050<sup>®</sup> GNSS Receiver Rear View


1. Use one of the two supplied data cables for communications:
  - Ethernet RJ45 / DB9S female Y-cable (CNV94-310272-3006): Connect the Positronic 9-Pin connector of the cable to **COM1 - LAN** at the rear of C-Nav3050<sup>®</sup> GNSS receiver. Connect the DB9S end to the computer or C-NaviGator CDU.

Or...

- USB 2.0 Device Plug / DB9S female Y-cable (CNV94-310273-3006): Connect the Positronic 9-Pin connector of the cable to **COM2 - USB** at the rear of C-Nav3050<sup>®</sup> GNSS receiver. Connect the DB9S end to the computer or C-NaviGator CDU.
2. Mount the supplied GNSS antenna. Locate the antenna in an area with a 360° clear view of the sky.
  3. Connect the TNC connector on one end of a C-Nav<sup>®</sup> approved GNSS antenna cable to the GNSS antenna. Connect the other end of the cable to the TNC connector, labeled ANT, at the rear of the C-Nav3050<sup>®</sup> GNSS receiver.
  4. Perform these steps to setup power:
    - a. If you are connecting using the Positronic 9-Pin Female Underterminated Power Cable (CNV94-310274-3010), connect the power cable to the connector labeled **POWER**, at the rear of the C-Nav3050<sup>®</sup> GNSS receiver. Connect the unterminated end of the power cable to a DC power source (9 to 32 VDC, 6 W typical, see [Section 3 - Interfacing](#) (Page 50) (for power cable pin assignments).
    - b. If you are connecting using the AC Power Supply Kit (CNV82-020007-3001B), connect the Positronic 9-Pin Female connector



of the Power Supply Unit (CNV82-020007-3001) to the connector labeled **POWER**, at the rear of the C-Nav3050<sup>®</sup> GNSS receiver. Insert an AC Power Cord into the 2-prong receptacle on the PSU, based on regional AC power availability (110, 220 or 240 VAC power cords provided) and plug into an appropriately rated wall receptacle.

5. Press the front panel On / Off switch  to turn on the C-Nav3050<sup>®</sup> GNSS receiver. All front panel LEDs illuminate for 3-5 seconds during power-up. The Power / GNSS Status LED changes from red to green. Refer to [Section 3 - Interfacing](#) (Page 50) for LED status descriptions.



**Figure 2: C-Nav3050<sup>®</sup> LED Indicator Panel**

6. Your C-Nav3050<sup>®</sup> GNSS receiver hardware is now properly connected.
7. At this point you may connect to C-Setup controller software via PC, or to a C-NaviGator Control & Display Unit to view real-time positioning data and control the C-Nav3050<sup>®</sup> GNSS receiver. Contact C-Nav<sup>®</sup> Support for more information.

**Please note:**

- Refer to [Section 5 - Configuration](#) (Page 76), for instructions on I/O data port configuration.
- The C-Nav<sup>®</sup> Corrections Service license is not a standard feature of any Software Bundle. It is purchased separately. Refer to [Appendix C - C-Nav<sup>®</sup> Corrections Service \(CCS\)](#) (Page 106) for more information on obtaining a C-Nav<sup>®</sup> Corrections Service license.
- The C-Nav<sup>®</sup> Corrections Service (CCS) Software Option is standard for all C-Nav3050<sup>®</sup> GNSS receiver Software Bundles (refer to [Table 3](#)).
- If the C-Nav3050<sup>®</sup> GNSS receiver does not function properly, contact C-Nav<sup>®</sup> Support immediately.

## C-Nav3050<sup>®</sup> GNSS System Supplied Equipment

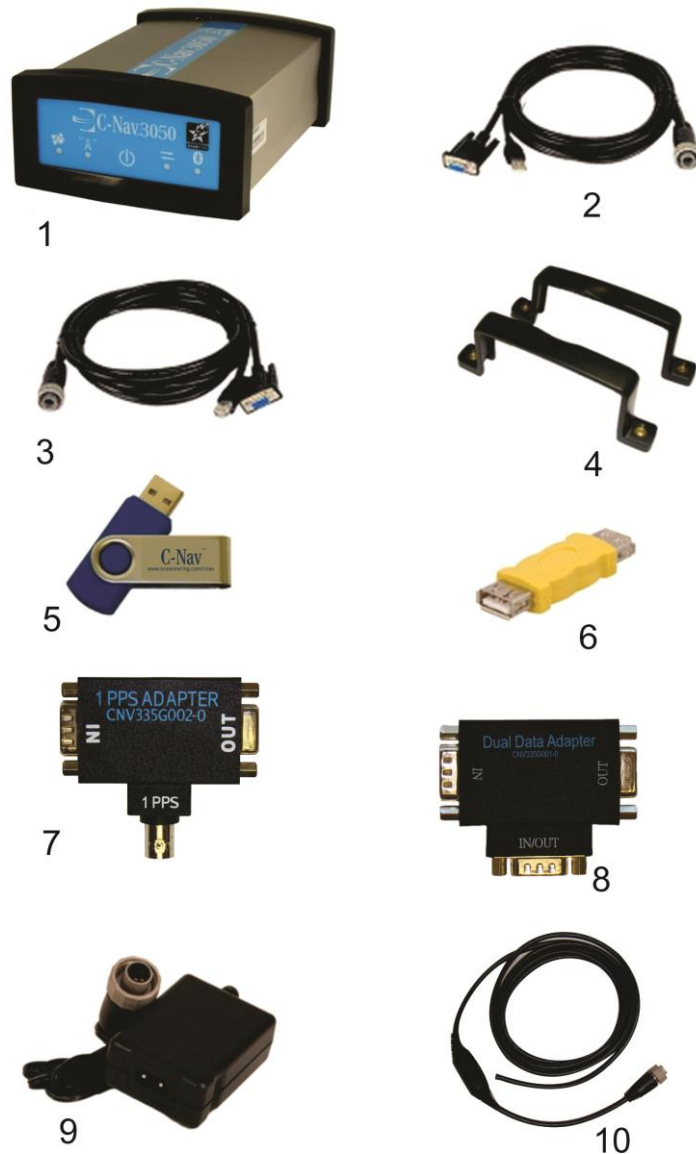


Figure 3: C-Nav3050<sup>®</sup> GNSS System Supplied Equipment

Description	Part Number
C-Nav3050 <sup>®</sup> GNSS Sensor Kit Bundle	BUNDLE_C-NAV3050-B
Includes the following items:	
C-Nav3050 <sup>®</sup> GNSS Sensor	CNV92_310413_3002

Y-Cable, Positronic 9-Pin Male to Ethernet RJ45 Plug & DB9S (RS-232 / 1PPS), 6 ft	CNV94-310272-3006
Y-Cable, Positronic 9-Pin Male to USB 2.0 Device Plug & DB9S (RS-232 / RS-422), 6 ft	CNV94-310273-3006
Mounting Brackets, 2 ea.	CNV88-310442-3001
C-Nav3050 <sup>®</sup> USB Flash Drive	CNV7CNG002-0
USB host-to-host receptacle adapter	CNVQVSCC2208-FF
1PPS Adapter	CNVCNV335G002-0
RS-232 / 422 Dual-data Adapter	CNVCNV335G001-0
AC Power Supply Kit (See <a href="#">Figure 6</a> )	CNV82-020007-3001B
Cable, Power / 1PPS / Event, Positronic 9-Pin Female Unterminated, 10ft, w/ Filter (See <a href="#">Figure 5</a> )	CNV94-310274-3010
Shipping Carton (Not Shown)	CNV79-200304-0001
C-Nav3050 <sup>®</sup> Quick Start Guide (Not Shown)	CNV96-310033-3001

**Table 1: C-Nav3050<sup>®</sup> GNSS Sensor Kit Bundle - Part Numbers**

## Antennas

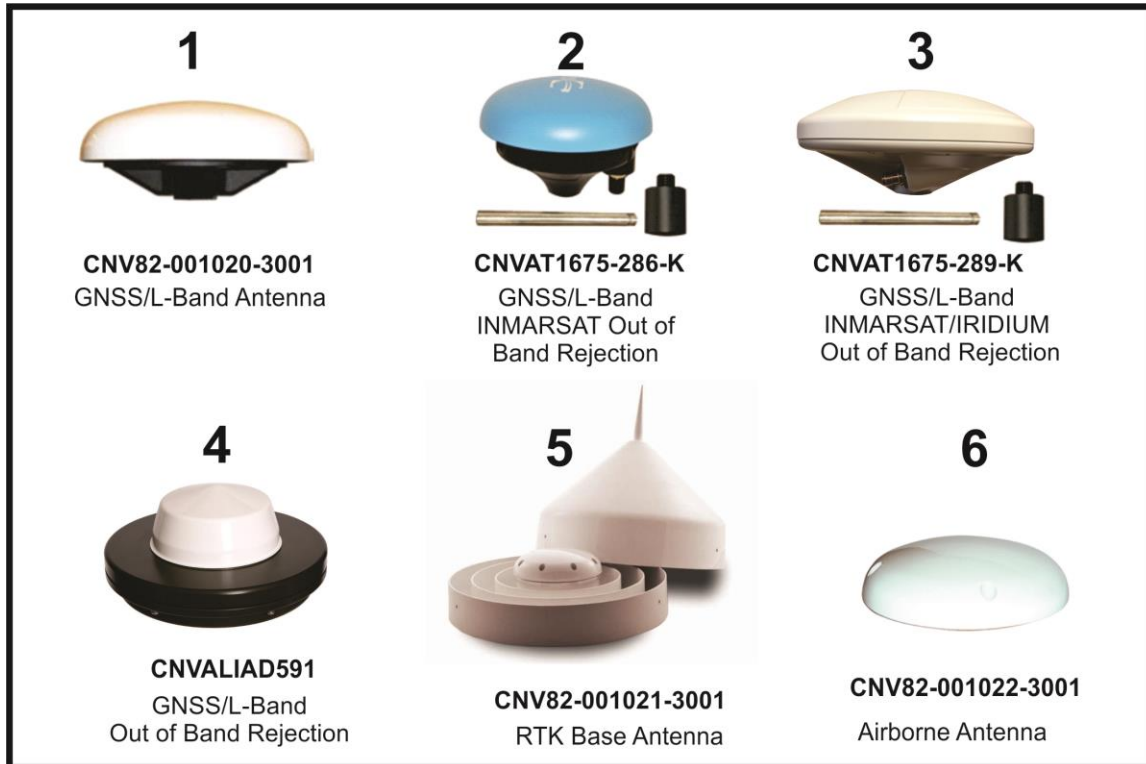


Figure 4: Optional Antennas

Number	Description	Part Number
1	Standard Antenna, TNC	CNV82-001020-3001
2	C-Nav286 Out of Band Rejection Antenna Kit, TNC	CNVAT1675-286-K
3	C-Nav289 GNSS/L-Band/INMARSAT/IRIDIUM Out of Band Rejection	CNVAT1675-289-K
4	AD591 Out of Band Rejection Antenna,	CNVALIAD591
5	RTK Base Antenna, TNC	CNV82-001021-3001
6	Airborne GNSS Antenna, TNC	CNV82-001022-3001

Table 2: Optional Antennas - Part Numbers

## Receiver Software Options

### Software Bundles

**Please note:**

In order to access the C-Nav<sup>®</sup> Corrections Service, users must purchase a Software Bundle, in addition to a C-Nav<sup>®</sup> Corrections Service license. For more information on obtaining a C-Nav<sup>®</sup> license, refer to [Appendix C - C-Nav<sup>®</sup> Corrections Service \(CCS\)](#) (Page 106).

Description	Part Number
GPS L1 / G1 + C-Nav <sup>®</sup> Enabled	CNV97-310041-3101
GPS L1 / L2 / L5, GLONASS G1 / G2 + C-Nav <sup>®</sup> Enabled	CNV97-310041-3103
C-Nav <sup>®</sup> Enabled + BB / BD / BE Output for Seatex DPS systems	CNV97-310041-3311

**Table 3: C-Nav3050<sup>®</sup> Software Bundles - Part Numbers**

## Data Output Rates

### PVT and Raw Data Output Rates

Description	Part Number
PVT and Raw Data, 100 Hz	CNV97-310041-3184
PVT and Raw Data, 50 Hz	CNV97-310041-3183
PVT and Raw Data, 25 Hz	CNV97-310041-3182
PVT and Raw Data, 10 Hz	CNV97-310041-3181
PVT and Raw Data, 5 Hz (Standard)	

**Table 4: Data Output Rates - Part Numbers**

Additional Software Options

<b>Description</b>	<b>Part Number</b>
RTK Option	CNV97-310041-3141
RTK Extend	CNV97-310041-3142
1PPS / Event Option	CNV97-310041-3151
C-Nav® Corrections Service Over-The-Internet (CCS OTI)	CNV97-310041-3109

**Table 5: Additional Software Options - Part Numbers**

## Electrical Power

### Power Cable w/ Filter



Figure 5: DC Power Cable w/ Filter

Description	Part Number
Cable, Power / 1PPS / Event, Positronic 9-Pin Female Unterminated, 10ft, w/ Filter	CNV94-310274-3010

Table 6: DC Power Cable w/ Filter - Part Numbers

### AC Power Supply Kit

An AC Power Supply Kit (CNV82-020007-3001B) is included for those with a requirement to connect via AC power.



Figure 6: AC Power Supply Kit

Description	Part Number
AC Power Supply Kit	CNV82-020007-3001B
Includes the following items:	

Positronic 9-Pin Female Universal AC/DC Power Adapter 110-220 VAC, 12 VDC, 1.50 A	CNV82-020007-3001
AC Power Cord, IEC320-C7, Shotgun Termination, US	CNV4250011-110
AC Power Cord, IEC320-C7, Shotgun Termination, Euro (Not Shown)	CNV4250012-220
AC Power Cord, IEC320-C7, Shotgun Termination, UK (Not Shown)	CNV4250013-240

**Table 7: AC Power Supply Kit - Part Numbers**

### Data and Antenna Optional Cables



**Figure 7: Optional Data Cables**

Description	Part Number
Cable, Positronic 9-pin Male to USB 2.0 Host, 6'	CNV94-310271-3006
Cable, Positronic 9-pin Male to Ethernet RJ45 Device, 6'	CNV94-310265-3006
Cable, Positronic 9-pin Male to DB9S, RS232 / 422 / 1PPS, 6'	CNV94-310260-3006
Cable, Positronic 9-pin Male to USB 2.0 Device, 6'	CNV94-310266-3006

**Table 8: Optional Data Cables - Part Numbers**





Figure 8: Optional Antenna Cable

Description	Part Number
Cable, Antenna, TNC-m to TNC-m, LMR400, 45m	CNVLMR400-150-K
Cable, Antenna, TNC-m to TNC-m, LMR400, 30m	CNVLMR400-100-K
Cable, Antenna, TNC-m to TNC-m, LMR400, 15m	CNVLMR400-50-K

Table 9: Optional Antenna Cable - Part Numbers

## Controllers

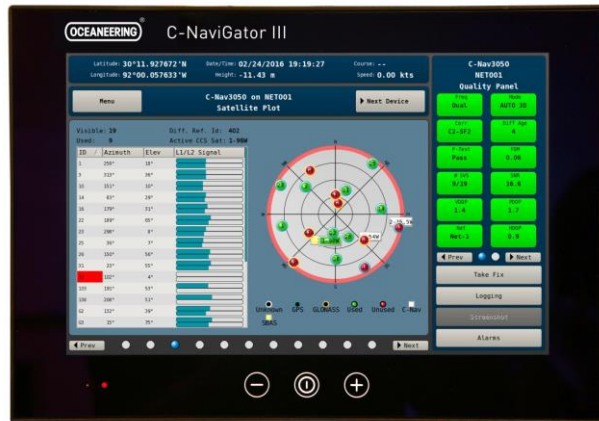


Figure 9: C-NaviGator III Control & Display Unit

Description	Part Number
C-NaviGator III Bundle	BUNDLE_C-NAVIG_III
Includes the following items:	
C-NaviGator III Control & Display Unit, Touchscreen	CNVC-NAVIGATOR-III
AC/DC Power Adapter, C-NaviGator III	CNVHT00255-OPT-A1

C-NaviGator USB Flash Drive	CNV7CNG002-0
AC Power Cord, IEC320-C13, Computer Type, US	CNV4000001-110
AC Power Cord, IEC320-C13, Computer Type, Euro	CNV4000002-220
AC Power Cord, IEC320-C13, Computer Type, UK	CNV4000003-240
C-NaviGator User Manual	CNV5CNG001-XX

**Table 10: C-NaviGator III Bundle - Part Numbers**

**Miscellaneous****Figure 10: Ruggedized Transportation Case**

<b>Description</b>	<b>Part Number</b>
Ruggedized Case, C-Nav3050®, Black, 20" x 14" x 7.7"	CNV3050CASE
Ruggedized Case, C-NaviGator, Black, 20" x 14" x 7.7"	CNV3GTR005-0

**Table 11: Optional Ruggedized Transportation Cases - Part Numbers**

## Section 2 - Introduction

### System Overview



### GNSS Sensor System

The C-Nav3050<sup>®</sup> GNSS receiver delivers superior accuracy to the marine / offshore community. This unique receiver is designed with a robust and long-term performance upgrade path to meet changing needs via software upgrades. Increased functionality does not typically require the costly purchase of additional hardware.

The C-Nav3050<sup>®</sup> GNSS receiver software-enabled features, bundled or purchased individually, cover a wide variety of applications.

The C-Nav3050<sup>®</sup> GNSS receiver is uniquely suited for real-time applications in areas such as surveying, machine control, precise positioning, and construction. The sensor delivers the required millimeter measurement precision and fast update rates at low data latency. Depending on the software bundle, the C-Nav3050<sup>®</sup> GNSS receiver provides flexibility to be configured as a base station or as a rover.

Superior interference suppression (both in-band & out-band), multipath mitigation, and measurement accuracy are only a few of the sensor's technological advances. The C-Nav3050<sup>®</sup> GNSS receiver GNSS engine incorporates several patented innovations advancing the existing GNSS technology to the next generation. The receiver provides near optimal GPS P-code recovery, providing a significant signal to noise ratio advantage over competing technologies, among other benefits.

Depending upon the software options selected, the C-Nav3050<sup>®</sup> GNSS receiver provides, but is not limited to:

- C-Nav<sup>®</sup> Corrections Service (CCS): A worldwide Satellite Based Augmentation System (SBAS) for decimeter level position accuracy. The *Enable C-Nav<sup>®</sup>* software option does not include a CCS Dual Frequency

license, which must be purchased to use the C-Nav<sup>®</sup> Corrections Service. For more information on the C-Nav<sup>®</sup> Corrections Service and obtaining a license, refer to [Appendix C - C-Nav<sup>®</sup> Corrections Service \(CCS\)](#) (Page 106).

- **Signal Reception:** The C-Nav3050<sup>®</sup> GNSS receiver GNSS engine provides exceptional signal tracking performance by incorporating the simultaneous use of GPS (L1, L2, L2C, L5), GLONASS (G1, G2), and SBAS (WAAS, EGNOS, MSAS, GAGAN) signals, through 66 signal channels.
- **RTK:** The C-Nav3050<sup>®</sup> GNSS receiver is designed to integrate easily into Real-Time Kinematic (RTK), field data verification, topographical surveys, and a wide variety of surveying applications. The system resolves ambiguities at startup or on satellite reacquisition typically within two seconds. The C-Nav3050<sup>®</sup> GNSS receiver delivers centimeter level position accuracy via external RTK correction formats (*additional software option required*). The receiver is capable of RTK / Ultra RTK, RTCM 2.3, and RTCM 3.1 (code and phase), Network RTK and CMR / CMR+ DGNSS operating methods. The operating software is also capable of supporting an external radio modem.
- **1PPS / Event:** A pulse is available from the C-Nav3050<sup>®</sup> GNSS receiver at an output rate of once per second. This pulse can be used for a variety of Time / Mark applications where relative timing is required. In addition, the C-Nav3050<sup>®</sup> GNSS receiver accepts an event input pulse to synchronize external incidents requiring precise GNSS time tagging, such as aerial photography. For example, the action of a camera's shutter creates an input pulse to the Event port.
- **PVT and Raw Data Output Rates** from 1 to 100 Hz. 5 Hz maximum is the standard PVT and Raw Data Rate for the C-Nav3050<sup>®</sup> GNSS receiver.

## Applications

The C-Nav3050<sup>®</sup> GNSS receiver meets the needs of a large number of applications. Depending on the purchased software bundle, the applications include, but are not limited to:

### Offshore

- Nautical Station keeping
- Dynamic Positioning
- Dredging and Offshore Construction
- Deep Water Survey

### Machine Control and Vehicle Navigation

- Towed Implement Guidance
- Construction Machine Control - Blade Control and Grading
- Railway, Ship, and Aircraft Precision Tracking
- Port Operations and Container Tracking

### Survey and GIS

- Boundary Survey
- Topographical Surveys in Rough Terrain
- Construction Site Stake-out
- High-Accuracy Data Collection for Post-Processing
- Hydrographic Survey

### Military Applications

- Non-Weaponized Military Positioning Applications
- Unmanned Systems
- Oceanographic Survey and Research

### Specialty Applications

- Aerial - Photogrammetric Survey
- High-Value Asset Location and Tracking
- Positioning in Mining Applications
- Continuously Operating Reference Stations
- Structural Monitoring
- Real-time Positioning Applications
- OEM Integration

## **Features That Apply to All Bundles**

### Output Data Rate

The C-Nav3050<sup>®</sup> GNSS receiver can output raw data at programmable rates from < 1 Hz to 100 Hz and Position Velocity Time (PVT) data at programmable rates from < 1Hz to 100 Hz through the data ports with less than 10 ms latency. Accuracies are maintained as each output is independently calculated based on an actual GNSS position measurement, as opposed to an extrapolation / interpolation between 1 Hz measurements.

***Please note:***

The throughput capacity of the ports is limited by the baud rate and the byte size and number of messages output.

## **Accuracy**

### L1-RTK

L1-RTK supports 1 cm accuracy ( $1\sigma$ ) and is valid for up to a 5 km baseline.

### SBAS

When WAAS, EGNOS, MSAS, or GAGAN (RTCA / DO-229D compliant) SBAS correction signals are used, the system provides < 30 cm 2D position accuracy ( $1\sigma$ ). System accuracy with WAAS, EGNOS, MSAS or GAGAN signals is subject to the quality and update rate of these publicly operated signals. Refer to Related Standards / Publicly Operated SBAS Signals in the fore-matter for contact information regarding the organizations that implement the RTCA / DO-229D standard.

Contact C-Nav<sup>®</sup> Support for information on disabling WAAS, EGNOS, and MSAS in the C-Nav3050<sup>®</sup> GNSS receiver.

### C-Nav<sup>®</sup> Corrections Service (CCS)

The system provides < 5 cm position accuracy when CCS Dual Frequency signals are used.

### RTK

The system provides immediate < 1 cm position accuracy ( $1\sigma$ ) when UltraRTK correction signals are used (baseline, < 40 km,  $\pm 1$  cm +0.5 ppm, *additional software option required*). After RTK correction signals are received, the baseline determines how long it takes to enter RTK mode. A rover close to the base enters RTK mode almost immediately. For longer baselines, it may take a minute or two.

## **NCT Binary Proprietary Data**

The sensor can output proprietary raw data containing information including (but not limited to):

- Satellite Ephemeris (EPHEM1B)
- Satellite Almanac (ALM1B)
- Raw Pseudo-range Measurements (MEAS1B)
- Position, Velocity, & Time (PVT1B)
- Velocity & Heading (PVT1B)
- Signal to Noise (CHNLSTATUS1B)
- Channel Status (CHNLSTATUS1B)
- Measurement Quality (PVT1B and PSEUDORANGESTATSB)
- C-Nav<sup>®</sup> Signal Status (SFSTATUS1B)
- Installed Software Components (MSGVERSION)
- Product Type, Serial No. and Revision No. (MSGPRODUCTINFO)

## **RTCM Data**

The following RTCM 2.3 messages are available for output from the C-Nav3050<sup>®</sup> GNSS receiver:

- RTCM1 and RTCM9: Code GPS Corrections
- RTCM3: Base Position
- RTCM19 and RTCM21: GPS RTK Corrections
- RTCM22: Base Position Extension (Requires RTCM3)
- RTCM22: Extended Reference Station Parameters
- RTCM24: Base Position (Combined RTCM3 and RTCM22)
- RTCM31 and RTCM34: Code GLONASS Corrections

The following RTCM 3.1 messages are available for output from the C-Nav3050<sup>®</sup> GNSS receiver:

- RTCM1001: L1-Only GPS RTK Observables
- RTCM1002: Extended L1-Only GPS RTK Observables
- RTCM1003: L1 and L2 GPS RTK Observables
- RTCM1004: Extended L1 and L2 GPS RTK Observables
- RTCM1005: Stationary RTK Reference Station ARP
- RTCM1006: Stationary RTK Reference Station ARP with Antenna Height



- RTCM1007: Antenna Descriptor (Base Only)
- RTCM1008: Antenna Descriptor and Serial Number (Base Only)
- RTCM1009: L1-Only GLONASS RTK Observables
- RTCM1010: Extended L1-Only GLONASS RTK Observables
- RTCM1011: L1 and L2 GLONASS RTK Observables
- RTCM1012: Extended L1 and L2 GLONASS RTK Observables
- RTCM1019: GPS Ephemerides
- RTCM1020: GLONASS Ephemerides
- RTCM1033: Receiver and Antenna

### **NMEA-0183 Data**

The C-Nav3050<sup>®</sup> GNSS receiver is capable of outputting several standard NMEA-0183 data strings (see [Appendix D - NMEA Data Output Messages](#) (Page 114)) and several proprietary data strings. Each data is headed with \$GN, except for MLA, which is headed with \$GL. All header formats are accepted (i.e. \$GP, \$GL). Proprietary data strings are denoted with a \$PNCT prefix.

#### Standard

- ALM: GPS Almanac Data
- DTM: Datum Being Used
- GBS: GPS Satellite Fault Detection
- GFA: GNSS Fix Accuracy and Integrity
- GGA: GPS Fix Data
- GLL: Geographic Position - Lat / Lon
- GNS: GNSS Fix Data
- GRS: GPS Range Residuals
- GSA: GNSS DOP & Active Satellites
- GST: GNSS Pseudo-range Error Statistics
- GSV: GNSS Satellites In View
- HDT: Heading Degrees True
- MLA: GLONASS Almanac Data
- RMC: Recommended Min. Specific GNSS Data
- ROT: Rate of Turn
- RRE: Range Residual Errors (Not defined in NMEA-0183 Standard version 3.0)
- TTM: Tracked Target Message

- VTG: Course Over Ground & Ground Speed
- ZDA: Time & Date

### Proprietary (prefix \$PNCT)

- DTM: Datum Reference for user-selected reference frame
- GGA: GPS Fix with Field 14, which shows the Beam Selection ID (See [Table 53](#)) and Navigation Mode (See [Table 55](#)).
- GST: GNSS Pseudo-range Error Statistics
- MDE: Marginally Detectable Error
- SET: Solid Earth Tide

## **Unique Features**

The C-Nav3050<sup>®</sup> GNSS receiver has many unique features:

### Performance Upgrade Path

The C-Nav3050<sup>®</sup> GNSS receiver is designed with a robust and long-term performance upgrade path to meet changing needs via software upgrades. Increased functionality does not typically require the purchase of additional hardware. The C-Nav3050<sup>®</sup> GNSS receiver software-enabled features cover a wide variety of applications

### C-Nav<sup>®</sup> Corrections Service (CCS)

The ability to receive C-Nav<sup>®</sup> Corrections Service (CCS) signals is fully integrated within each unit. A single set of corrections can be used globally enabling a user to achieve decimeter level positioning accuracy without the need to deploy a separate base station, thus saving time and capital expenditure. C-Nav<sup>®</sup> position outputs are referenced to the ITRF-2014 datum. Refer to [Appendix C - C-Nav<sup>®</sup> Corrections Service \(CCS\)](#) (Page 106) for more information.

### Over-The-Air C-Nav<sup>®</sup> Licensing

Over-the-Air C-Nav<sup>®</sup> licensing is the easiest way to install a C-Nav<sup>®</sup> license. The installation of a purchased license is accomplished via radio broadcast. Over-the-Air C-Nav<sup>®</sup> Licensing is especially convenient for receivers in remote locations in the field.

### C-Nav<sup>®</sup> Corrections Service Over-The-Internet (CCS OTI)

This is a new option offered for the C-Nav3050<sup>®</sup> GNSS receiver. The C-Nav<sup>®</sup> Corrections Service signals can also be received over the Internet as C-Nav<sup>®</sup> Corrections Service Over-The-Internet (CCS OTI). This feature allows the user to request messages from an independent NTRIP server / caster and can choose between four data delivery rates (1 s, 15 s, 30 s, and 60 s) for maximum ability. Refer to [Appendix C - C-Nav<sup>®</sup> Corrections Service \(CCS\)](#) (Page 106) for more information.

### NCT RTK / UltraRTK

The RTK / UltraRTK algorithm provides fast initialization and the ultra-compact binary data format for RTK / UltraRTK ensures robust data throughput. The C-Nav3050<sup>®</sup> GNSS receiver is capable of outputting or accepting legacy 0x5B (RTK) or 0x5E (UltraRTK) binary formats.

### Positioning Flexibility

The C-Nav3050<sup>®</sup> GNSS receiver is capable of using WAAS, EGNOS, MSAS, and GAGAN (RTCA / DO-229 D compliant) code corrections via two internal Satellite Based Augmentation System (SBAS) channels. The C-Nav3050<sup>®</sup> GNSS receiver automatically configures to use the most suitable correction source available and changes as the survey dictates (this feature can be overridden).

### RTK Extend<sup>™</sup>

RTK Extend enables continuous RTK-level positioning accuracy during radio communication outages by utilizing the global C-Nav<sup>®</sup> Corrections Service (CCS). Traditionally, when an RTK rover loses communication with the base station, it is unable to provide centimeter position updates for more than a few seconds, resulting in user downtime and reduced productivity. With RTK Extend, a C-Nav<sup>®</sup> receiver operating in RTK mode can transition to RTK Extend mode and maintain centimeter level positioning during communication loss for up to 15 minutes. RTK Extend allows more efficient and uninterrupted work, enabling focused concentration on the work rather than the tools.

RTK Extend is a unique patented technique, not available on any other manufacturer's receivers.

### Multi-Format RTK

Contact C-Nav<sup>®</sup> Support for more information on Multi-Format RTK and its applications.

### User-Defined Datum

Users can check the current datum (a reference surface to be used in defining the 3D coordinates of a position) or set a specific datum to be used as the position for all PVT data output. Contact C-Nav<sup>®</sup> Support for more information.

### Heading

The C-Nav3050<sup>®</sup> GNSS receiver heading system consists of two C-Nav3050<sup>®</sup> GNSS receivers connected via either a serial cable or through one of the four ETH Ports (ETH1 through ETH 4). Each receiver's antenna is located on the platform at the maximum possible separation. One of the units is configured as a moving base and computes its position ten times per second (10 Hz) using any available augmentation signal. The moving base outputs position and RTK measurement corrections to the other unit, which is configured as a heading rover. The heading rover computes the heading looking from the base antenna to the rover antenna and outputs the heading and position of both antennae up to a rate of 10 Hz. Applications include construction equipment such as excavators and marine applications such as dredging.

### Coordinated Machines

A C-Nav3050<sup>®</sup> GNSS receiver configured as a moving base is located on a reference platform. A C-Nav3050<sup>®</sup> GNSS receiver configured as a rover is located on one or more additional platforms. All of the C-Nav3050<sup>®</sup> GNSS receiver rovers are connected to the moving base via wireless communication link. The moving base computes its position ten times per second (10 Hz) using any available augmentation signal. The moving base outputs position and RTK measurement corrections to the rovers. The rovers compute the range and bearing to the moving base and output the range and bearing, plus their position, and the position of the moving base, at up to ten times per second (10 Hz). Applications include those requiring the relative positions of two or more moving platforms, such as leader-follower vehicle applications or the relative positions of planes or marine vessels.

### Data Sampling

GPS (L1, L2, L2C, L5), GLONASS (G1, G2), and SBAS (WAAS, EGNOS, MSAS, GAGAN) raw measurement and PVT data is up to 5 Hz in the standard C-Nav<sup>®</sup> GNSS Sensor Kit. Optional upgrades allow 10, 25, 50, and 100 Hz raw measurement and PVT data via high-speed ports for highly dynamic applications.

### Internal Memory

Contact C-Nav<sup>®</sup> Support for information on utilizing the C-Nav3050<sup>®</sup> GNSS receiver internal memory flash drive.

### Ethernet Connection

An Ethernet connection may be setup for the C-Nav3050<sup>®</sup> GNSS receiver. Contact C-Nav<sup>®</sup> Support for instructions on configuring and establishing an Ethernet connection.

### Control of Power Consumption

Power consumption may be immediately reduced on the C-Nav3050<sup>®</sup> GNSS receiver by disabling signals, as necessary, using C-Nav<sup>®</sup> proprietary controller software. Contact C-Nav<sup>®</sup> Support for more information.

### Continuously Operating Reference Station (CORS) Support

When optioned as an RTK Base Station, the C-Nav3050<sup>®</sup> GNSS receiver is capable of computing and outputting RTK message streams in multiple formats and raw satellite measurement data for post-processing simultaneously. All message formats can be output on one of the high-speed USB or Ethernet ports, or messages can be distributed among any of the eight user ports. For IGS or similar permanent Base applications, C-Nav<sup>®</sup> offers a Choke Ring antenna option to significantly reduce multipath errors on signal reception.

### NTRIP Support

The generation of differential GNSS correction data is usually done directly on the GNSS receiver of a reference station, but this data can also be derived from observations obtained by networked reference stations. The combined data stream is then fed into a network computer and made available on the internet. Contact C-Nav<sup>®</sup> Support for more information on NTRIP and the C-Nav3050<sup>®</sup> GNSS receiver.

### GNSS Performance

The C-Nav3050<sup>®</sup> GNSS receiver utilizes the Sapphire GNSS engine, which incorporates several patented innovations. Sapphire's industry leading receiver sensitivity provides more than 50% signal to noise ratio advantage over competing technologies. This results in improved real time positioning, proven through independent tests, when facing various multipath environments.

### Rugged Design

Units have been tested to conform to MIL-STD-810F for low pressure, solar radiation, rain, humidity, salt-fog, sand, and dust. In addition, the unit is IP certified to the IP67 level (compliant only when cables are connected)

The rugged design of the C-Nav3050<sup>®</sup> GNSS receiver system components provide protection against the harsh environment common to areas such as construction sites, offshore vessels, and mines.

## **Antennas**

### Standard



The standard integrated GNSS antenna (NAV82-001020-3001LF) tracks GPS (L1, L2, L2C, L5), GLONASS (G1, G2), C-Nav<sup>®</sup> Corrections Service (L-Band differential corrections), and SBAS (WAAS / EGNOS / MSAS / GAGAN) signals. The compact GNSS antenna has excellent tracking performance and a stable phase center. This antenna is listed in the NOAA GNSS Antenna Calibration tables, as [NAV-ANT3001R](#). See [Appendix B - Antenna Specifications](#) (Page 94), for more information.

### C-Nav286



The C-Nav286 is a GNSS antenna (AT1675-286) housed in a Radome - Thermoplastic enclosure. It has an excellent tracking performance and a stable phase center. It contains a 90 dB out of band rejection filter of the INMARSAT uplink frequencies. It tracks GPS (L1, L2, L2C, L5), GLONASS (G1, G2), C-Nav<sup>®</sup> Corrections (CCS) Service (L-Band differential corrections), and SBAS (WAAS / EGNOS / MSAS / GAGAN) signals. This antenna is listed in the NOAA GNSS Antenna Calibration tables, as [CNVC-NAV286](#). See [Table 28: C-Nav286 Antenna Specification Sheet](#) (Page 97).

### C-Nav289



The C-Nav289 is a GNSS antenna (AT1675-289) housed in an All-polymer enclosure, non-corrosive design to improve corrosion resistance. It has an excellent tracking performance and a stable phase center. It contains a 90 dB out of band rejection filter of the INMARSAT uplink frequencies and has a steeper high end roll-off which significantly reduces interference for Iridium uplink transmission. It tracks GPS (L1, L2, L5), GLONASS (G1, G2), Galileo (E1/E5a/E5b), Beidou (B1, B2), C-Nav<sup>®</sup> Corrections (CCS) Service (L-Band differential corrections), and SBAS (WAAS / EGNOS / MSAS / GAGAN) signals.

## AD591



The AD591 is GNSS antenna (ALIAD591) housed in hard anodized, dichromate, and nickel acetate sealed Aluminum with 4mm thick GRP pressure molded radome. It has >95 dB of out of band rejection of the IMMARSAT up link. . It tracks GPS (L1, L2, L2C, L5), GLONASS (G1, G2), C-Nav® Corrections (CCS) Service (L-Band differential corrections), and SBAS (WAAS / EGNOS / MSAS / GAGAN) signals. See [Table 30: AD591 Antenna Specification Sheet](#) for more information.

## Base



The Base integrated GNSS antenna (PN: NAV82-001021-3001LF) tracks GPS (L1, L2, L2C, L5), GLONASS (G1, G2), C-Nav® Corrections (CCS) Service (L-Band differential corrections), and SBAS (WAAS/EGNOS/MSAS/ GAGAN) signals. The Base GNSS antenna is designed to reduce multipath error to provide better RTK corrections to the rover network. It has excellent tracking performance and a stable phase center. The NGS calibration table for this product is available on the following link: [Antenna Calibration](#). The robust



housing assembly features a standard 5/8" BSW thread to permanently install the antenna. It is certified to 70,000 feet.

### Airborne



The Base integrated GNSS antenna (NAV82-001021-3001LF) tracks GPS (L1, L2, L2C, L5), GLONASS (G1, G2), C-Nav<sup>®</sup> Corrections Service (CCS) (L-Band differential corrections), and SBAS (WAAS / EGNOS / MSAS / GAGAN) signals. The Base GNSS antenna is designed to reduce multipath error to provide better RTK corrections to the rover network. It has excellent tracking performance and a stable phase center. This antenna is listed in the NOAA GNSS Antenna Calibration tables, as [NCT-ANT3001B](#). The robust housing assembly features a standard 5/8" BSW thread to permanently install the antenna. It is certified to 70,000 feet. See [Appendix B - Antenna Specifications](#) (Page 94) for more information.

## Section 3 - Interfacing


This chapter details the C-Nav3050<sup>®</sup> GNSS sensor connectors, cables, LED displays, appropriate sources of electrical power, and how to interface the communication ports.

### Electrical Power

A rear panel 9-pin Positronic male connector provides electrical power to the C-Nav3050<sup>®</sup> GNSS receiver. CNV94-310274-3010 is a 10 ft (3 m) unterminated power cable with filter fitted with a Positronic plug type (connector: FR11FP922LM0/AA; pin: FC422N6/AA), used to connect directly to a DC source. The wiring color code and pin assignments are provided below.



**Figure 11: Unterminated Power Cable With Filter**

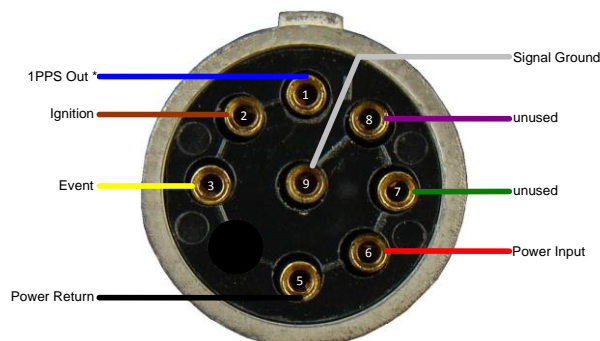

**Figure 12: Unterminated Power Cable Pin-Out**

Color	Signal	Pin No
Blue	1PPS Out *	1
Brown	Ignition	2
Yellow	Event	3
Black	Power Return	5
Red	Power Input (9 to 32VDC, 6W typical)	6
Green	Not Used	7
Violet	Not Used	8
Gray	GND	9

**Table 12: DC Power Cable Pin Assignments**

***Please note:***

- Pin 4 has no connection on this cable.
- \* Note that the 1PPS signal is at TTL level and care must be taken if extending the length of the supplied cable to maintain the integrity of the pulse leading edge.

An AC Power Supply Kit (CNV82-020007-3001LF) complete with AC power cords for 110, 220, and 240 VAC regions is included for those with a requirement to connect via AC power. Replacement 110, 220, and 240 VAC power cords can be purchased from any authorized C-Nav<sup>®</sup> dealer.



**Figure 13: Universal Power Adapter and Power Cord**

Where MED type approved installations are required, the C-Nav3050<sup>®</sup> GNSS receiver must be powered by either the AC/DC power supply kit, or an approved DC to DC power converter.

The following equipment is required to pass the conducted MED type emission criteria:

- Unterminated DC power cable with filter.
- Approved DC to DC power converter. The converter isolates the C-Nav3050<sup>®</sup> GNSS receiver power and chassis grounds.

The GNSS sensor is protected from reverse polarity with an inline diode. It will operate on any DC voltage between 9 and 32 VDC, 6 watts typical.



Voltages less than approximately 6 VDC will turn the unit off. Voltages from approximately 5 VDC to < 7 VDC will create a brown-out. In such a case, power the unit on as follows:


- *Ignition Pin:* Provide power  $\geq 9$  to 32 VDC
- *Front Panel On / Off Switch:* Press the On / Off switch to turn the unit off. Then press and hold the On / Off switch in for more than 2 seconds to turn the unit on.

To set the receiver to power up as soon as power is applied to the DC Input port, use the ignition pin (2) in conjunction with DC power.



Voltages in excess of 34 VDC will damage the unit. The power supply must be well conditioned with surge protection. Vehicular electrical systems, which create voltage spikes in excess of 34 VDC, will benefit from providing power protection during vehicle engine power-up. This can be accomplished through a relay power-on sequence and / or power conditioning (such as a DC to DC converter). Do not connect equipment directly to the vehicles battery without in-line protection.

To turn off the C-Nav3050<sup>®</sup> GNSS receiver properly:

- Press the On / Off switch  on the front panel, or,
- Switch off power to the ignition pin

The C-Nav3050<sup>®</sup> GNSS receiver will not shut down properly unless the external power source is correctly connected to the C-Nav3050<sup>®</sup> GNSS receiver as displayed in [Figure 14](#). The connection of the ignition wire directly to the power wire is not recommended, and may result in the corruption of data at shutdown of the C-Nav3050<sup>®</sup> GNSS receiver.



Do not unplug the Positronic end of the supplied unterminated cable before switching off power to the ignition pin. The receiver may not shutdown properly.

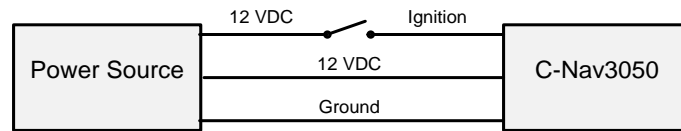


Figure 14: Proper External Power Source Setup

## Communication Ports

The C-Nav3050<sup>®</sup> GNSS receiver provides two 9-pin female Positronic connector communication ports labeled **COM1 - LAN** and **COM2 - USB** located at the rear of the sensor, as shown in [Figure 15](#) below.



Figure 15: C-Nav3050<sup>®</sup> GNSS Receiver Rear View

**Please note:**

The C-Nav3050<sup>®</sup> GNSS receiver is configured as a DCE device. Laptop and desktop computers are configured as DTE devices. If a cable extension is required, a straight-through cable will provide proper connectivity.

There are two supplied interface data cables:

- Positronic 9-Pin Male to Ethernet (LAN) / DB9S (RS-232 / 1PPS) (CNV94-310272-3006): constructed as described in [Figure 16](#).
- Positronic 9-Pin Male to USB Device / DB9S (RS-232 / RS-422) Y-cable (CNV94-310273-3006): constructed as described in [Figure 17](#).

The part number for the Positronic plug on both data cables is FR11MP922LM0/AA, pin type: MC422N/AA.

## COM1 - LAN & Ethernet / 1PPS / DB9S Y-Cable

- Conforms to the EIA RS-232 standard with data rates from 9.6 to 115.2 kbps max
- Conforms to the IEEE 802.3 Ethernet standard with data rates from 10 to 100 Mbps


The **COM1 - LAN** connector pin-outs relative to the supplied Ethernet (LAN) / DB9S (RS-232 / 1PPS) Y-cable (CNV94-310272-3006) is described below:

**Please note:**

- **COM1 - LAN** is the only LAN compliant port
- Used for CCS OTI functions.

Signal	Ethernet Pins	Positronic Pins	DB9S Pins
RX-	6	1	
RX+	3	2	
1PPS		3	8
COM1 RXD		4	3
COM1 TXD		5	2
TX+	1	6	
TX-	2	7	
		8	
GND		9	5

**Table 13: Ethernet (LAN) / RS-232 / 1PPS Y-Cable Pin Assignment**

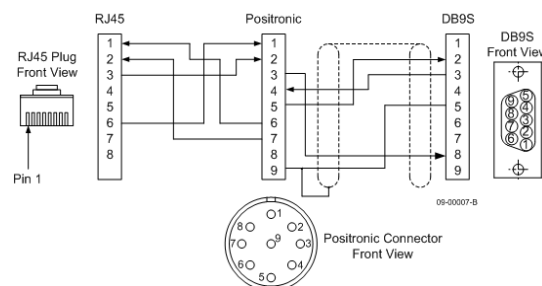

**Figure 16: Ethernet (LAN) / RS-232 / 1PPS Y-Cable Pin Assignment**

## COM2 - USB & USB / DB9S Y-Cable

- Conforms to the EIA RS-232 / RS-422 standard with data rates from 9.6 to 115.2 kbps max
- USB 2.0 compliant with 12 Mbps maximum data rate.


The **COM2 - USB** connector pin-outs relative to the supplied USB Device / DB9S (RS-232 / RS-422) Y-cable (CNV94-310273-3006) are described below:

**Please note:**

**COM2 - USB** is the only USB compliant port.

Signal	USB Pins	Positronic Pins	DB9S Pins
USB Power	1	1	
		2	
COM2 RXD+		3	8
COM2 RXD-		4	3
COM2 TXD-		5	2
COM2 TXD+		6	7
USB D+	3	7	
USB D-	2	8	
GND/Shield	4	9	5

**Table 14: Optional USB Device / RS-232 / RS-422 Y-Cable Pin Assignment**

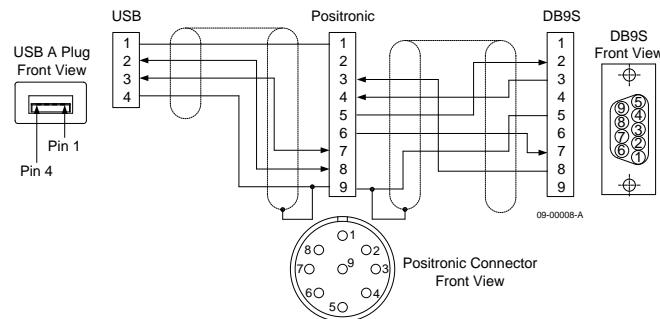

**Figure 17: Optional USB Device / RS-232 / RS-422 Y-Cable Pin Assignment**

## RS-232 / RS-422 Dual-data Adapter

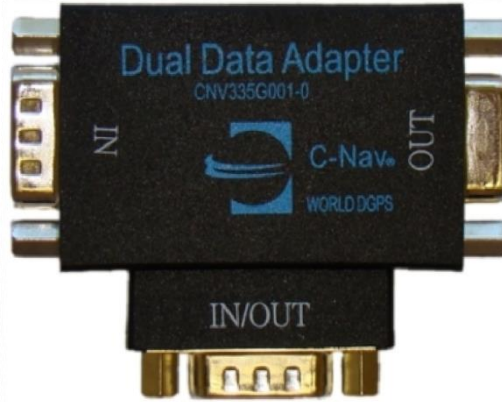


Figure 18: RS-232 / RS-422 Dual-data Adapter

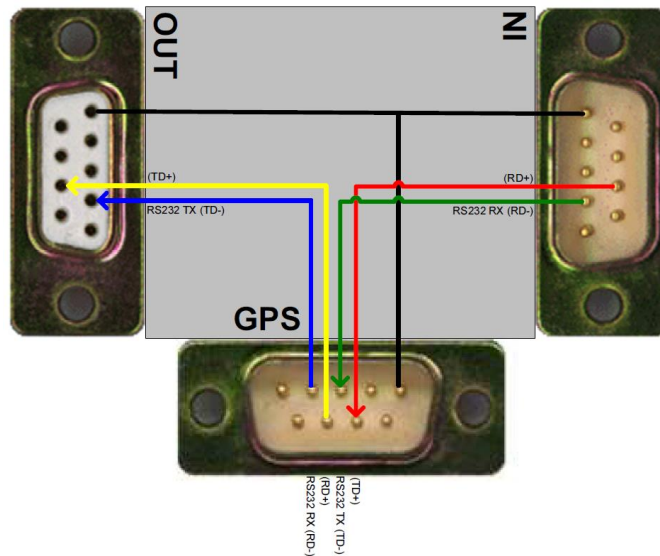


Figure 19: RS-232 / RS-422 Dual-data Adapter Pin Assignment

## Accessories

### Optional Data Cables

The optional interface data cables support USB 2.0 Device and Host, Ethernet, RS-232 and RS-422.





Figure 20: Optional Data Cables

1	Positronic 9-Pin Male to USB 2.0 Host Receptacle, 6 ft	CNV94-310271-3006
2	Positronic 9-Pin Male to Ethernet RJ45 Plug, 6 ft	CNV94-310265-3006
3	Positronic 9-Pin Male to DB9S (RS-232 / RS-422 / 1PPS) Data Cable, 6 ft.	CNV94-310260-3006
4	Positronic 9-Pin Male to USB 2.0 Device Plug, 6 ft	CNV94-310266-3006

Table 15: Optional Data Cables

**Please note:**

Refer back to [Section 1 - Getting Started](#) (Page 23) for a complete list of supplied and optional equipment.

USB Host Cable


P/N CNV94-310271-3006 is an optional 6 ft (1.83 m) data cable fitted with a Positronic plug type and a USB A receptacle type, used to connect as Host directly to a USB 2.0 connector. The pin assignments are provided below.

**Please note:**

The **COM2 - USB** is the only USB compliant port.

USB Pins	Signal	Positronic Pins
1	USB PWR	1
2	USB D-	8
3	USB D+	7
4	GND/SHIELD	9

**Table 16: Optional USB Host Cable Pin Assignment**

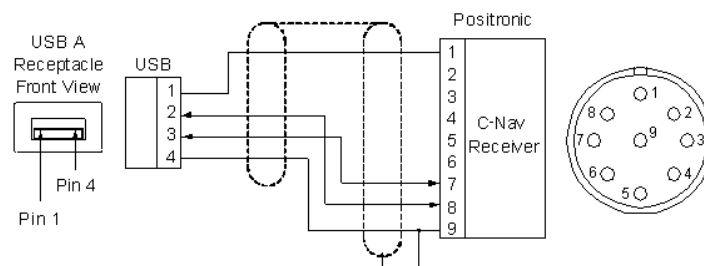


**Figure 21: Optional USB Host Cable Pin Assignment**

## USB Device Cable

P/N CNV94-310266-3006 is an optional 6ft (1.83m) data cable fitted with a Positronic plug type and a USB A plug type, used to connect as Device directly to a USB 2.0 connector. The pin assignments are provided below.

USB Pins	Signal	Positronic Pins
1	VCC	1
2	Data-	8
3	Data+	7
4	GND	9

**Table 17: USB Device Cable Pin Assignment**

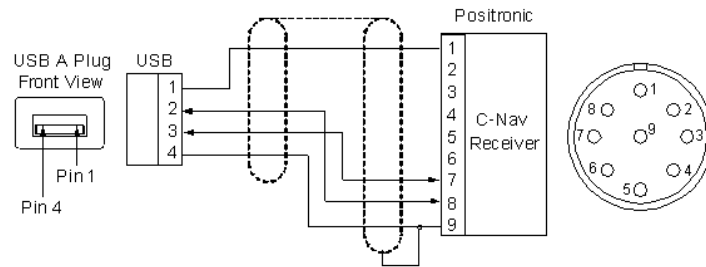

**Figure 22: USB Device Cable Pin Assignment**

### Ethernet Cable


P/N CNV94-310265-3006 is an optional 6 ft (1.83 m) data cable fitted with a Positronic plug type and an Ethernet RJ45 plug type, used to connect directly to an Ethernet connector. The pin assignments are provided below.

***Please note:***

**COM1 - LAN** is the only Ethernet (LAN) compliant port.

Ethernet Pins	Signal	Positronic Pins
1	TX+	6
2	TX-	7
3	RX+	1
6	RX-	8

**Table 19: Optional Ethernet Cable Pin Assignment**

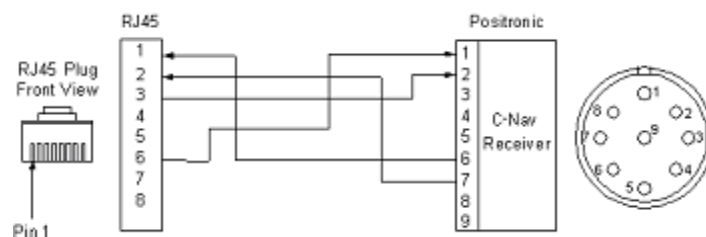

**Figure 23: Optional Ethernet Cable Pin Assignment**

## DB9S Cable (Connected to COM1)

P/N CNV94-310260-3006 is an optional 6 ft (1.83 m) data cable fitted with a Positronic plug type and a DB9S connector, used to connect directly to a DB9P serial port. The DB9S cable can be used to connect to either **COM1 – LAN** or **COM2 – USB**. The pin assignments are provided below.

**Please note:**

**COM1 – LAN** conforms to EIA RS-232 standard only

Positronic Pins	Signal Nomenclature [DCE w/respect to DB9]	DB9S Pins
1	Not connected	-
2	Not connected	-
3	1PPS Out	8
4	RXD RS-232 <b>COM1</b>	3
5	TXD RS-232 <b>COM1</b>	2
6	Not connected	7
7	Not connected	-
8	Not connected	-
9	GND	5

Table 20: COM1 Serial Cable Pin-Outs

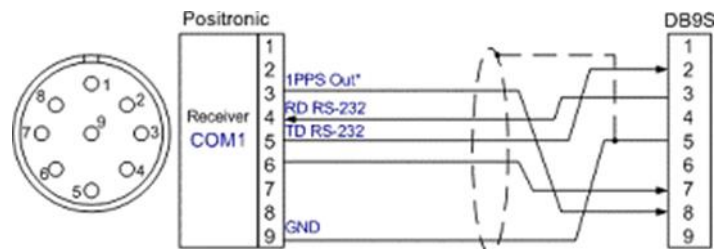


Figure 24: COM1 Serial Cable Pin Assignment

## DB9S Cable (Connected to COM2)

P/N CNV94-310260-3006 is an optional 6 ft (1.83 m) data cable fitted with a Positronic plug type and a DB9S connector, used to connect directly to a DB9P serial port. The DB9S cable can be used to connect to either **COM1 – LAN** or **COM2 – USB**. The pin assignments are provided below.

**Please note:**

**COM2 – USB** conforms to both EIA RS-232 / RS-422 standards

Positronic Pins	Signal Nomenclature [DCE w/respect to DB9]	DB9S Pins
1	Not connected	-
2	Not connected	-
3	RXD+ RS-422	8
4	RXD RS-232 <b>COM2</b> / RXD- RS-422	3
5	TXD RS-232 <b>COM2</b> / TXD- RS-422	2
6	TXD+ RS-422	7
7	Not connected	-
8	Not connected	-
9	GND	5

Table 21: COM2 Serial Cable Pin-Outs

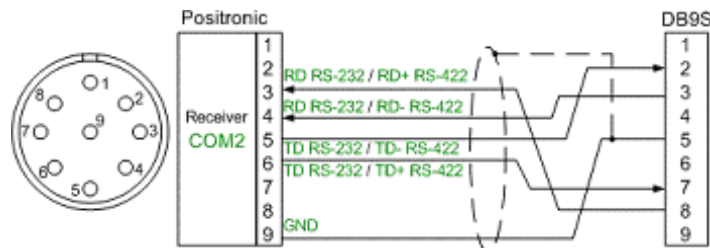


Figure 25: COM2 Serial Cable Pin Assignment

### Event

The C-Nav3050<sup>®</sup> GNSS receiver accepts an event input pulse to synchronize external incidents requiring precise GNSS time tagging, such as aerial photography. For example, the action of a camera's shutter creates an input pulse to the Event port. The C-Nav3050<sup>®</sup> GNSS receiver outputs position and time information relative to each event received. The Event is input on Pin 3 of the 9-pin male Positronic connector power port on the rear of the sensor.

#### Specifications:

- Selectable Input Voltage, 5 V or 12 V
- Minimum pulse width, 100 nS
- Rising or Falling edge Synchronization

#### **Please note:**

Detailed specifications of the Event Input, cable wiring, and configuration may be found in [Error! Reference source not found.](#) (Page [Error! Bookmark not defined.](#)).

### 1PPS

A pulse is available from the C-Nav3050<sup>®</sup> GNSS receiver via either **COM1** or the **POWER** connector at an output rate of once per second. This pulse can be used for a variety of Time / Mark applications where relative timing is required. Additional software options required.

#### Specifications:

- 25 ns relative accuracy
- Better than 100 ns absolute accuracy
- 5 V TTL Logic level output
- 1PPS Output Impedance > 50 Ohms
- Pulse width, default 1 mS
- Pulse delay, default 0 mS
- Rising or Falling Edge Synchronization

#### 1PPS Adapter

- For use on **COM1** with either the Positronic 9-Pin Male to Ethernet (LAN) / DB9S (RS-232 / 1PPS) (CNV94-310272-3006) Data Cable, or Positronic 9-Pin Male to DB9S (RS-232 / RS-422 / 1PPS) Data Cable (CNV94-310260-3006):



Figure 26: 1PPS Adapter


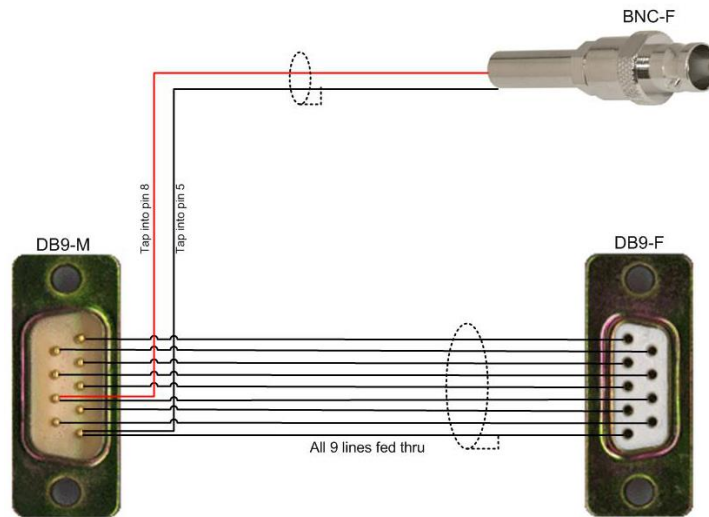


Figure 27: 1PPS Adapter Pin Assignment

## Indicator Panel

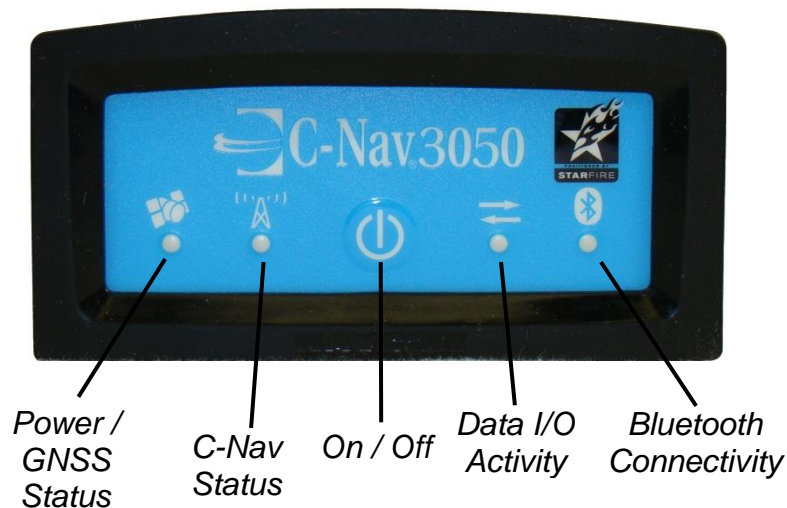

**Figure 28: C-Nav3050® GNSS Receiver Indicator Panel**

The indicator panel provides a quick status view of the GNSS navigation / operating mode, C-Nav® signal strength, the On / Off (I/O) switch, data I/O and logging, and Bluetooth connectivity, respectively.

To power the unit on or off, depress the I/O switch for more than two seconds. All LEDs illuminate for a period of 3-5 seconds during power-up of the GNSS sensor.

***Please note:***

Refer to [Electrical Power](#) (Page 50) at the beginning of this Section for details on powering off the unit.

## GNSS LEDs

When memory buffers allocated for data logging are filled with data waiting to write to an SD or USB drive, data loss may occur. When this event is detected and no data loss occurs, the Data I/O LED will turn on and off in red at 1 Hz rate. The red LED blinking will last for five seconds from the last time this event is detected. For example, when memory buffers are filled up once, the red LED blinking will continue for five seconds, and then stop. If all memory buffers are filled up for ten minutes and some buffers are freed, the red LED blinking will



start when all memory buffers are full at the beginning, and continue for ten minutes and five seconds, and then stop. When data logging is started, every five minutes statistical data such as data loss and data loss ratio will be computed. When data loss is detected, the red LED will be on in solid mode. When a data loss ratio greater than 0.01% occurs, a panic message will be output, i.e., when USB or SD logging data loss is > 0.02%.


Icon	Indicator	Status	Description
	<i>Power / GNSS</i>	<b>Off</b>	Power off
		<b>Red</b>	Power on but not tracking
		<b>Green Blinking</b>	Acquiring or tracking GNSS satellites (no position fix yet)
		<b>Green</b>	Using GNSS satellites (position fix)

Table 22: GNSS LED Indication

## C-Nav<sup>®</sup> Link LEDs


Icon	Indicator	Status	Description
	<i>C-Nav Link</i>	<b>Red</b>	No C-Nav <sup>®</sup> signal
		<b>Red Blinking</b>	No C-Nav <sup>®</sup> License (or expired)
		<b>Green Blinking</b>	Acquiring C-Nav <sup>®</sup> signal
		<b>Green</b>	Tracking C-Nav <sup>®</sup> signal

Table 23: C-Nav<sup>®</sup> Link LED Indication

## Data I/O Active LEDs

 
Icon	Indicator	Status	Description
	<i>Data</i>	Off	No Data Output
		Green Blinking	Data I/O Activity
		Green	Data logging to internal SD card or external flash drive active
		Red Blinking	Data logging – memory low
		Red	Data logging – data loss

Table 24: Data I/O Active LED Indication (serial connections only)

## Bluetooth Connectivity LEDs


Icon	Indicator	Status	Description
	<i>Bluetooth</i>	Off	Bluetooth off
		Blue Blinking	Bluetooth on, no connection
		Blue	Bluetooth connected

Table 25: Bluetooth Connectivity LED Indication

## Section 4 - Installation

This chapter provides guidance on hardware installation for optimum performance.

Prior to commencing any installation, discuss proposed mounting locations / methods and cable routes with those involved to ensure all parties are aware of the work to be done and the risks involved.



Always wear appropriate protective equipment, including a certified fall arrestor harness and hardhat when working at heights to prevent injury to personnel, or death. Prior to commencing any work on the mast, ensure that all radar systems are switched off and isolated.

### GNSS Antenna

The 5/8-inch BSW threaded antenna mount has a depth of 16 mm (0.63 inch).



Do not loosen or remove the eight Phillips screws on the base of the antenna for mounting purposes. This will VOID the warranty and compromise the environmental seal of the antenna, leading to internal damage.

Antenna placement is critical to good system performance. It is necessary to mount the antenna as high on the mast as possible in order to avoid shading by surrounding structures.



Figure 29: Standard GNSS Antenna

### Antenna Location

- Locate the antenna where it has a clear view of the sky, to an elevation angle of 7° if possible. Obstructions below 15° elevation generally are not a problem, though this is dependent on satellite availability for the local region.
- Avoid placing the antenna where more than 90° azimuth of the sky is obstructed. When more than 90° of azimuth is shaded, it is often still possible for the receiver to navigate; however, poor satellite geometry (due to satellite shading) will provide poor positioning results. Even 10° of shading can have a negative effect on performance, though this generally is not the case.
- Avoid placing the antenna on or near metal or other electrically reflective surfaces.
- Do not paint the antenna enclosure with a metallic-based paint.
- Secure the antenna to the mast firmly to avoid wind and vibration which can affect the performance of the C-Nav3050<sup>®</sup> GNSS receiver system.
- Avoid placing the antenna near electrical motors (elevator, air conditioner, compressor, etc.) or other sources of interference such as radar systems, satcom domes, HF antennas or whip antennas.
- Do not place the antenna too close to other active antennas. The wavelength of L5 is 0.255 m and G1 is 0.187 m. The minimum acceptable separation between antennas is 1 m (39 in), which provides 5.9 dB of isolation. For 10 dB of isolation, separate the GNSS antennas by 2.55 m, and for 13 dB of isolation (recommended) separate the antennas by 5.1 m.
- Active antennas (those with LNAs or amplifiers) create an electrical field around the antenna. These radiated emissions can interfere with other nearby antennas. Multiple GNSS antennas in close proximity to each other can create multipath and oscillations between the antennas. These add to position error or the inability to process the satellite signals.
- Most antennas have better gain when the satellite is high in elevation. Expect tracking performance to fade as the satellite lowers in elevation. It is not unusual to see 10 dB difference in antenna gain (which translates into signal strength) throughout the entire elevation tracking path.
- Use satellite prediction software with a recent satellite almanac to assess the impact on satellite visibility at your location. An L-Band Communication Satellite Locator tool is available on the C-Nav<sup>®</sup> Support website and Product DVD to aid in determining potential obstructions to the C-Nav<sup>®</sup> Signal: [Geostationary Satellite Calculator](#)

- A clear line of sight between the antenna and the local INMARSAT satellite is required to track the C-Nav<sup>®</sup> Corrections Service (CCS) signal. INMARSAT satellites are geo-synchronized 35,786 kms above the Equator.

### Antenna Mounting Pole

Included with the C-Nav3050<sup>®</sup> GNSS receiver is a 1 ft Antenna Mounting Pole (P/N WES534610). See [Figure 30](#) below.



Figure 30: Antenna Mounting Poles

### Antenna Mounting Pole Adaptor

The antenna is fitted with a 5/8" BSW threaded mount with a depth of 16 mm (0.63").

The antenna mounting pole adaptor converts:

- From: 5/8" BSW (depth of 14 mm [0.55"])
- To: 1 1/4" UNS-2B (depth of 32 mm [1 1/4"])

C-Nav<sup>®</sup> recommends that the supplied mounting adaptor hardware (P/N 3250005-0) be used in conjunction with the supplied antenna-mounting pole (P/N WES534610) as the primary means of mounting.

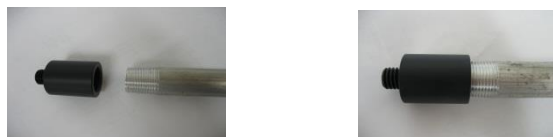


Figure 31: Antenna Mounting Pole and Adaptor



Figure 32: Antenna, Adaptor and Mounting Pole

## Antenna Installation

1. Once the antenna location has been determined based on the aforementioned criteria, mount the antenna onto an antenna-mounting pole via the antenna mounting pole adaptor. This should be done on deck prior to climbing the mast as mounting the antenna aloft poses potential risks to personnel and equipment due to possible dropped object hazards.
2. Install the antenna with an antenna-mounting pole in the predetermined location. The pipe can either be welded to the mast for a more permanent installation, or secured using stainless steel hose clamps.
3. Use a level to ensure that the antenna is mounted vertically.

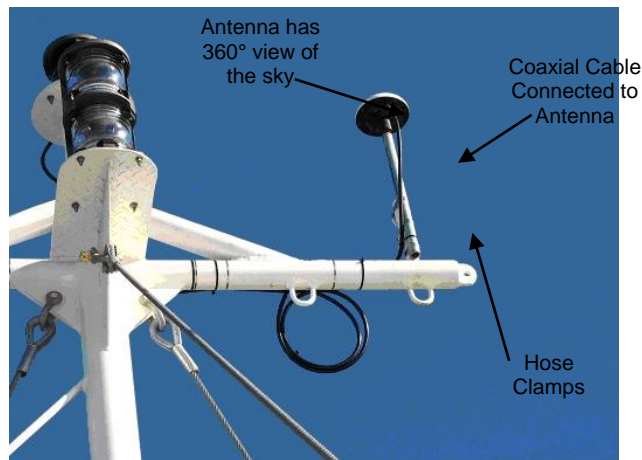


Figure 33: C-Nav3050<sup>®</sup> GNSS Receiver Antenna Mast Installation

## Coaxial Cable

Proper installation of coaxial cables is important to ensure successful communication between the antenna and the GNSS sensor.

The connector used on the C-Nav3050<sup>®</sup> GNSS receiver is a TNC female, labeled **ANT** on the rear panel of the sensor as shown in [Figure 15](#).



The GNSS antenna connector provides  $+5\text{ V} \pm 0.5\text{ V}$  at 100 mA. Do not disconnect the antenna when the GNSS unit is powered on.

## Cable Route

When choosing a cable route for coaxial cable, consider the following:

- Avoid running coaxial cable across, or parallel to power cables and high power RF cables.
- Ensure that the cable route is free of sharp edges or places where the cable could become pinched, kinked, sliced or damaged in any way.
- Determine the manufacturer's specifications for the coaxial cable in use. This should include: impedance, diameter, attenuation in dB / 100 ft and dB / 100 m at 1.575 GHz, velocity of propagation and the minimum bend radius of the cable.
- Ensure the cable does not exceed the recommended minimum bend radius suggested by the manufacturer.
- Ensure there is sufficient space at the cable entry point to the bulkhead as to not damage the connector during installation.
- Measure the length of the cable route and refer to [Table 26](#) for acceptable cable lengths in relation to attenuation loss at the frequencies in use. The cable length between the antenna and C-Nav3050<sup>®</sup> GNSS receiver should not exceed 7 dB loss at 1.575 GHz for optimum performance, though the system may tolerate up to 10 dB of cable loss with minimal performance. Lower elevation satellite tracking suffers the most with more than 7 dB insertion loss.
- In-line amplifiers suitable for all GNSS frequencies may be used to increase the length of the antenna cable, but care should be exercised that tracking performance is not degraded due to multiple connections, noise from the amplifier, and possible ingress of moisture and dust to the in-line amplifier. In-line amplifier or splitter devices must pass DC power from the receiver to the antenna, or source the appropriate voltage and current to the antenna (see [Appendix B - Antenna Specifications](#) (Page 94)). In-line amplifiers may also over-saturate the receiver front-end if improperly used. Contact C-Nav<sup>®</sup> Support ([cnavsupport@oceanering.com](mailto:cnavsupport@oceanering.com)) for more information on available in-line amplifier solutions.

## Coaxial Cable Installation

1. Prior to connecting the coaxial antenna cable to the antenna, ensure that all connections are free of dirt and other debris. Apply silicone grease to the connector threads and wipe off any excess, ensure not to get any lubricant on the contact. Connect the coaxial cable and hand-tighten firmly. Wrap the connection with self-amalgamating tape or another weather sealant such as Coax-seal<sup>®</sup> to prevent water ingress.

2. Slacken the coaxial cable and tape firmly to the antenna-mounting pole. This will prevent any undue strain on the cable connector and antenna.
3. With the cable connected to the antenna, run the cable down the mast, securing with zip ties every two or three feet. Carefully lay the cable along the chosen route to further detect any potential kinks, bends or spots where the cable may become damaged.
4. Secure the cable along the cable route with tape or zip ties and place a label at the GNSS sensor end of the cable for identification purposes.
5. Connect the coaxial cable to the female TNC connector on the GNSS receiver labeled **ANT** (See [Figure 15](#)). Ensure that any slack in the cable is neatly stowed and that the minimum bend radius is not exceeded during this process.

Cable Type	Atten. (dB) per 100 Ft.	Cable Length in Feet	Loss in dB	Atten. (dB) per 100 m	Cable Length in Meters	Loss in dB
RG-58C	19.605	36.00	7.06	64.32	11.00	7.08
RG-142	16.494	43.00	7.09	54.12	13.00	7.04
RG-213	9.564	74.00	7.08	31.38	22.50	7.06
RG-223	17.224	41.00	7.06	56.51	12.50	7.06
LMR600	3.407	207.00	7.05	11.18	63.00	7.04
LMR400	5.262	133.00	7.00	17.26	41.00	7.08
LMR240	10.127	70.00	7.09	33.23	21.00	6.98
LMR195	14.902	47.00	7.00	48.89	14.00	6.85

Table 26: Acceptable Coaxial Cable Lengths

## Lightning Protection



Where the GNSS antenna is exposed to sources of electromagnetic discharge such as lightning, install a properly grounded in-line electrical surge suppressor between the GNSS receiver and antenna. Install protective devices in compliance with local regulatory codes and practices. Protective devices must pass DC power from the receiver to the antenna. Contact C-Nav<sup>®</sup>



Support for more information on available lightning protection solutions.

### GNSS Sensor

Mount the C-Nav3050<sup>®</sup> GNSS receiver to a flat surface. Shock isolators suitable for 0.50 kg (1.1 lbs) may be necessary for environments with high vibration, i.e. Earth moving equipment or aircraft installation.

The C-Nav3050<sup>®</sup> GNSS receiver can also be installed in a backpack for mobile surveying applications.

Do not place the sensor in a confined space or where it may be exposed to excessive heat, moisture, or humidity.

Technical specifications, compass safe distance and block diagrams for the C-Nav3050<sup>®</sup> GNSS receiver GNSS sensor are located in [Appendix A - GNSS Sensor Specifications \(Page 83\)](#).



There are no user-serviceable parts inside the C-Nav3050<sup>®</sup> GNSS receiver. Removing the screws that secure the front and rear end plates will void the equipment warranty.

### Communication Port Connectivity

There is no default control port or data port on the receiver. **COM1 - LAN** is the only Ethernet (LAN) compliant port. **COM2 - USB** is the only USB compliant port.

[Figure 34](#) shows a common configuration with the control device connected to **COM1 - LAN** and an auxiliary device connected to **COM2 - USB** for data logging.

Some devices may require an additional adapter. The interface data cables support USB 2.0, Ethernet, and RS-232 and RS-422. The receiver is configured as a DCE device.



**Figure 34: Communication Port Connections**

## Basics of RTK Surveying

RTK (Real-Time Kinematic) is a GNSS system that yields very accurate 3D position fixes immediately in real-time.

A reference station (base station) transmits its GNSS position to roving receivers as the base receiver generates them. The roving receivers use the reference station readings to differentially correct their own positions. Accuracies of a few centimeters in all three dimensions are possible. RTK requires multi-frequency GNSS receivers and high speed radio modems.

Proper setup of a reference station minimizes GNSS errors in the rover. The reference GNSS sensor is set up at a known surveyed location. With this position locked in, it transmits its code, clock, and reference station coordinate information to the roving sensor(s). The roving sensor(s) uses this information to correct each GNSS measurement it receives.

The C-Nav3050® GNSS receiver, when configured as a reference station, can transmit corrections to any number of roving receivers capable of picking up the radio signal and decoding one of these correction formats (NCT, RTCM 2.3, RTCM 3.1, CMR, and CMR+). The signal can be received in less than ideal environments, though some data loss may occur. Setup of the reference station

sensor above the roving sensors is recommended to enable transmission to all rovers in all directions with minimal obstruction. High frequency radio signals generally travel a shorter distance than lower frequency signals, and do not penetrate obstructions as well over distance. [Figure 35](#) and [Figure 36](#) illustrate proper and improper RTK reference station installation.

***Please note:***

SF-2040 receivers are used in the examples below. The setup guidance also applies to the C-Nav3050<sup>®</sup> GNSS receiver.



**Figure 35: RTK Setup - Good Line of Sight**



**Figure 36: RTK Setup - Poor Line of Sight**

## Section 5 - Configuration

The C-Nav3050® GNSS receiver has a rich interface and detailed control language, allowing each unit to be individually programmed to a specific application.

There are essentially four methods available to configure and control the C-Nav3050® GNSS receiver:

- **C-NaviGator III Control and Display Unit** - The C-NaviGator III Touchscreen Control and Display unit allows users to monitor real-time system and position quality information. Includes: multiple NMEA inputs and selectable outputs, six (four RS-232 and two RS-422) serial, one Ethernet and two USB ports, on-screen help menu, and an intuitive and easy to use interface. Contact C-Nav® Support ([cnavsupport@oceanengineering.com](mailto:cnavsupport@oceanengineering.com)) or refer to the included C-Nav® Product DVD for product brochures and information.
- **Oceanengineering® C-Monitor® QA/QC software** - C-Monitor® QA/QC software is a Windows application for monitoring and evaluating real-time DGNSS QA / QC, precise point positioning information and supports the observation and analysis of one or more differential GNSS systems. Contact C-Nav® Support or refer to the included C-Nav Product DVD for product brochures and information.
- **C-Setup** - C-Setup is a free Windows utility for control of C-Nav® DGNSS systems. C-Setup is available for download from the C-Nav® Support website (<https://www.oceanengineering.com/positioning-solutions/customer-access-and-resources/>) or by contacting C-Nav® Support.
- **Web Interface** - The web interface for the C-Nav3050® GNSS receiver allows the user to view the receiver's performance and configure the receiver with a web browser (Chrome, Firefox, Safari, or Internet Explorer). The web interface offers a sub-set of the available functions in C-Setup, C-Monitor® QA/QC software, or the C-NaviGator III CDU. The functions that are not visually present in the web interface can be accessed through a series of ASCII commands using the Input Terminal page. The web interface can be accessed on receiver firmware versions 3.3.x or later.

There is no default control port on the receiver. When any port is connected to control software, such as C-Monitor® QA/QC software, that port then becomes the control port.

### COM1 - LAN

- Configuration - Control or Data Port
- Rate - RS-232: 9.6 to 115.2 kbps; Ethernet: 10 to 100 Mbps

These five ports (COM1, ETH1, ETH2, ETH3, and ETH4) normally used to input and output proprietary messages used for navigation and receiver setup. It is also the only port that can be used to receive NTRIP or CCS OTI through the RJ-45 Ethernet plug on the **COM1 – LAN** cable. This section describes the default messages needed to best initiate surveying with minimal effort.

The user has full control over the utilized message types and their associated rates via C-Nav<sup>®</sup> proprietary software.

### COM2 - USB

- Configuration - Control or Data Port
- Rate - RS-232 / RS-422: 9.6 to 115.2 kbps USB 2.0: 12 Mbps

These ports are normally used to output data to other devices or machines that can make immediate use of the precise positioning data available from the C-Nav3050<sup>®</sup> GNSS receiver. The data port outputs NCT Binary Messages and NMEA Messages, and when applying external DGNSS corrections, also serves as the DGNSS correction input port.

### Bluetooth Virtual COM Port

- Configuration - Control or Data Port
- Rate - 230.4 kbps

The PC's virtual COM port is used to input and output proprietary messages used for navigation and receiver setup. Contact C-Nav<sup>®</sup> Support for more information on using the C-Nav3050<sup>®</sup> GNSS receiver Bluetooth functionality.

## **Output Messages**

### NCT Binary Output Message Descriptions:

- ALM1B (Packed Almanac): Data corresponding to each satellite in the GPS constellation, including GPS Week number of collected almanac, GPS Time of week [in seconds] of collected almanac, almanac reference week, almanac reference time, almanac source, almanac health, pages 1-

- 25, and sub-frames 4 and 5. Packed almanac data for 32 GPS or 24 GLONASS satellites.
- CHNLSTATUS1B (Channel Status): Receiver channel status information containing GNSS engine status, number of satellites viewed / tracked, PDOP, tracked satellite identity, satellite elevation and azimuth, C/No for tracked signals and correction age for each satellite.
  - EPHEM1B (Packed Ephemeris): Individual satellite tracking information including GPS Week number of collected ephemeris, GPS Time of week [in seconds] of collected ephemeris, IODC, and sub-frame 1, 2, and 3 data. Packed ephemeris data for 32 GPS or 24 GLONASS satellites.
  - MEAS1B (Raw Measurement Data): Raw Measurement Data Block containing Raw measurements from satellites so measurements can be post-processed to achieve precise point positions, the GPS Week, GPS Time of Week, Time Slew Indicator, Status, Channel Status, CA Pseudo-range, L1 Phase, P1-CA Pseudo-range, P2-CA Pseudo-range, L2 Phase, GPS L5, GLONASS G1 and G1 Code and Phase, and SBAS Code and Phase. This data stream is repeated for each individual tracked satellite.
  - SFSTATUS1B (CCS Signal Status): Provides the status of C-Nav<sup>®</sup> Corrections Service (CCS) signals including signal status, signal strength, CCS license status, and good and idle packet counts.
  - PSEUDORANGESTATSB (Pseudo-range Noise Statistics): Provides pseudo-range noise statistic information including orientation and standard deviations of latitude, longitude, altitude, semi-major axis of the error ellipse, and semi-minor of the error ellipse.
  - PVT1B (Position, Velocity, and Time): Provides GPS Week number, GNSS satellites used, latitude, longitude, navigation mode, and DOP information.

### **NMEA Messages**

The C-Nav3050<sup>®</sup> GNSS receiver does not output NMEA messages by default. The user, via controller software, must enable NMEA messages. Refer to [Appendix D - NMEA Data Output Messages](#) (Page 114), for complete descriptions of the NMEA output messages available from the C-Nav3050<sup>®</sup> GNSS receiver.

### **RTCM Messages**

The C-Nav3050<sup>®</sup> GNSS receiver does not output RTCM messages by default. The user, via controller software, must enable RTCM messages. The following RTCM messages are available for output from the C-Nav3050<sup>®</sup> GNSS receiver:

- RTCM1 and RTCM9: Code GPS Corrections

- RTCM3: Base Position
- RTCM19 and RTCM21: GPS RTK Corrections
- RTCM22: Base Position Extension (Requires RTCM3)
- RTCM22: Extended Reference Station Parameters
- RTCM24: Base Position (Combined RTCM3 and RTCM22)
- RTCM31 and RTCM34: Code GLONASS Corrections
- RTCM1001: L1-Only GPS RTK Observables
- RTCM1002: Extended L1-Only GPS RTK Observables
- RTCM1003: L1 and L2 GPS RTK Observables
- RTCM1004: Extended L1 and L2 GPS RTK Observables
- RTCM1005: Stationary RTK Reference Station ARP
- RTCM1006: Stationary RTK Reference Station ARP with Antenna Height
- RTCM1007: Antenna Descriptor (Base Only)
- RTCM1008: Antenna Descriptor and Serial Number (Base Only)
- RTCM1009: L1-Only GLONASS RTK Observables
- RTCM1010: Extended L1-Only GLONASS RTK Observables
- RTCM1011: L1 and L2 GLONASS RTK Observables
- RTCM1012: Extended L1 and L2 GLONASS RTK Observables
- RTCM1019: GPS Ephemerides
- RTCM1020: GLONASS Ephemerides
- RTCM1033: Receiver and Antenna Descriptors

### **Base and Rover Navigation Setup**

C-Setup, C-Monitor<sup>®</sup> QA/QC software, and C-NaviGator III CDU provide Base and Rover setup capabilities. Contact C-Nav<sup>®</sup> Support for details.

### **Profiles**

The C-Nav3050<sup>®</sup> GNSS receiver utilizes commands or groups of commands, known as **Profiles**, to set the various port assignments / parameters, navigation parameters, and output message lists. The C-Nav3050<sup>®</sup> GNSS receiver provides for storage of up to twenty profiles.

To save the current configuration settings of the receiver for future use, the user creates and names a profile. A controller solution, such as C-Monitor<sup>®</sup> QA/QC software, is used to activate a profile by its name.

***Please note:***

A new profile sent to the receiver replaces the currently used profile, but it does not necessarily replace all the current parameter settings. The new profile replaces only those parameter settings that it specifies.

For example:

The default navigation elevation mask is 7°. The user changes the elevation mask to 12° in a profile named “Test”. The user subsequently sends profile “RTK” to the receiver. It replaces “Test”, and changes navigation mode settings and port assignments. But profile “RTK” does not specify a setting for the navigation elevation mask. So, the elevation mask remains at 12°, as previously set by the “Test” profile.



## Section 6 - Safety Instructions

The C-Nav3050<sup>®</sup> GNSS receiver is designed for precise navigation and positioning using the GPS and GLONASS. Users must be familiar with the use of portable GNSS equipment, the limitations thereof and these safety instructions prior to use of this equipment.

### Transport

Always carry C-Nav<sup>®</sup> equipment in either the original packing material or packaging that provides protection to the receiver and antenna against shock and vibration. Utilize all original packaging when transporting via rail, ship, or air.

***Please note:***

A ruggedized transportation case (P/N CNV3050CASE) is available to for users requiring additional shock and vibration protection for their C-Nav<sup>®</sup> equipment. Contact C-Nav<sup>®</sup> Support ([cnavsupport@oceanengineering.com](mailto:cnavsupport@oceanengineering.com)) for more information.

### Maintenance

C-Nav<sup>®</sup> equipment may be cleaned using a new lint free cloth moistened with pure alcohol. Connectors must be inspected and, if necessary, cleaned before use. Always use the provided connector protective caps to minimize moisture and dirt ingress when not in use. Inspect cables regularly for kinks and cuts as these may cause interference and equipment failure.

Damp equipment must be dried at a temperature less than +40° C (104° F), but greater than 5° C (41° F) at the earliest opportunity.

### External Power Source

The C-Nav3050<sup>®</sup> GNSS receiver can be powered by an external power cable (P/N NAV94-310274-3010LF) or using an AC Power Supply Kit (P/N CNV82-020007-3001LF) both included with every C-Nav3050<sup>®</sup> GNSS receiver. The C-Nav3050<sup>®</sup> GNSS receiver must be connected to the chosen external power solution in accordance with [Section 3 - Interfacing](#) (Page 50) It is important that the external power source allow sufficient current draw for proper operation. Insufficient supplied current will cause damage to your external power source.

If your chosen external power source is a disposable battery, please dispose of the battery in accordance with your local regulations.

### **Safety First**

The owner of this equipment must ensure that all users are properly trained prior to using the equipment and are aware of the potential hazards and how to avoid them.

Other manufacturer's equipment must be used in accordance with the safety instructions issued by that manufacturer. This includes other manufacturer's equipment that may be attached to C-Nav<sup>®</sup> equipment.

Always use the equipment in accordance with local regulatory practices for safety and health at work.

There are no user serviceable parts inside the C-Nav3050<sup>®</sup> GNSS receiver. Accessing the inside of the equipment will void the equipment warranty.

Take care to ensure the C-Nav3050<sup>®</sup> GNSS receiver does not come into contact with electrical power installations, the unit is securely fastened, and there is protection against electromagnetic discharge in accordance with local regulations.

## Appendix A - GNSS Sensor Specifications

The technical specifications of this unit are detailed below. C-Nav® is constantly improving, and updating our technology. For the latest technical specifications for all products go to: [oceanengineering.com/cnav](http://oceanengineering.com/cnav)

This GNSS sensor is fitted with an internal Lithium cell battery used to maintain GNSS time when power is removed from the unit. This allows faster satellite acquisition upon unit power-up. The cell has been designed to meet over five years of service life before requiring replacement at a C-Nav® approved maintenance facility.

### Features

- Full constellation coverage with up to 66 signals tracked simultaneously, plus the C-Nav® Corrections Service (CCS) channel
- SBAS (WAAS, EGNOS, MSAS, GAGAN) tracking
- Built in C-Nav® Corrections Service receiver and demodulator
- L1, L2, L2C, L5, G1, G2, (GPS & GLONASS) code and full wavelength carrier phase tracking
- High Sensitivity/low signal level tracking
- Fast acquisition/re-acquisition
- Superior interference suppression (both in-band & out-of-band)
- Patented multipath rejection
- Minimal data latency
- 2 GB of internal memory
- Ultra Compact RTK format, RTCM 2.3 and 3.1 (code & carrier), and CMR/CMR+
- Output NMEA-0183, NCT Binary, NCT ASCII formats
- Configurable as RTK base or rover
- MBRTK (Moving Base RTK)
- RTK Extend

- Heading
- Programmable output rates
- Event marker input
- 1PPS output
- Communication Ports: RS-232, RS-422, USB 2.0 (Device and Host), Bluetooth, and Ethernet

### Performance

C-Nav3050<sup>®</sup> GNSS receiver performance is dependent on location, satellite geometry, atmospheric condition and GNSS correction.

### Tracking Characteristics

The C-Nav3050<sup>®</sup> GNSS receiver engine has 66 signal channels with the required flexibility to track all civilian GNSS and SBAS signals. The C-Nav3050<sup>®</sup> GNSS receiver engine is also capable of tracking the code and carrier from all GNSS signals. L5 and G2 are not available simultaneously due to hardware resource sharing. Select a signal according to these environmental considerations:

- Shade: G2 provides the best results, though positioning is less accurate in shade.
- Open Sky: L5 provides the best positioning accuracy.

Tracking of newer navigation satellite signals (L2C and L5) is subject to:

- The availability of the signals from newer satellites
- The "health bit" set to "healthy"
- The C-Nav3050<sup>®</sup> GNSS receiver navigation software updated to a version compatible with the signals

### Pull-In Times

C-Nav <sup>®</sup> Single:	45 minutes, typical
C-Nav <sup>®</sup> Dual:	45 minutes, typical

## Signals Tracked

Navigation & Public Correction Signals	
Services include: GPS L1, and SBAS (WAAS, EGNOS, MSAS, GAGAN); all at the same frequency:	1575.42 MHz, $\pm$ 16 MHz
Services include: GPS (L2, L2C); all at the same frequency:	1227.60 MHz, $\pm$ 16 MHz
Services include: GPS L5; all at the same frequency:	GPS: 1176.45 MHz, $\pm$ 16 MHz
G1 services include: GLONASS	1603.00 MHz, $\pm$ 6.5 MHz
G2 services include: GLONASS	1247.00 MHz, $\pm$ 5 MHz
C-Nav <sup>®</sup> Signals	
L-Band Differential Correction:	1525 to 1585 MHz

## Time-To-First-Fix (measured per ION-STD 101)

< 30 second loss:	< 2 seconds
-------------------	-------------

## Signal Reacquisition

Cold Start:	< 60 seconds	No valid Almanac or Ephemeris data available
Warm Start:	< 50 seconds	Valid Almanac available (less than one year old)
Hot Start:	< 20 seconds	Valid Ephemeris available (less than 4 hours old)

Measurement Precision (1 $\sigma$ /RMS, unless otherwise stated)	
Raw C/A code:	7.50 cm
Raw Carrier Phase Noise:	L1: 0.7 mm L2: 0.9 mm
RTK Positioning - Multi-Frequency < 40 km (RMS)	
Position (H):	$\pm 1$ cm + 0.5 ppm
Position (V):	$\pm 2$ cm + 1 ppm
RTK Positioning - Single-Frequency < 5 kms	
Position (H):	$\pm 1$ cm + 0.5 ppm
Position (V):	$\pm 2$ cm + 1 ppm
RTK WL Positioning – Multi-Frequency <40kms (RMS) (see note below)	
Position (H):	$\pm 5$ cm + 2ppm
Position (V):	$\pm 10$ cm +2ppm
RTK Extend (see note below)	
Position (H):	$\pm 3$ cm + 1 ppm
Position (V):	$\pm 6$ cm + 2 ppm
RTK Float	
Position (H):	$\pm 20$ cm + 3 ppm
Position (V):	$\pm 40$ cm + 3 ppm
CCS Single Frequency only ( with SBAS eg WAAS, EGNOS ) CCS (single)	
Position (H):	$\pm 1.1$ m
Position (V):	$\pm 1.8$ m
CCS Single Frequency only ( No SBAS eg WAAS, EGNOS )	
Position (H):	$\pm 1.3$ m
Position (V):	$\pm 2.2$ m
CCS Dual Frequency	
Position (H):	$\pm 5$ cm / $\pm 10$ cm
Position (V):	$\pm 10$ cm / $\pm 15$ cm
Code Differential GPS < 200kms	
Position (H):	$\pm 45$ cm +3 ppm
Position (V):	$\pm 90$ cm +3 ppm
Heading – Multi-Frequency	.1 degrees *requires 10 Hz update rate
Slew – Single-Frequency	.75 degrees

Velocity (for all DGNSS described above)	
Velocity:	0.01 m/s
Enhanced SBAS (WAAS / EGNOS / MSAS / GAGAN) Position Accuracy	
Position (H):	± 30 cm
Position (V):	± 60 cm

## Measurement Performance

**Please note:**

- The specifications herein are based on the following: PDOP < 4, 1-sigma (65%), 24-hour averaged set of data. Further, performance is dependent upon, but not limited to, location, satellite geometry, atmospheric conditions (i.e., solar storm activity), local interference, DoD signal degradation (i.e., Selective Availability or similar techniques), satellite messaging or timing errors, and augmentation correction messages. Equipment operated on a single-frequency (i.e., L1 / G1) is more susceptible to atmospheric solar storm activity than multi-frequency operated equipment.
- RTK WL is a positioning mode that is necessary for phase ambiguity resolution. However when this navigation mode is indicated, it is likely that the receiver is in a corner navigation condition. As such, it is likely that the end user will not wish to use it as a valid navigation mode.

If the above conditions are met, then the receiver will not need to be put into RTK-WL mode.

- RTK Extend is a purchased software option, which uses C-Nav<sup>®</sup> proprietary differential processing techniques to provide continuous RTK positioning during non-reception of RTK corrections. When a C-Nav<sup>®</sup> enabled receiver with RTK Extend falls out of RTK mode, the system automatically transitions to RTK Extend mode. Positioning is maintained because of the close correlation in phase measurement corrections between RTK and the C-Nav<sup>®</sup> proprietary differential processing techniques.
- Depending on how long the RTK base station has been running and is C-Nav<sup>®</sup> fixed, the duration of RTK Extend is limited to:
  - 2 to 15 minutes for a NCT base station
  - 2 to 15 minutes for a non-NCT base station

For RTK Extend to achieve maximum performance, the rover must be fully converged, which typically requires one (1) hour of operation.

- The correlation between RTK and C-Nav<sup>®</sup> phase measurement corrections decreases over time, until the system automatically transitions out of RTK Extend mode to the next available DGNSS mode.
- This option is only required on the Rover receiver. If a Base receiver may be used as a Rover at a future date, it should be optioned for RTK Extend as well.

## Receiver Noise Figure

17.0 dB +0.5 dB @ 290° Kelvin; 1 Hz RBW

## Dynamics

Acceleration:	Up to 6 g
Speed:	< 515 m/s <sup>1</sup> (1,000 knots)
Altitude:	< 18.3 km <sup>1</sup> (60,000 ft)

<sup>1</sup>Restricted by USA export laws

## 1PPS

Accuracy:	±13 ns (Relative; User Configurable)
Pulse Width:	User defined from 25 to 1600000 nS inclusive; 1000000 default

## Data Latency and Memory

PVT:	< 10 ms
Raw Data:	< 10 ms
Internal Memory:	2 GB



## Connector Assignments

<b>ANT:</b>	TNC (female) RF Input, RF Ground
<b>COM 1 – LAN:</b>	Positronic (female) RS-232, from 9.6 to 115.2 kbps Ethernet, four virtual ports, from 10 to 100 Mbps 1PPS
<b>COM 2 – USB:</b>	Positronic (female) RS-232 / RS-422, from 9.6 to 115.2 kbps    USB 2.0, 12Mbps max data rate
<b>POWER:</b>	Positronic (male) Power port, from 9 to 32 VDC, 6 W typical, Power Input 1, 2; Power Ground 1PPS / Event Marker
<b>Bluetooth:</b>	1 Serial Port Service, 230.4 kbps 10 m (32 ft) range

## Physical and Environmental Specifications

Weight:	1.1 lbs (0.50 kg)
External Power: Input Voltage: Output Voltage:	9 to 32 VDC, 6 W typical +5 V $\pm$ 50.5 V ( up to 100 mA available for antenna bias Via RF connector)
Temperature (ambient) Operating: Storage	-40° C to +70° C (-40° to +158° F) -40° C to +85° C (-40° to +185° F)
Humidity:	95% Non-Condensing
Vibration:	MIL-STD-810F
Ingress Protection:	iP67*
Marine Equipment	IEC 60945 IEC 61108-1, IEC 61162-1

IEC 6116-2

## Satellite Based Augmentation System Signals (SBAS)

Publicly broadcast services:	SBAS (2ASS/EGNOS/MSAS/GAGANC
Private subscription service:	C-Nav <sup>®</sup> Corrections Services (CCS)

## LED Display Functions

GNSS	Acquiring / Tracking GNSS Satellites
C-Nav <sup>®</sup>	Verifying C-Nav <sup>®</sup> License Acquiring / Tracking C-Nav <sup>®</sup> Satellites
Data I/O	Data I/O Activity
Bluetooth	Bluetooth Connectivity

## Input / Output Data Messages

Control Commands (Input Only):	C-Nav <sup>®</sup> proprietary commands (contact C-Nav <sup>®</sup> Support for more information)
Differential Correction (I/O):	RTCM 2.3 and 3.1, RTCM types 1, 3, and 9, SBAS (WAAS / EGNOS / MSAS / GAGAN), and CCS
RTK Correction Data (I/O):	CMR / CMR+, RTCM types 18-22, and 1001-1006, 1009-1012, 1014-1017 <sup>1</sup> ; NCT types 0x5B, 0x5C and 0x5E (hex)
NMEA-0183 Messages (Output only):	ALM, MLA, GBS, GFA, GGA, GLL, GNS, GRS, GSA, GST, GSV, RMC, RRE, VTG, ZDA, PNCTDTM, PNCTGGA, PNCTGST, PNCTMDE, PNCTSET

## CCS Rapid Recovery

The CCS Rapid Recovery feature provides a way to more quickly recover from the loss of CCS corrected positioning after loss and recovery of navigation. The receiver starts using these corrections when the link to the navigation satellites has been lost, or has degraded to a specified quality value called Figure of Merit (FOM) which represents the best-guest accuracy of the horizontal position. Convergence time in CCS mode is virtually eliminated under certain conditions following a very brief navigational outage. This feature is available only on the GPS portion of the CCS correction, which constitutes the larger weighted component of the correction.

## CCS Rapid Recovery with Quick Start

CCS enables Rapid Recovery when an accurately known ITRF-2014 position is used to initialize CCS navigation. This is typically a position previously surveyed and converted to ITRF-2014 prior to initialization. This feature is available for the CCS GNSS only. The receiver must have a CCS Dual Frequency solution prior to initiating.

### Quick Start

Rapid Recovery is available only on the GPS portion of the CCS corrections, which constitutes the larger weighted component of the correction. Rapid Recovery is not available for the first 5 minutes after a successful quick start is completed. When a lower FOM limit value is input, the receiver is more constrained in completing a Rapid Recovery process. In order for Rapid Recovery to function, the outages must not exceed 2 minutes. It requires one minute to complete the process. It has an option to manually enter coordinate to initiate this feature.

Outage Duration:	Up to 3 minutes
Maximum Outage Distance	10 km
PDOP Limit	< 4
HDOP Limit	< 3
Recovery Time	< 2 minutes after re-entering CCS navigation mode

## Block Diagrams

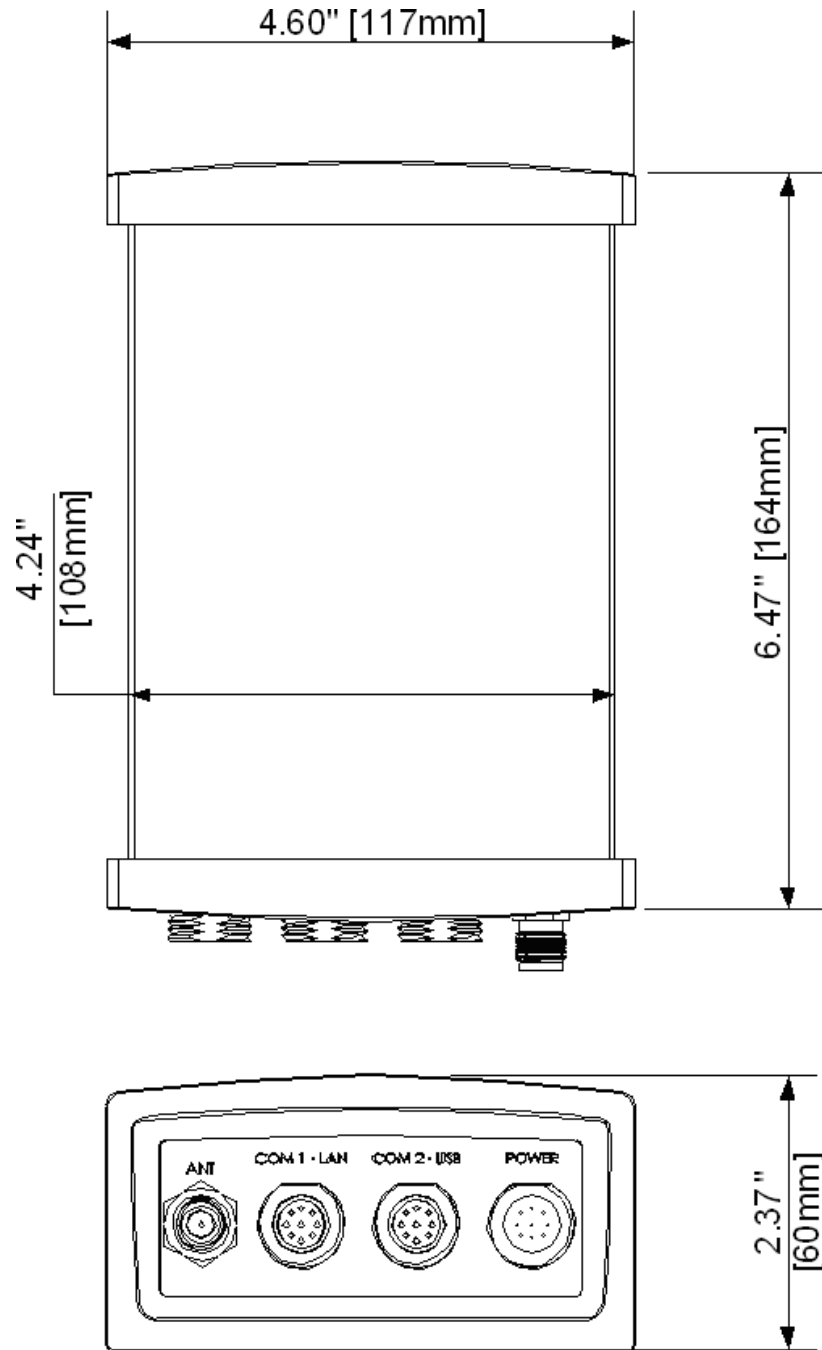


Figure 37: C-Nav3050<sup>®</sup> Base Plate Dimensions Without Mounting Brackets

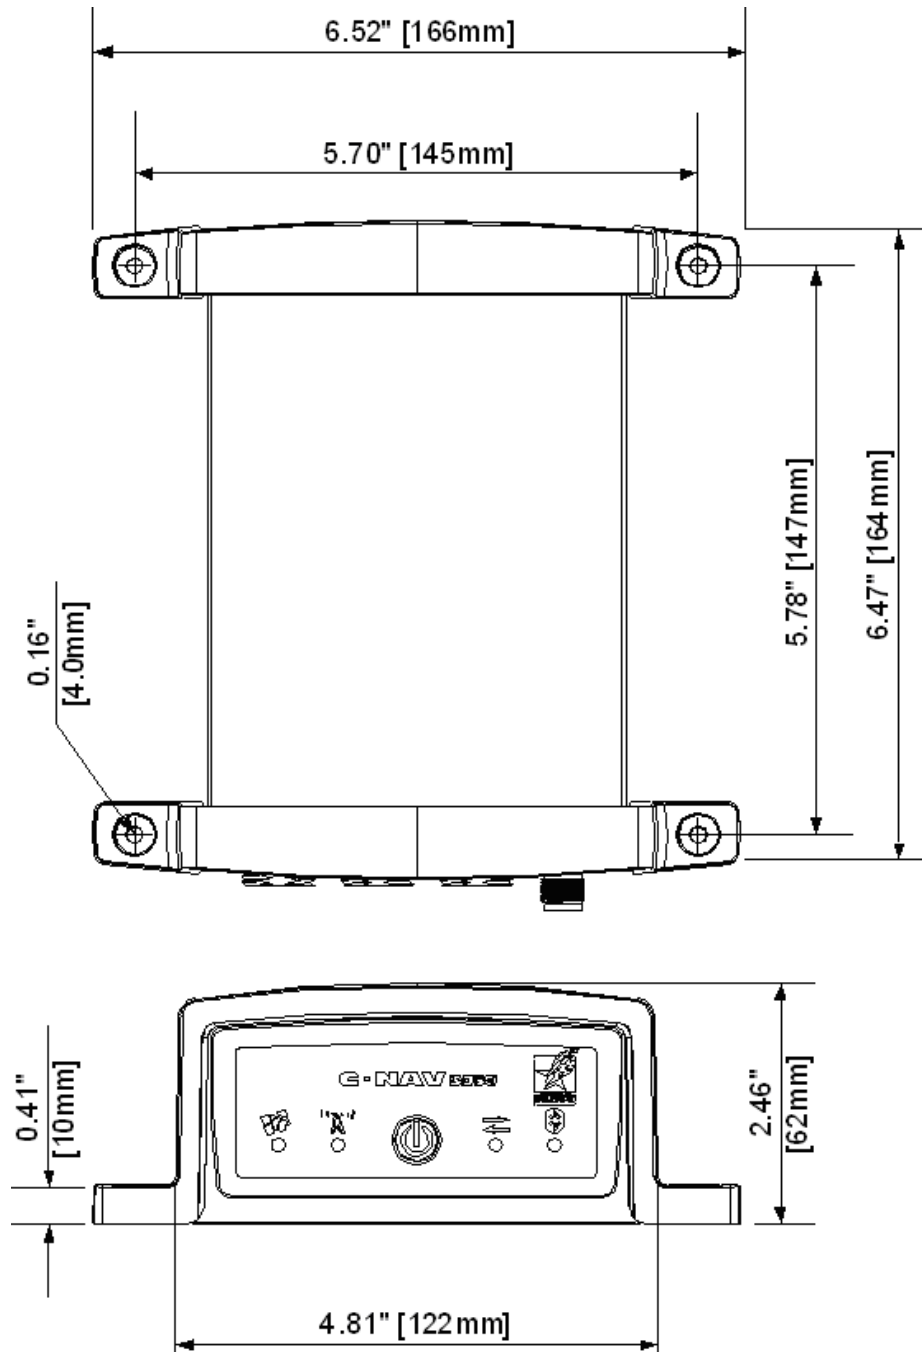


Figure 38: C-Nav3050® Base Plate Dimensions With Mounting Brackets

## Appendix B - Antenna Specifications

Part Numbers	Standard: CNV82-001020-3001 Base: CNV82-001021-3001 Airborne: NAV82-001022-3001LF
Frequency (Frequency is dependent on software bundle options.)	GPS L1: 1575.42 MHz, $\pm$ 16 MHz GPS L2: 1227.60 MHz, $\pm$ 16 MHz GPS L2C: 1227.60 MHz, $\pm$ 16 MHz GPS L5: 1176.45 MHz, $\pm$ 16 MHz C-Nav® L-Band: 1525 -1585 MHz GLONASS G1: 1603.00 MHz, $\pm$ 6.5 MHz GLONASS G2: 1247.00 MHz, $\pm$ 5 MHz
Phase Center	GPS L1: 66 mm (2.60 in) GPS L2: 65 mm (2.56 in)
Polarization	Right Hand Circular (RHCP)
Pre-Amplifier	39 dB gain (+/- 2 dB)
Noise Figure	2.6 dB max
Impedance	50 Ohms
VSWR / RL	$\leq$ 2.0:1 (14 dB return loss)
Band Rejection	20 dB @ 250 MHz
RF Power Handling	1 Watt
Input Voltage	4.2 to 15.0 VDC
Power Consumption	0.3 W 46 mA typical, 50 mA max @ 5 VDC
Vibration*	RTCA D0-160 E, Section 8, Curve D
Immersion	MIL-STD-810F, Method 512.4
Cable Connector	TNC Female
Antenna Operating Temperature	-55° C to +85° C
Altitude	70,000 ft; 21,336 m
Rover/Airborne Antenna Finish	Fluid resistant Ultem, UV stable

**Table 27: Standard, Base, and Airborne Antennas**

- Designed to DO-160D Standard
- P/N NAV82-001022-3001LF is the aircraft mount antenna, also rated to 70,000 feet (21,336 m), and is TSO-C144 certified.

- To achieve the greatest level of accuracy, the absolute phase center values must be incorporated into your processing. Phase center information can be found on the NGS website:  
<https://www.ngs.noaa.gov/ANTCAL/>

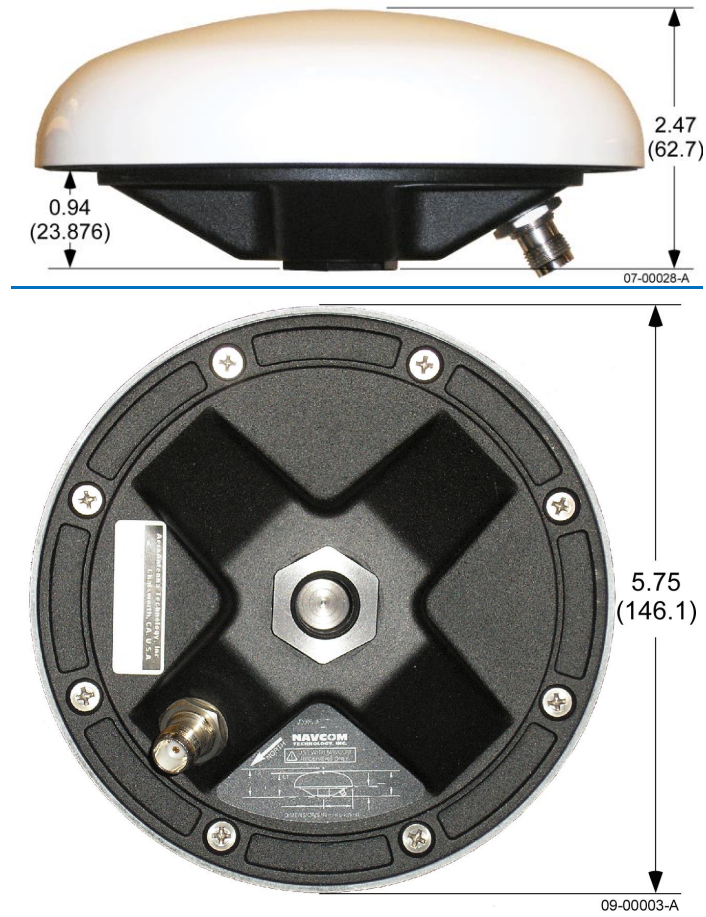


Figure 39: Standard Antenna Dimensions



## C-Nav286 Specification Sheet

Part Numbers	CNVAT1675-286
Polarization	RHC (Right Hand Circular)
Axial Ratio	3 dB MAX @ Boresight
Radiation Coverage	+5.0 dBic      0° = 0° -2.0 dBic    0° < Ø < 75° -3.0 dBic    75° < Ø < 80° -4.0 dBic    80° < Ø < 85° -5.0 dBic    Horizon
Passbands	L-Band/GPS L1/GLONASS: 1525-1611 MHz GPS L2/L5 / GLONASS: 1164-1254 MHz GPS L1: 66 mm (2.60 in) GPS L2: 65 mm (2.56 in)
Out of Band Rejection	> 90 dB @ 1626.5 – 1660 MHz
Antenna Phase Center	L1 = 83.15 mm L2 = 83.35 mm
LNA / Filter Combined Gain	39 dB (±2 dB)
Total Noise Figure (NF)	2.6 dB (max)
VSWR	≤2.0:1
Impedance	50 Ohms
<b>Power Requirements</b>	
Input Voltage	+4.2V - +15V dc
Power Consumption	66 mA (max)
<b>Environmental</b>	
Operating Temperature	-55°C to + 70°C (-67°F to 158°F)
Storage Temperature	-55°C to + 85°C (-40°F to 185°F)
Water/Dust	IP67
Mechanical	
Cable Connector	TNC Female
Dimensions	143.3 mm x 96.3 mm (5.64 in x 3.79 in)
Mounting	5/8 -11 UNC-2B Thread Mount

Table 28: C-Nav286 Antenna Specification Sheet

### C-Nav286 Drawing

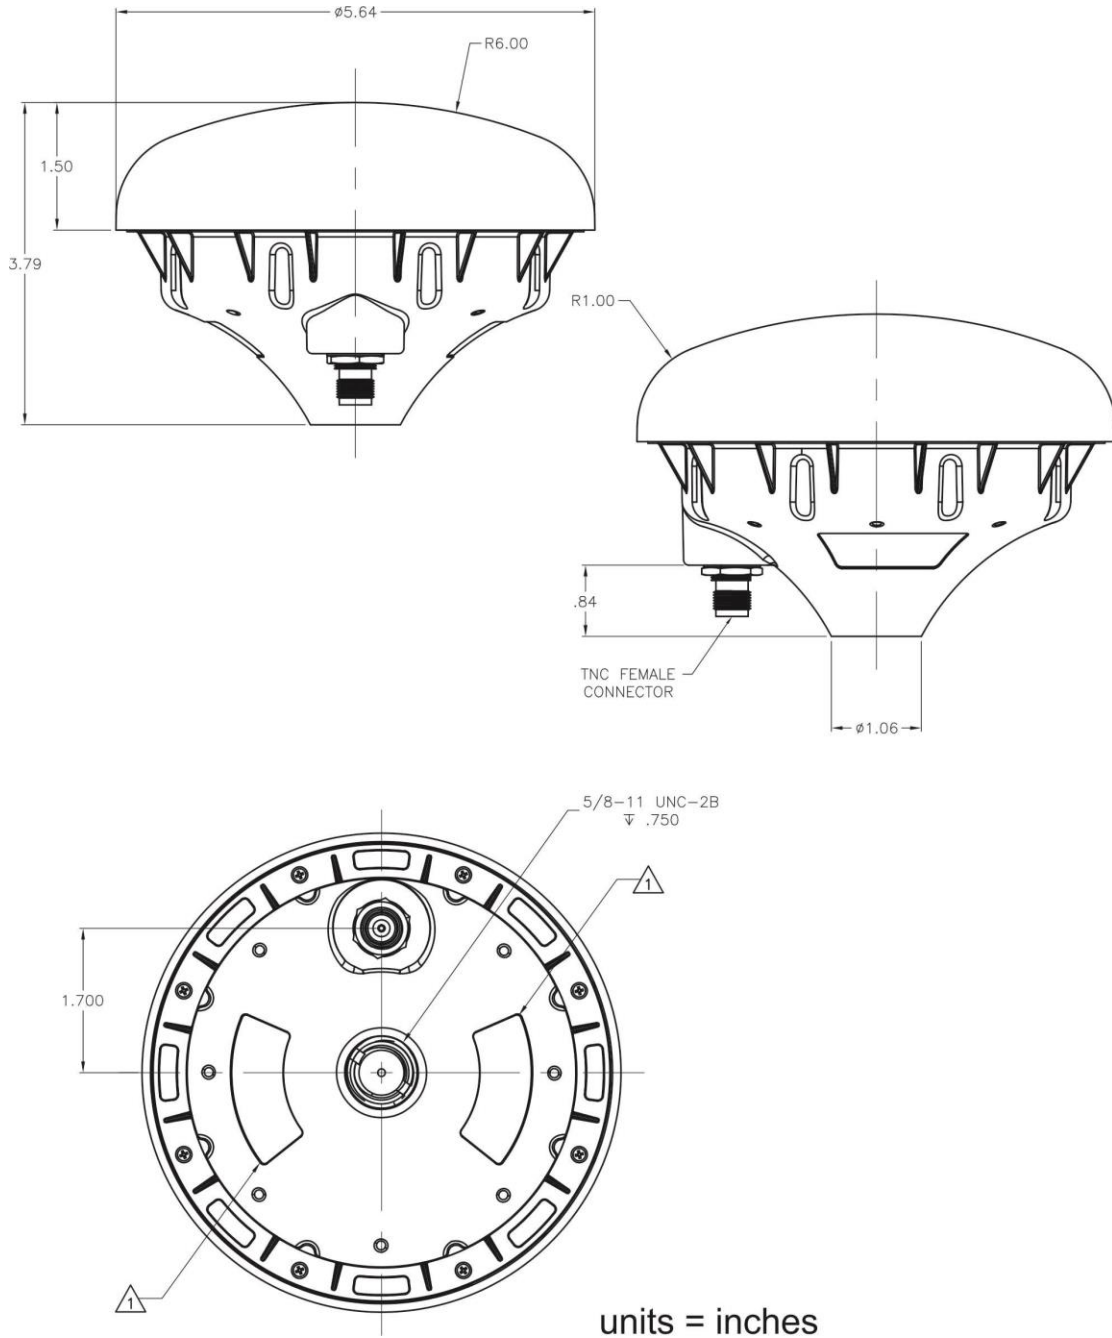



Figure 40: C-Nav286 Antenna Drawing

## C-Nav289 Specification Sheet

Part Numbers	CNVAT1675-289
Polarization	RHC (Right Hand Circular)
Axial Ratio	3 dB MAX @ Boresight
Radiation Coverage	+5.0 dBic      0° = 0° -2.0 dBic    0° < Ø < 75° -3.0 dBic    75° < Ø < 80° -4.0 dBic    80° < Ø < 85° -5.0 dBic    Horizon
Passbands	L-Band/GPS L1/GLONASS G1/Galileo B1/Beidou B1: 1,525 – 1,610 MHz GPS L2/GLONASS G1/Galileo E5a, E5b/Beidou B2: 1,160 – 1,252 MHz
Out of Band Rejection	> 90 dB (INMARSAT uplink) > 65 DB (IRIDIUM uplink)
LNA / Filter Combined Gain	39 dB (±2 dB)
Total Noise Figure (NF)	2.6 dB (max)
VSWR	≤2.0:1
Impedance	50 Ohms
<b>Power Requirements</b>	
Input Voltage	+4.2V - +15V dc
Power Consumption	65 mA (max)
<b>Environmental</b>	
Operating Temperature	-40°C to + 70°C (-40°F to 158°F)
Storage Temperature	-55°C to + 85°C (-67°F to 185°F)
Water/Dust	IP67
<b>Mechanical</b>	
Enclosure Construction	Weather-resistant polymer housing
Cable Connector	TNC Female
Dimensions	177.8 mm x 80.52 mm (7.0 in x 3.17 in)
Weight	1 lb / 0.45 kg
Mounting	5/8 -11 UNC-2B Thread Mount

Table 29: C-Nav289 Antenna Specification Sheet

**C-Nav289 Drawing**

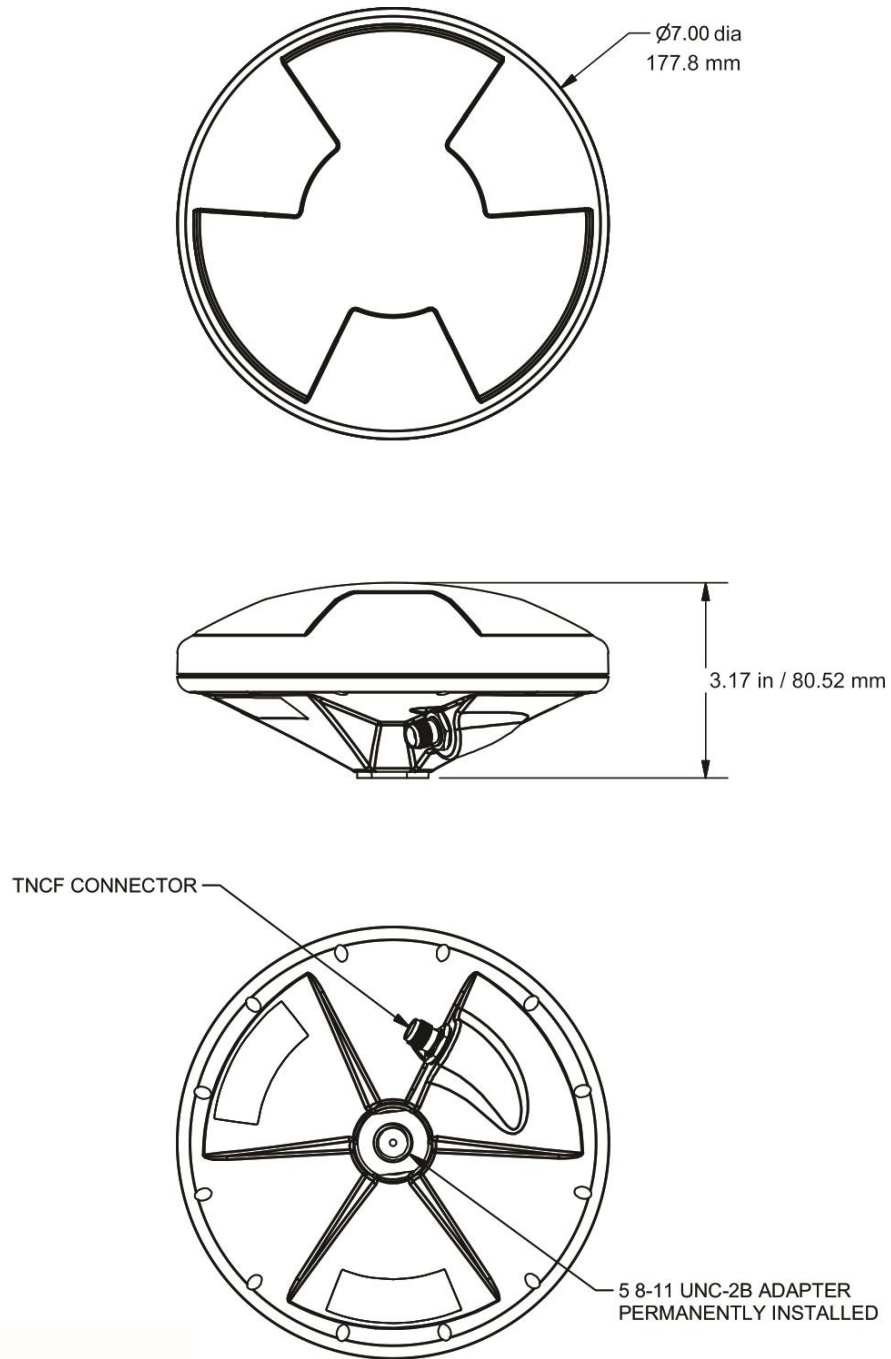

**Figure 41: C-Nav289 Antenna Drawing**

## AD591 Antenna Specification

Part Numbers	CNVALIAD591
Antenna Type	Dual patch stacked antenna elements
Polarization	RHCP (+/- 0.5db at zenith) and Omnidirectional in azimuth
Passbands	L-Band/GPS L1/GLONASS: 1525-1611 MHz GPS L2/L5 / GLONASS: 1164-1254 MHz
Out of Band Rejection	> 95 dB @ 1626.5 – 1660 MHz
Antenna Phase Center	L-Band dB @ 1626.5 – 1660 (INMARSAT up link)
LNA / Filter Combined Gain	39 dB
Total Noise Figure (NF)	3 dB (Typical)
Impedance	50 Ohms
<b>Power Requirements</b>	
Input Voltage	+5V - +20V dc
Power Consumption	45 mA (max)
<b>Environmental</b>	
Operating Temperature	-30°C to + 70°C (-22°F to 158°F)
Storage Temperature	-40°C to + 70°C (-40°F to 158°F)
Water/Dust	IP67
<b>Mechanical</b>	
Cable Connector	TNC Female
Weight	4kg (8.82lbs)
Mounting	Aluminum Bracket with clamps (included)

Table 30: AD591 Antenna Specification Sheet

## AD591 Antenna Drawing

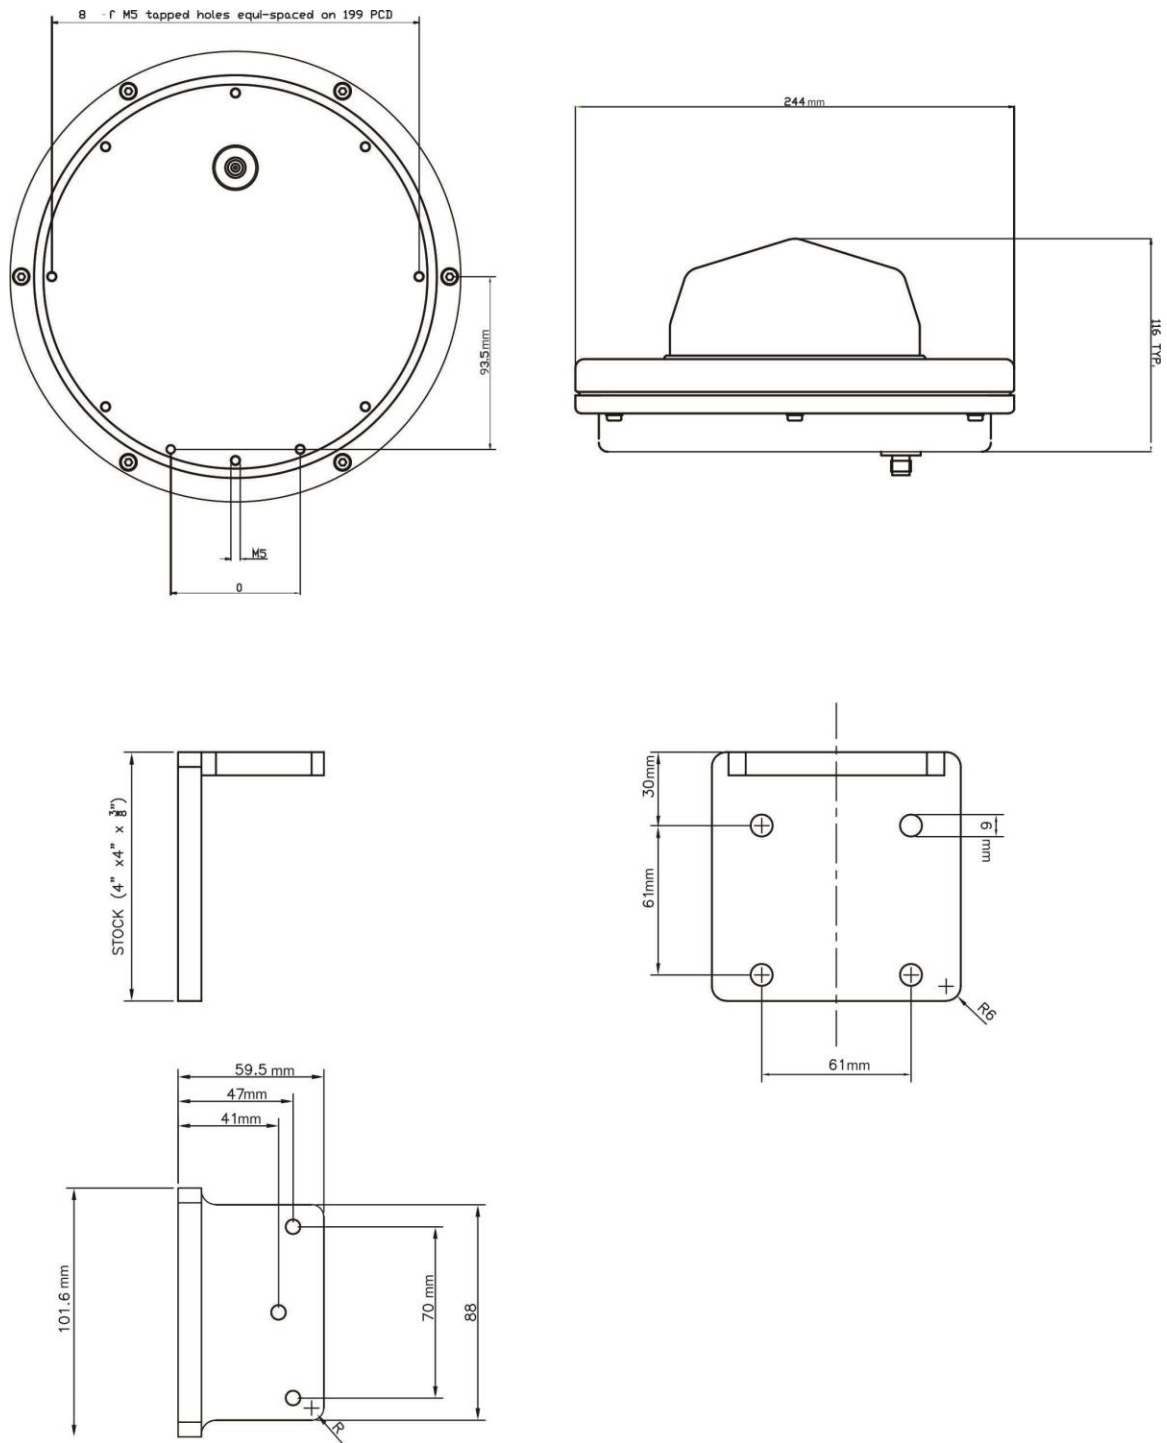


Figure 42: AD591 Antenna diagram

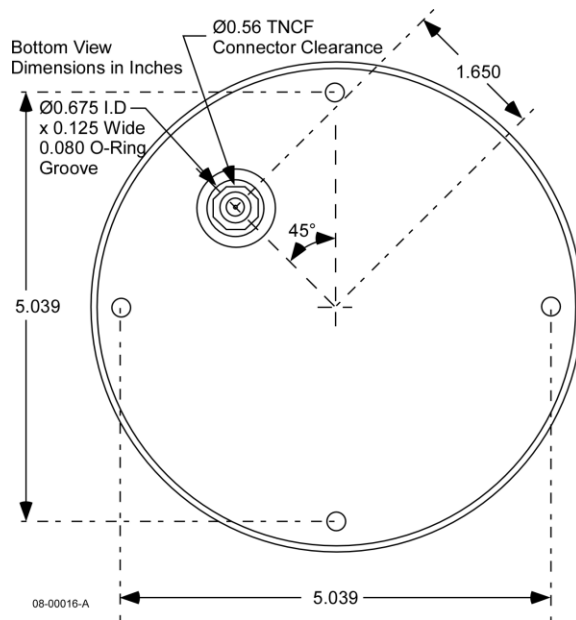
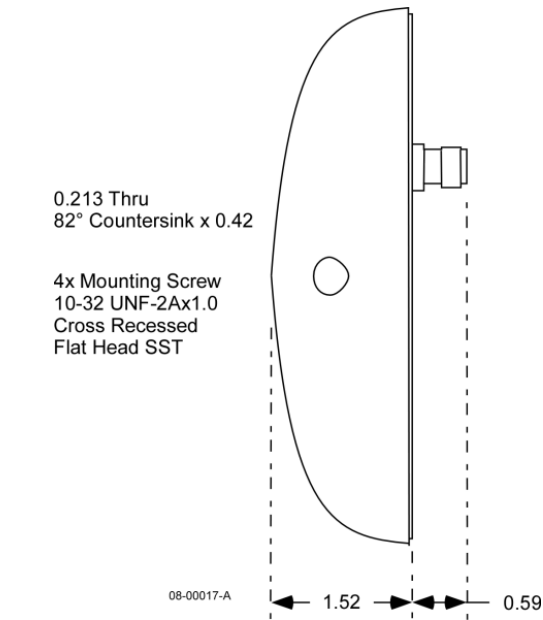


Figure 43: Airborne Antenna Dimensions

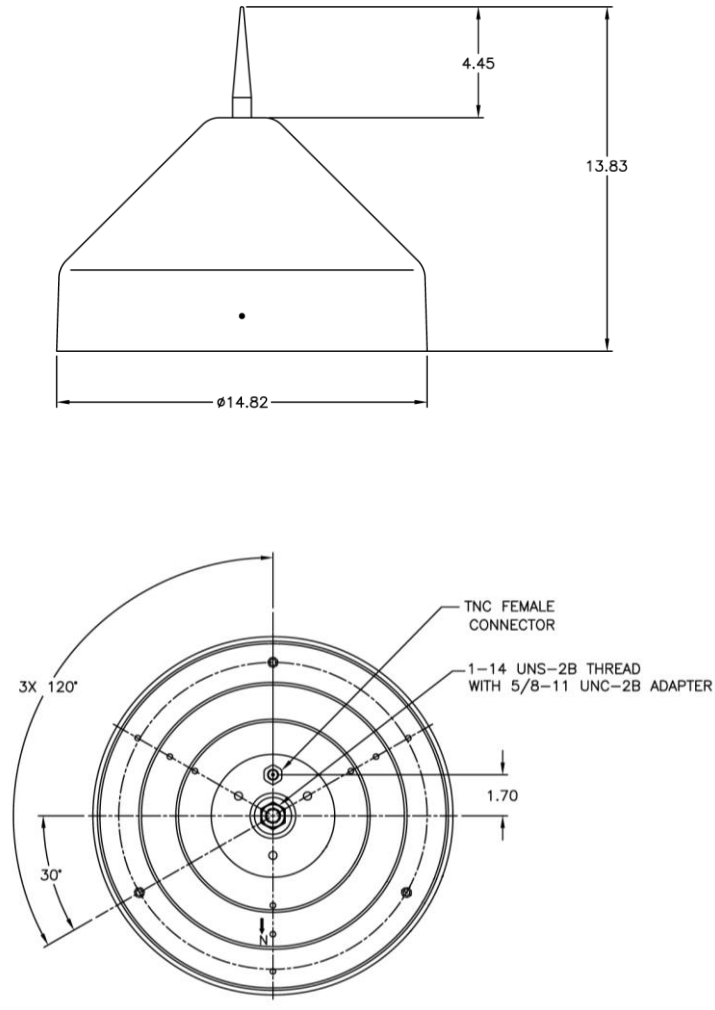


Figure 44: Base Antenna Dimensions



## Standard & Airborne Antenna Radiation Patterns

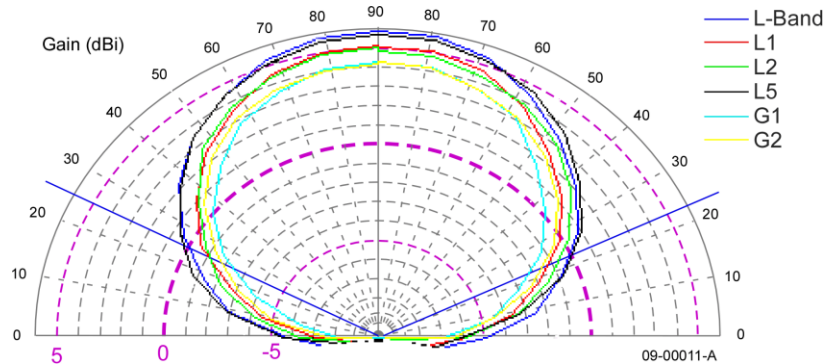


Figure 45: Standard & Airborne Antenna Radiation Pattern

Optimal antenna performance is realized at elevations greater than 25°.

- There is a 10 dB variation between 0° and 90° elevation (factor 10x); therefore, lower elevation satellites are always more difficult to track.
- There is a 5 dB variation between ~35° and 0° elevation (factor > 3x)

## Base Antenna Radiation Pattern

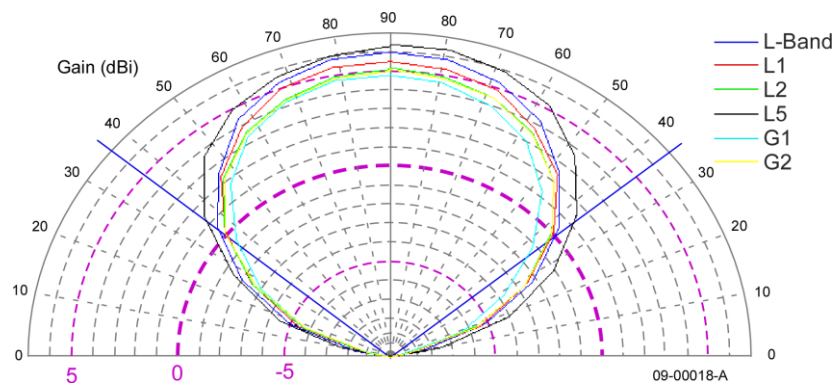


Figure 46: Base Antenna Radiation Pattern

Optimal antenna performance is realized at elevations greater than 35°.


- There is an 11 dB variation between 15° and 90° elevation (factor > 10x); therefore, lower elevation satellites are always more difficult to track.
- There is a 9 dB variation between ~35° and 0° elevation (factor > 8x)

## Appendix C - C-Nav® Corrections Service (CCS)

### Description

The C-Nav® Corrections Service (CCS) Dual Frequency Service is a global system for the distribution of SBAS corrections giving the user the ability to measure their position anywhere in the world with exceptional reliability and unprecedented accuracy of better than 5 cm. Because the SBAS corrections are broadcast via INMARSAT geo-stationary satellites, the user needs no local reference stations or post-processing to get this exceptional accuracy.

Furthermore, the same accuracy is available virtually anywhere on the earth's surface on land or sea from a 10 degree look angle, due to the worldwide coverage of these geo-stationary satellites.

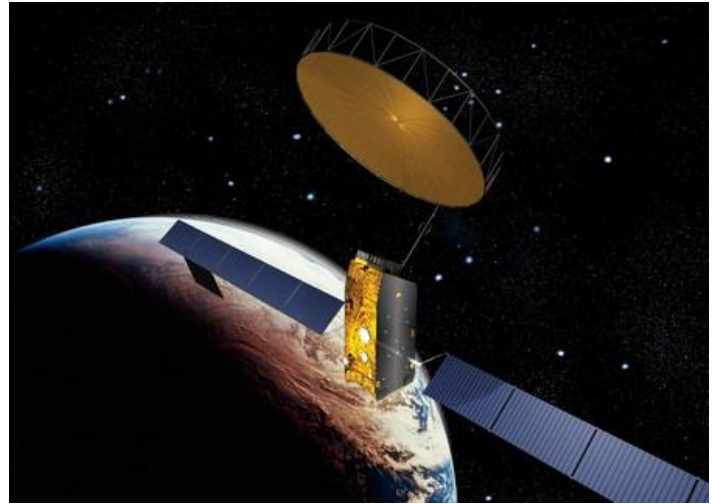

### Infrastructure

The system utilizes GNSS satellite systems, L-Band communication satellites, and a worldwide network of reference stations, to deliver real-time high-precision positioning.

To provide this unique service, C-Nav® has built a global network of multi-frequency reference stations, which constantly receive signals from GNSS satellites as they orbit the earth. Data from these reference stations is fed to two USA processing centers, in Torrance, California and Moline, Illinois, where they are processed to generate the differential corrections.

From the two processing centers, the correction data is fed via redundant and independent communication links to satellite uplink stations at Laurentides, Canada; Perth, Australia; Burum, The Netherlands; Santa Paula, California; Auckland, New Zealand; and Southbury, Connecticut for rebroadcast via the geo-stationary satellites.

The key to the accuracy and convenience of the C-Nav<sup>®</sup> Corrections Service is the source of SBAS corrections. GNSS satellites transmit navigation data on several L-Band frequencies<sup>1</sup>. The C-Nav<sup>®</sup> reference stations are all equipped with geodetic-quality, multi-frequency receivers. These reference receivers decode GNSS signals and send precise, high quality, multi-frequency pseudo-range and carrier phase measurements back to the processing centers together with the data messages, which all GNSS satellites broadcast.

At the processing centers, C-Nav<sup>®</sup> proprietary differential processing techniques are used to generate real-time precise orbits and clock correction data for each satellite in the GNSS constellations. This proprietary Wide Area DGNSS (WADGNSS) algorithm is optimized for a multi-frequency system such as the C-Nav<sup>®</sup> Corrections Service, in which multi-frequency ionospheric measurements are available at both the reference receivers and the user receivers. It is the use of multi-frequency receivers at both the reference stations and the user equipment, together with the advanced processing algorithms, which makes the exceptional accuracy of the C-Nav<sup>®</sup> Corrections Service possible.

Creating the corrections is just the first part. From our two processing centers, the differential corrections are then sent to the Land Earth Station (LES) for uplink to L-Band communications satellites. The uplink sites for the network are equipped with C-Nav-built modulation equipment, which interfaces with the satellite system transmitter and uplinks the correction data stream to the satellite that broadcasts it over the coverage area. Each L-Band satellite covers more than a third of the earth. Users equipped with a C-Nav<sup>®</sup> precision GNSS receiver actually have two receivers in a single package, a GNSS receiver, and an L-Band communications receiver, both designed by C-Nav<sup>®</sup> for this system. The GNSS receiver tracks all the satellites in view and makes pseudo-range measurements to the GNSS satellites. Simultaneously, the L-Band receiver receives the correction messages broadcast via the L-Band satellite. When the corrections are applied to the GNSS measurements, a position measurement of unprecedented real-time accuracy is produced.

The **Oceaneering<sup>®</sup> C-NavC<sup>2®</sup>** correction signal network ground reference frame transitioned from the ITRF-2008 to the ITRF-2014 system on March 1, 2017.

---

<sup>1</sup> A single-frequency operation mode is available for the C-Nav3050<sup>®</sup>. Contact C-Nav<sup>®</sup> Support for details on using this feature. Single-frequency is a receiver mode that uses only the L1 GPS/G1 GLONASS signals. There is no compensation for ionospheric effects.

The **Oceaneering<sup>®</sup> C-NavC<sup>1</sup><sup>®</sup>** correction signal transitioned from ITRF-2008 to the ITRF-2014 system on March 31, 2017.

### **Reliability**

The entire system meets or exceeds a target availability of 99.99%. To achieve this, every part of the infrastructure has a built-in back-up system.

All the reference stations are built with duplicate receivers, processors, and communication interfaces, which switch automatically or in response to a remote control signal from the processing centers. The data links from the reference stations use the Internet as the primary data link and are backed up by dedicated communications lines, but in fact the network is sufficiently dense that the reference stations effectively act as back up for each other. If one or several fail, the net effect on the correction accuracy is not impaired.

There are two continuously running processing centers, each receiving all of the reference site inputs and each with redundant communications links to the uplink LES. The LESs are equipped with two complete and continuously operating sets of uplink equipment arbitrated by an automatic fail over switch. Finally, a comprehensive team of support engineers maintains round the clock monitoring and control of the system.

The network is a fully automated self-monitoring system. To ensure overall system integrity, an independent integrity monitor receiver, similar to a standard C-Nav<sup>®</sup> user receiver, is installed at every reference station to monitor service quality. Data from these integrity monitors is sent to the two independent processing hubs in Torrance, California and Moline, Illinois. Through these integrity monitors the network is continuously checked for overall SBAS positioning accuracy, L-Band signal strength, data integrity and other essential operational parameters.

### **CCS Dual Frequency**

The C-Nav<sup>®</sup> Corrections Service remains unaffected and continues to provide customers with full GPS clock and orbit correctors has proven reliability since 2000, featuring C-Nav<sup>®</sup> proprietary correction algorithms (CCS), a global network of dual frequency reference sites, fully independent servers in geographically separated processing centers and simultaneous broadcasts from two independent satellite networks (Net-1 and Net-2) to ensure a reliable worldwide positioning solution.

C-Nav® now offers a second independent full constellation (GPS + GLONASS) GNSS correction service called features include GLONASS and GPS (GNSS) clock, as well as orbit correctors. It provides a fully independent suite of clock and orbit correction algorithms, and fully independent servers in geographically separated processing centers. Features also include a second independent global network of C-Nav® dual frequency GPS / GLONASS reference stations equipped with Sapphire© based technology, and simultaneously broadcasts from two independent satellite networks, (Net-1 and Net-2).

The C-Nav3050® GNSS receiver combined with the C-Nav® Corrections service delivers PPP correctors for all operational GNSS satellites, showing significantly enhanced performance in shaded conditions and increased position accuracy. There is up to 20 percent reduction in PPP start-up pull-in time accuracy. There are no additional fees for access to the new correction service.

### C-Nav® Corrections Service (CCS) Satellites

Satellite ID	Longitude	Satellite Name	Uplink Site
402	98.0W	PAC-E	Laurentides
525	25E	IND-W	Burum
643	143.5E	PAC-W	Auckland
446	54W	AOR-W	Southbury
484	15.5W	AOR-E	Southbury
564	64E	IOR	Perth
678	178E	POR	Santa Paula

Table 31: C-Nav® Corrections Service Satellites

## CCS Over-The-Air C-Nav<sup>®</sup> Licensing

CCS Over-The-Air (OTA) C-Nav<sup>®</sup> licensing is the easiest way to install a C-Nav<sup>®</sup> license. The installation of a purchased license is accomplished via radio broadcast. CCS Over-The-Air C-Nav<sup>®</sup> licensing is especially convenient for receivers in remote locations in the field.

The requirements to obtain a C-Nav<sup>®</sup> license are:

- Valid Purchase Order
- Signed License Agreement
- Appropriate Credit Terms with Oceaneering International, Inc. or an Authorized Dealer; including a valid P.O.

C-Nav<sup>®</sup> recommends that customers process new C-Nav<sup>®</sup> license requests through an authorized dealer or a C-Nav<sup>®</sup> sales representative 15 to 30 days before the expiration of the current license.

The customer should do the following in order to properly receive the CCS Over-The-Air broadcast of the C-Nav<sup>®</sup> license:

1. Turn on the C-Nav3050<sup>®</sup> GNSS receiver.
2. Ensure that the C-Nav3050<sup>®</sup> GNSS receiver antenna has clear access to the CCS tracking satellite.
3. Request the C-Nav<sup>®</sup> license.

## How to Obtain a C-Nav<sup>®</sup> License

C-Nav<sup>®</sup> corrections are based on a subscription service. The user pays a subscription fee, which licenses the use of the service for a predetermined period of time.

An authorized subscription will provide an encrypted code, which is specific to the Serial Number of the C-Nav<sup>®</sup> GNSS receiver to be authorized. This is entered into the receiver Over-the-Air, or via the provided controller solution (C-Setup).

When contacting C-Nav<sup>®</sup> regarding subscription or deactivation of service, please provide the following information:

- Vessel Info and brief project description (Name / Number, Location)
- Customer Info (Company Name, PO / Ref. Num. Point of Contact)
- C-Nav<sup>®</sup> Equipment Details (Receiver Type, Firmware version, Serial Number, P/N's, etc.)
- Required Start / Stop Date or Period
- Service Type (Land or Offshore / Activation or Deactivation)
- Operational Region (Asia, Australia, China, South and Central America, Caribbean, Africa, Middle East, or Other)
- Detailed Contact Information (Phone, Fax, E-Mail, Billing / Shipping Addresses)

Requests for Service Activation / Deactivation can be made using the web form at [C-Nav<sup>®</sup> Authcode Authorization Portal](#) or by emailing the above information to C-Nav<sup>®</sup> Authcode ([cnavauthcode@oceanengineering.com](mailto:cnavauthcode@oceanengineering.com)) or by contacting the C-Nav<sup>®</sup> authorized representative in your region.

### Over-The-Air (OTA) Broadcast

The C-Nav<sup>®</sup> license is typically broadcast Over-The-Air when the license is generated.

***Please note:***

- To ensure reception, turn on the receiver before the specified broadcast time. Do not turn off the receiver until verifying that the license is saved.
- The receiver must be tracking C-Nav<sup>®</sup> satellites at the broadcast times, though the receiver is not required to be operating in CCS mode during the broadcasts.

### Verify License Is Active

Once a C-Nav<sup>®</sup> license is activated, the C-Nav<sup>®</sup> Status LED on the C-Nav3050<sup>®</sup> GNSS receiver Front Panel will be solid green.



**Figure 47: Front Panel C-Nav<sup>®</sup> Status LED - Showing Active C-Nav<sup>®</sup> License**

For special-case scenarios, customers may request to receive the C-Nav<sup>®</sup> license via email to manually upload via a C-Nav<sup>®</sup> controller solution. The request must be specified in the P.O.

The broadcast procedure for Over-The-Air C-Nav<sup>®</sup> Corrections Service licensing is subject to change.

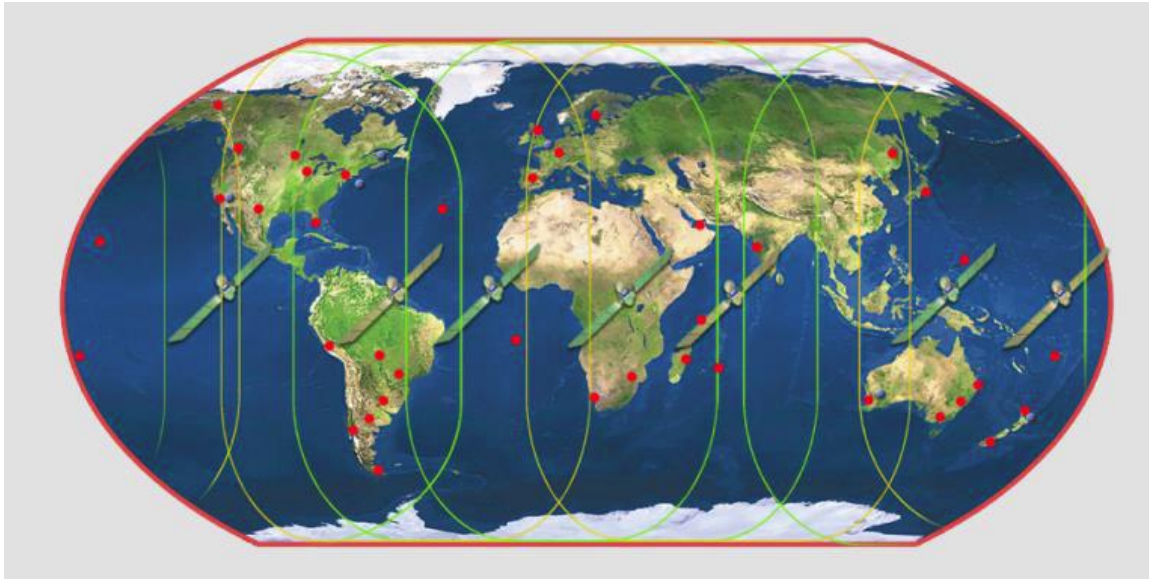


Figure 48: C-Nav<sup>®</sup> Corrections Service Coverage Map

### **C-Nav<sup>®</sup> Corrections Service Over-The-Internet (CCS OTI)**

C-Nav<sup>®</sup> Corrections Service can also be received over the Internet. This feature allows the user to request messages from a single independent NTRIP server / caster by means of an Internet Connection. The user can select between several data delivery rates (1 s, 15 s, 30 s, and 60 s) for maximum ability.

CCS OTI is available as a software option. Contact C-Nav<sup>®</sup> Support ([cnavsupport@oceanengineering.com](mailto:cnavsupport@oceanengineering.com)) for additional information.

As with the OTA delivered corrections, the CCS OTI requires a normal Authcode license to operate as well. Contact C-Nav<sup>®</sup> Authcode ([cnavauthcode@oceanengineering.com](mailto:cnavauthcode@oceanengineering.com)) to purchase a license as you normally would to access other corrections.



## **Hardware Setup and Configuration**

For information regarding the setup and configuration of CCS OTI, please send an email to Contact C-Nav<sup>®</sup> Support ([cnavsupport@oceanengineering.com](mailto:cnavsupport@oceanengineering.com)).

## Appendix D - NMEA Data Output Messages

### NMEAALM (ASCII)

This output message reports orbital data (almanac) for the specified GPS satellite, and is in compliance with NMEA-0183 Standards version 3.0.

Output Format:	\$GPALM,total,message,prn,week,health,eccentricity,reftime,inclination,ascension,axis,perigee,node,anomaly,F0clock,F1clock*checksum	
Field #	Field Name	Description
F1	total	Total number of messages (01 to 32)
F2	message	Message number (01 to 32)
F3	PRN	GPS Satellite PRN number (01 to 32)
F4	week	GPS week number (4 digits)
F5	health	SV health (ASCII hex, 2 bytes)
F6	eccentricity	Eccentricity (ASCII hex, 4 bytes)
F7	reftime	Almanac reference time (ASCII hex, 2 bytes)
F8	inclination	Inclination angle (ASCII hex, 4 bytes)
F9	ascension	Rate of right ascension (ASCII hex, 4 bytes)
F10	axis	Root of semi-major axis (ASCII hex, 2 bytes)
F11	perigee	Argument of perigee (ASCII hex, 6 bytes)
F12	node	longitude of ascension node (ASCII hex, 6 bytes)
F13	anomaly	Mean anomaly (ASCII hex, 6 bytes)
F14	F0clock	F0 clock Parameter (ASCII hex, 3 bytes)
F15	F1clock	F0 clock Parameter (ASCII hex, 3 bytes)
F16		Checksum

**Table 32: ALM Message Output Format**

Example:

`$GPALM,32,1,01,1423,00,35BF,7B,1F38,FD5B,A10D8B,78C23F,B7E3C6,379706,080,001*36`

## NMEADTM (ASCII)

This output stream reports the local geodetic datum and datum offsets from a reference datum. It is in compliance with NMEA-0183 Standards version 3.0.

**Default:** The NMEADTM message will be scheduled to display automatically before the most frequent NAV message (NMEAGGA, NMEAGLL or NMEARMC). If the frequency or any other NAV message is changed, the adjusted NMEADTM message will automatically display before the most frequent one

- If the user is running an earlier version of the software (v3.0.13 and earlier), the NMEADTM must be manually scheduled to display at the same rate as the NMEAGGA, the NMEAGLL or the NMEARMC to meet IMO and MED certification requirements.
- When the datum code is unknown (e.g. RTK mode), the output will be empty.

Field #	Field Name	Description
F1	Local datum code	Local Datum Code W84 = WGS84 W72 = WGS72 S85 = SGS85 PE90 = P90 999 = User defined
F2	Local datum subdivision code	Local datum subdivision code (if available)
F3	Lat offset	Latitude offset from reference position (in minutes)
F4	N/S	Direction of latitude (N=north, S= south)
F5	Lon offset	Longitude offset from reference position (in minutes)
F6	E/W	Direction of longitude (E= east, W= west)
F7	Altitude offset	Altitude offset from reference position (in meters)
F8	Reference datum code	Reference Datum Code W84 = WGS84 W72 = WGS72 S85 = SGS85 PE90 = P90
F9		Checksum

**Table 33: DTM Message Output Format**

- Output values depend on navigation mode and [DATUM] selection.

Navigation Mode	[DATUM] (user command)	Local Datum	Reference Datum	Offsets
Non-Diff, SBAS	DEFAULT or WGS84	W84	W84	0
	GDA94 or USERDATUM	999	W84	Offsets from WGS84
C-Nav <sup>®</sup> Correction Services	DEFAULT	999	999	0
	WGS84	W84	W84	0
	GDA94 or USERDATUM	999	W84	Offsets from WGS84
RTK, RTK-X, RTCM-code	Any	blank	blank	blank

**Table 34: DTM Message Output for Each Nav Mode**

- This message will be scheduled on change automatically on the port which NMEAGGA, NMEAGLL or NMEARMC is output. This applies to all ports except for the NTRIP port
- FYI - In the current firmware, 3.3.x, for the C-Nav3050<sup>®</sup> GNSS receiver, the NMEA DTM message is automatically scheduled at the same rate as the NAV messages (GGA, GLL, or RMC) for MED certification requirements. This may not be desirable for some users. The message can be easily turned off through the controller software.

## NMEAGBS (ASCII)

This output stream reports Receiver Autonomous Integrity Monitoring (RAIM) data. Given that a GNSS receiver is tracking enough satellites to perform integrity checks of the positioning quality of the position solution, this sentence reports the output of the process, in compliance with NMEA-0183 Standards version 3.0. The addition of Fields F9 and F10 bring this message in compliance with version 4.1 of the NMEA standard.

Output Format:	\$xxGBS,UTC,Lat,Lon,Alt,SVID,Det,Bias,StdDev*checksum (As NMEA v 3.0)	
Field#	Field Name	Description
F1	UTC	UTC time of the associated GGA or GNS fix (hhmmss.ss)
F2	Lat	Expected error in latitude (+/- 9.9)
F3	Lon	Expected error in longitude (+/- 9.9)
F4	Alt	Expected error in altitude (+/- 9.9)
F5	SVID	ID number of most likely failed satellite (01-32)
F6	Det	Probability of missed detection for most likely failed satellite (9.9)
F7	Bias	Bias estimate on most likely failed satellite (9.9 meters)
F8	StdDev	Standard deviation of bias estimate (9.9)
F9	System ID	1 for GPS, 2 for GLONASS (NMEA v4.1 only)
F10	SigID	Specific frequency likely failed for the given satellite (See <a href="#">Table 54: Signal ID</a> ) (NMEA v4.1 only)
F11		Checksum

**Table 35: GBS Message Output Format**

Example:

`$GPGBS,161816.00,0.0,-0.0,-0.0,13,0.8,0.0,0.0*6C (As NMEA v3.0)`

## NMEAGFA (ASCII)

This sentence is used to report the results of the data quality check associated with a position solution. If only a single constellation (GPS, GLONASS, etc.) is used for the reported position solution, the talker ID is GP, GL, etc. and the data pertain to the individual system. If satellites from multiple systems are used to obtain the reported position solution, the talker ID is GN and the parameters pertain to the combined solution. This provides the quality data of the position fix and is associated with the GNS sentence. This sentence is in compliance with NMEA-0183 Standards version 3.0.

Output Format:	\$xxGFA,UTC,HPL,VPL,Std_X,Std_Y,Theta,Std_H,SAL,IntStatus*c checksum	
Field#	Field Name	Description
F1	UTC	UTC time of the associated GGA or GNS fix (hhmmss.ss)
F2	HPL	Horizontal protection levels in meters (xxxx.x).
F3	VPL	Vertical protection levels in meters (xxxx.x)
F4	Std_X	Standard deviation of semi-major axis of error ellipse in meters (xxx.xx)
F5	Std_Y	Standard deviation of semi-minor axis of error ellipse in meters (xxx.xx)
F6	Theta	Orientation of semi-major axis of error ellipse (xxx.xxxx degrees from true north)
F7	Std_H	Standard deviation of altitude in meters (xxx.xx)
F8	SAL	Selected accuracy level in meters (xxxx.x)
F9	IntStatus	Integrity status: The integrity status field is a variable length character field which indicate the status of the various integrity sources. This field shall not be Null. V= Not in use S= Safe (when integrity is available and Horizontal Protection Limit (HPL) < Horizontal Alert Level (HAL) C= Caution (no integrity is available) U= Unsafe (when integrity is available and HPL > HAL)
F10		Checksum

**Table 36: GFA Message Output Format**

Example:

`$GNGFA,224229.00,0001.7,0002.9,000.43,000.22,014.4868,000.83,0010.0,SCC*0C`

- In RTK mode, fields F2, F3, F4 and F5 are zeroes. They are correct values since RTK provides very accurate solutions, beyond the resolution provided by the NMEA standard

## NMEAGGA (ASCII)

These output messages reports position and fix related status information and is in compliance with NMEA-0183 Standards version 3.0.

Output Format:	\$xxGGA,time,lat,N/S,lon,E/W,quality,used,hdop,alt,M,separation,M,age,id*checksum	
Field #	Field Name	Description
F1	time	UTC time for position fix in hours, minutes, seconds (hhmmss.ss) (000000.00 to 235959.99)
F2	Lat	Latitude in degrees and decimal minutes (ddmm.mmmmmm) (0000.000000 to 8959.999999)
F3	N/S	Direction of latitude (N = north, S = south)
F4	Lon	Longitude in degrees and decimal minutes (dddmm.mmmmmm) (00000.000000 to 17959.999999)
F5	E/W	Direction of longitude (E = east, W = west)
F6	quality	Quality of the position fix (0 to 8) 0 = fix not available, or invalid 1 = GPS SPS Mode, fix valid 2 = Differential GPS SPS Mode, fix valid 3 = GPS PPS Mode, fix valid 4 = Real Time Kinematic, fixed integers 5 = Float RTK, floating integers 6 = estimated (dead reckoning) Mode 7 = Manual input mode 8 = Simulation mode
F7	used	Number of satellites in the position fix, 00 - 12
F8	hdop	Horizontal Dilution of Precision, 1 (ideal) to > 20 (poor)
F9	Alt	Altitude above mean sea level (geoidal height) in meters, a theoretical value for practical purposes can range from -50 or so for low places on Earth, to very large positive values for the heights.
F10	M	Units for altitude (M = meters)
F11	separation	Geoidal separation: the difference between the WGS-84 earth ellipsoid surface and mean-sea-level (geoid) surface. "-" = mean-sea-level surface below WGS-84



		earth ellipsoid surface. Note: if no geiod is loaded, geoidal separation is reported as 0.
F12	M	Units for geoidal separation (M = meters)
F13	age	Time since last dGPS data was received, in seconds
F14	Id	Reference station ID number (0000 -1023)
F15		checksum

**Table 37: GGA Message Output Format**

Example:

*\$GNGGA,161611.00,3350.477102,N,11820.624805,W,2,15,0.8,8.911,M,0.000,M,10.0,0402\*42*

- When the GGA message goes invalid, the time of the last known position fix is output as is the last known position, and the quality flag in F6 is changed to “0” or invalid. This is the correct behavior as defined by international regulatory agencies.

## NMEAGLL (ASCII)

This output message reports geographic position (latitude and longitude) information and is in compliance with NMEA-0183 Standards version 3.0.

Output Format:	\$xxGLL,lat,N/S,lon,E/W,time,status,mode*checksum	
Field#	Field Name	Description
F1	lat	Latitude in degrees and decimal minutes (ddmm.mmmmm) (0000.000000 to 8959.999999)
F2	N/S	Direction of latitude (N=north, S= south)
F3	lon	Longitude in degrees and decimal minutes (dddmm.mm) (00000.000000 to 17959.999999)
F4	E/W	Direction of longitude (E= east, W= west)
F5	time	UTC time for position fix in hours, minutes, seconds (hhmmss.ss) (000000.00 to 235959.99)
F6	status	status indicator A= Data valid V= Data not valid
F7	mode	Position mode indicator A= Autonomous D= Differential E= Estimated (dead reckoning) M= Manual Input S= Simulator N= Data not valid
F8		Checksum

**Table 38: GLL Message Output Format**

Example:

*\$GPGLL,3713.870070,N,12148.058706,W,032618.00,A,D\*7C*

## NMEAGNS (ASCII)

This output message reports geographic position (latitude and longitude) information for single or combined satellite navigation systems and is in compliance with NMEA-0183 Standards version 3.0.

Output Format:	\$xxGNS,time,lat,N/S,lon,E/W,mode,used,HDOP,alt,separation,age,ID,status*checksum	
Field#	Field Name	Description
F1	Time	UTC time for position fix in hours, minutes, seconds (hhmmss.ss) (000000.00 to 235959.99)
F2	Lat	Latitude in degrees and decimal minutes (ddmm.mmmm) (0000.0000) to 8959.9999) High precision: (ddmm.mmmmmm) (0 to 8959.999999)
F3	N/S	Direction of latitude (N=north, S= south)
F4	Lon	Longitude in degrees and decimal minutes (dddmm.mmmm) (00000.0000 to 17959.9999) High precision: (dddmm.mmmmmm) (0 to 17959.999999)
F5	E/W	Direction of longitude (E= east, W= west)
F6	Mode indicator	A variable length character field with the first two characters defined: the first character indicates use of GPS satellites and the second character indicates use of GLONASS satellites. A= Autonomous D= Differential F= Float RTK N= No fix P= Precise R= Real Time Kinematic (RTK)
F7	Used	Total number of satellites in use (00-99)
F8	HDOP	Horizontal Dilution of Position, 1 (ideal) to >20 (poor)
F9	Alt	Altitude above mean sea level (geoidal height) in meters.
F10	Separation	Geoidal separation: the difference between the WGS-84 ellipsoid surface and mean-sea-level (geoid) surface. Note: If no geoid is loaded, then geoidal separation will be reported as 0.
F11	Age	Time since last dGPS data was received, in seconds.
F12	ID	Reference station ID number (0000-1023)

F13	Status	<p>Navigational status indicator</p> <p>S= Safe (If the Horizontal Position Error is less than or equal to the Selected Accuracy Level)</p> <p>C= Caution (If there is no valid Horizontal Position Error (no RAIM data))</p> <p>U= Unsafe (If the Horizontal Position Error is greater than or equal to the Selected Accuracy Level)</p> <p>V= Navigational status not valid (If there is no Nav Solution)</p>
F14		Checksum

**Table 39: GNS Message Output Format**

**Examples:**

Tracking both GPS and GLONASS satellites in Precise mode:

```
$GNGNS,232439.00,3350.4708,N,11820.6172,W,PP,16,0.8,45.0,-36.0,,,S*28
$GPGNS,232439.00,,,,,08,,,,6.0,0402,S*1B
$GLGNS,232439.00,,,,,08,,,,6.0,0402,S*07
```

Tracking both GPS and GLONASS satellites in Autonomous mode (note: one GNGNS message):

```
$GNGNS,233839.00,3350.4710,N,11820.6173,W,AA,16,0.7,45.0,-36.0,,,S*22
```

Tracking only GPS satellites in Precise mode:

```
$GPGNS,232744.00,3350.4708,N,11820.6172,W,PN,08,1.3,44.8,-36.0,,,S*0A
```

Tracking only GPS satellites in Autonomous mode:

```
$GPGNS,232939.00,3350.4708,N,11820.6172,W,AN,08,1.2,44.8,-36.0,,,U*3F
```

Tracking both GPS and GLONASS satellites in Differential mode:

```
$GNGNS,233459.00,3350.4709,N,11820.61723W,DD,16,1.2,44.1,-36.0,,,S*24
$GPGNS,233459.00,,,,,08,,,,5.0,0138,S*13
$GLGNS,233459.00,,,,,08,,,,5.0,0138,S*0F
```

**Please note:**

- Mode 0 means the residuals were used to calculate the position given in the matching GGA or GNS sentence.
- Mode 1 means the residuals were recomputed after the GGA or GNS position was computed.
- The order of the range residuals must match the order of the satellite ID numbers given in the GSA command.

## NMEAGRS (ASCII)

This output stream reports Receiver Autonomous Integrity Monitoring (RAIM) data, reporting Range Residuals in compliance with NMEA-0183 Standards version 3.0. NMEA-0183 version 4.1 are given by the addition of fields F9 and F10.

Output Format:	\$xxGRS,UTC,Mode,Res..., Res, *checksum (As NMEA v3.0)	
Field#	Field Name	Description
F1	UTC	UTC time of the associated GGA or GNS fix (hhmmss.ss)
F2	Mode	How the residuals were calculated (see notes below)
F3	Res	Up to 12 range residuals (+/- 999 meters) (See notes below)
F9	System ID	1 for GPS (GP), 2 for GLONASS (GL) (NMEA v4.1 only)
F10	Signal ID	1 for Single Mode and 0 for Dual Mode (See <a href="#">Table 54: Signal ID</a> ) (NMEA v4.1 only)
F11		Checksum

**Table 40: GRS Message Output Format**

Example:

*\$GPRGS,162404.00,0,-0.2,-0.9,-0.3,0.2,0.4,0.1,0.6,0.7,0.5,\*4F (As NMEA v3.0)*

## NMEAGSA (ASCII)

This output message reports 2D / 3D solution mode, DOP values and active satellite information, and is in compliance with NMEA-0183 Standards version 3.0. Field F7 is added to comply with version 4.1 of the NMEA standard.

Output Format:	\$xxGSA,mode,solution,used,pdop,hdop,vdop,*checksum (As NMEA v3.0)	
Field#	Field Name	Description
F1	mode	Mode M= manual (forced to operate in 2D or 3D mode) A= automatic (allowed to automatically switch between 2D/3D)
F2	solution	Solution 1= fix not available 2= 2D 3= 3D
F3	used	ID numbers of satellites used in solution.
F4	pdop	Dilution of position
F5	hdop	Horizontal dilution of position
F6	vdop	Vertical dilution of position
F7	GNID	1 for GPS (GP), 2 for GLONASS (GL) (NMEA v4.1 only)
F8		Checksum

**Table 41: GSA Message Output Format**

Example:

*\$GPGSA,A,3,03,08,13,16,20,23,25,27,,,,,2.4,1.4,1.9,1\*36 (As NMEA v3.0)*

## NMEAGST (ASCII)

This output message reports pseudo-range noise (PRN) statistic information, and is in compliance with NMEA-0183 Standards version 3.0.

Output Format:	\$xxGST,time,rms,majoraxis,minoraxis,orientation,laterr,lonerr,alterr*c checksum	
Field#	Field Name	Description
F1	time	UTC time for position fix in hours, minutes, seconds (hhmmss.ss) (000000.00 to 235959.99)
F2	rms	Total RMS standard deviation of ranges inputs to the navigation solution
F3	majoraxis	Standard deviation of semi-major axis of error ellipse in meters
F4	minoraxis	Standard deviation of semi-minor axis of error ellipse in meters
F5	orientation	Orientation of semi-major axis of error ellipse in true north degrees (0 to 180°)
F6	laterr	Standard deviation of latitude error in meters
F7	lonerr	Standard deviation of longitude error in meters
F8	alterr	Standard deviation of altitude error in meters
F9		Checksum

**Table 42: GST Message Output Format**

Example:

\$GPGST,032746.00,22236.0738,0.0552,0.0355,019.4414,0.0543,0.0368,0.0991\*6A

## NMEAGSV (ASCII)

This output message reports data associated with satellites in view, based on almanac data. Data includes PRN number, elevation, azimuth, and SNR values. Note that one GSV sentence can only provide data for up to 4 satellites, so several sentences may be required for full “satellite in view” information. The format for this message is in compliance with NMEA-0183 Standards version 3.0. The addition of Field F8 brings this message compliant to NMEA version 4.1.

Output Format:	\$xxGSV,total,message,totalsv,prn1,elev1,azim1,snr1,.....,prn4,elev4,azim4,snr4*checksum (As NMEA v3.0)	
Field#	Field Name	Description
F1	Total	Total number of messages for full information
F2	Message	Message number
F3	Totalsv	Total number of satellites in view that will be included in the sentences (up to 4 satellites per sentence)
F4	Prn	Satellite ID numbers 1-99 1-32= reserved for GPS 33-64= reserved for SBAS 65-96= reserved for GLONASS
F5	Elev	Elevation for the corresponding satellite in degrees (0 to 90)
F6	Azim	Azimuth for the corresponding satellite in degrees (0 to 359)
F7	Snr	Signal to Noise ratio for the corresponding satellite
F8	Signal ID	1 for L1CA, and 0 for L1+L2 (See <a href="#">Table 54</a> ) (NMEA v4.1 only)
F9		Checksum

**Table 43: GSV Message Output Format**

Examples (As NMEA v3.0):

```
$GPGSV,3,1,11,13,68,347,50,23,66,87,50,25,56,40,0,27,45,277,46*78
$GPGSV,3,2,11,16,23,44,45,20,22,174,36,08,21,259,38,03,21,103,36*43
$GPGSV,3,3,11,19,09,128,32,04,05,266,34,02,01,301,30,,,,*44
```

Example of NMEA v4.1 format:

```
$GPGSV,3,1,10,26,20,048,47,06,19,316,46,,,,,,,,,1*66
$GPGSV,3,2,10,18,71,254,53,21,65,360,51,29,46,145,52,15,43,083,51,0*6C
$GPGSV,3,3,10,22,29,237,49,30,22,265,50,16,21,298,48,03,04,320,43,0*69
$GLGSV,2,1,07,81,77,060,54,66,66,018,54,67,56,229,51,82,34,331,51,1*7D
$GLGSV,2,2,07,88,28,132,49,65,12,034,,68,05,219,46,,,,,1*4C
```



## NMEAMLA (ASCII)

This output stream reports orbital data (almanac) for the specified GLONASS satellite and is in compliance with NMEA-0183 Standards version 3.0.

Output Format:	\$GLMLA,total,Sentence,SID,Na,CH,eccentricity,Tn,perigee,tMSB,dtnaco,tascmd,Long_asc,Corr_incl,tLSB,tss*checksum	
Field#	Field Name	Description
F1	total	Total number of sentences (24)
F2	Sentence	Sentence number (01 to 24)
F3	SID	Satellite ID (slot) number (01 to 24)
F4	Na	Calendar day count within the four year period beginning with the previous leap year
F5	CH	Cn(a) and Hn(a), generalized health of the satellite (0x80) and carrier frequency number (0x7F)
F6	eccentricity	Eccentricity (S32)
F7	Tn	DOT, rate of change of the draconic circulating time (S32)
F8	perigee	Argument of perigee (S32)
F9	tMSB	16 MSB of system timescale correction (U16)
F10	dtnaco	Correction of average value of the draconic circulating time (S32)
F11	tascmd	Time of the ascension node, almanac reference time (S32)
F12	Long_asc	Greenwich longitude of the ascension node (S32)
F13	Corr_incl	Correction to the average value of the inclination angle (S32)
F14	tLSB	12 LSB of system timescale correction (U16)
F15	tss	Course value of the timescale shift (S32)
F16		Checksum

**Table 44: MLA Message Output Format**

Example:

*\$GLMLA,24,1,65,568,18,0000,0000,0000,8000,000000,000000,000000,000000,16F,000\*18*

## NMEARMC (ASCII)

This output message reports minimum recommended GPS information, including position, velocity, and time information, and is in compliance with NMEA-0183 Standards version 3.0. The update of Field F12 and the addition of Field F13 comply with NMEA version 4.1.

Output Format:	\$GPRMC,time,status,lat,N/S,lon,E/W,speed,course,date,variation,E/W,mode*checksum (As NMEA v3.0)	
Field#	Field Name	Description
F1	time	UTC time for position fix in hours, minutes, seconds (hhmmss.ss) (000000.00 to 235959.99)
F2	status	Status V= void (invalid data) A= active (valid data) Value set to V for all modes listed is F12 except for A and D
F3	lat	Latitude in degrees and decimal minutes (ddmm.mmmmmm) (0000.000000 to 8959.999999)
F4	N/S	Direction of latitude (N=north, S= south)
F5	lon	Longitude in degrees and decimal minutes (dddmm.mmmmmm) (00000.000000 to 17959.999999)
F6	E/W	Direction of longitude (E= east, W= west)
F7	speed	Speed over ground in knots (the product puts no upper limit on this value, reporting the actual data, which itself is likely limited to an extreme upper limit of mach 3 or so)
F8	course	Course over ground in degrees true (0 to 359.9)
F9	date	Current date in the format: ddmmyy
F10	Variation	Magnetic variation in degrees (0-359.99)
F11	E/W	Direction of variation (E= east, W= west)
F12	mode	Position mode indicator A= Autonomous D= DGPS E= Estimated (dead reckoning) S= Simulator N= Data not valid

		<p>P= Precise (NMEA v4.1 only)</p> <p>R= RTK solutions (except RTK Float) (NMEA v4.1 only)</p> <p>F= Float (NMEA v4.1 only)</p>
F13	Nav Status	<p>Navigational Status Indicator (NMEA v4.1 only)</p> <p>S= Safe.</p> <p>C= Caution.</p> <p>U= Unsafe.</p> <p>V= Not valid</p>
F14		Checksum

**Table 45: RMC Message Output Format**

Example:

*\$GPRMC,033341.00,A,3713.870096,N,12148.058706,W,0.03,0.0,180407,0.0,E,D\*19*  
 (As NMEA v3.0)

## NMEARRE (ASCII)

This output stream report Receiver Autonomous Integrity Monitoring (RAIM) data, reporting Range Residual Errors. Note that this command is not defined in NMEA-0183 Standards version 3.0.

Output Format:	\$xxRRE,count,<SVID,Res>...,Herr,Verr*checksumrms,majoraxis,minoraxis,orientation,lateer,loner,alterr*checksum	
Field#	Field Name	Description
F1	count	Count of satellites included here (01 - 12)
F2	SVID	Satellite ID for this residual (+/- 9999)
F3	Res	Residual for this satellite (+/- 9999)
F4	Herr	Horizontal position error (+/- 9999)
F5	Verr	Vertical position error (+/- 9999)
F6		Checksum

**Table 46: RRE Message Output Format**

Example:

```
$GPRRE,10,03,-0.2,07,-0.1,08,0.3,10,-0.5,13,-0.3,19,0.5,23,-0.5,25,0.5,27,0.6,28,0.0,000.1,000.1*7E
```

## NMEATTM (ASCII)

This output stream is only supported on MBRTK Rover and displays baseline information including the baseline distance, bases speed and direction and closest point of approach based on NMEA-0183 Standards version 4.0.

Output Format:	\$xxTTM,Base Number,Base Distance,...,UTC, Type of Acq*checksum	
Field#	Field Name	Description
F1	Base Number	Last 2 digits of the MBRTK BaseID
F2	Base Distance	3D Baseline Distance (m)
F3	Base Bearing	Base 2D bearing from the Rover, N=0°, E=90° (0°-360°)
F4	Bearing Units	True or Relative (T/R), R is not supported
F5	Base Speed	3D speed of the Base (m/s)
F6	Base Course	Base 2D direction, N=0°, E=90° (0°-360°)
F7	Course Units	True or Relative (T/R), R is not supported
F8	CPA Dist	Distance at the closest point of approach. This is how close the Base and Rover would ever get given their course and speed in 2D (m)
F9	CPA Time	Time until 2D CPA -means it has passed (min)
F10	Speed/Dist Units	Units of measurements used: K= Kilometers (metric, used) N= Knots (unused) S= Statute miles (unused)
F11	Base Name	Full Base ID
F12	Base Link Status	Tracking status of the Base: L= Lost track of Base (Non RTK Mode) Q= Query, acquiring (RTK Float) T= Tracking (RTK Fixed)
F13	Tracking Ref	R if base is used to determine own position (always true)
F14	UTC	Standard UTC time (hhmmss.ss)
F15	Type of Acquisition	A= Automatic (used) M= Manual (unused)
F16		Checksum

**Table 47: TTM Message Output Format**

Example:

`$GNRTM,30,16.75,134.27,T,0.03,34.96,T,15.99,2.63,K,530,T,R,201345.00,A*45`

***Please note:***

There will be some noise in the base velocity due to the baseline velocity of the rover. This noise will increase if the rover is moving in a non-linear path.



The conventional use of the TTM message is to carry the information on a “tracked” target generated by the ARPA section of the radar on the ship where it is being used. Usual usage on the ship is to convey the target information to an ECDIS or ECS for display on the navigational chart. However when the TTM message is used from the GNSS rover receiver, it is not intended to be used in this manner. An example of the intended use is to give MBRTK users ASCII access to the rover-base distance; for example, where the rover is mounted on a seismic cable tail buoy with TTM message sent back to the vessel by radio.

## NMEA VTG (ASCII)

This output message reports velocity and course over ground information, and is in compliance with NMEA-0183 Standards version 3.0.

Output Format:	\$xxVTG,track,T,track,M,speed,N,speed,K,mode*checksum (As NMEA v3.0)	
Field#	Field Name	Description
F1	track	True track (course over ground) in degrees (0 to 359.9)
F2	T	True track orientation (T= true north)
F3	track	Magnetic track in degrees (0 to 359.9)
F4	M	Magnetic track orientation (M= magnetic north)
F5	speed	Speed over ground in knots (0 to 1000)
F6	N	Speed over ground units (N= knots)
F7	speed	Speed over ground in kilometers (0 to 1852)
F8	K	Speed over ground units (K= km/h (kilometers/ hour))
F9	mode	Position mode indicator A= Autonomous D= DGPS E= Estimated (dead reckoning) S= Simulator N= Data not valid P= Precise (NMEA v4.1 only)
F10		Checksum

**Table 48: VTG Message Output Format**

Example:

`$GPVTG,0.0,T,,M,0.03,N,0.06,K,D*0D` (As NMEA v3.0)

## NMEA ZDA (ASCII)

This output message reports date and time information, and is in compliance with NMEA-0183 Standards version 3.0.

Output Format:	\$xxZDA,time,day,month,year,offset_hour,offset_min*checksum	
Field#	Field Name	Description
F1	time	UTC time for position fix in hours, minutes, seconds (hhmmss.ss) (000000.00 to 235959.99)
F2	day	Current day (01 to 31)
F3	month	Current month (01 to 12)
F4	year	Current year (0000 to 9999)
F5	Offset_hour	Local zone hours (-13 to +13)
F6	Offset_min	Local zone minutes (00 to 59)
F7		Checksum

**Table 49: ZDA Message Output Format**

Example:

*\$GPZDA,035751.00,18,04,2007,00,00\*6B*



## NMEAPNCTDTM (ASCII)

This output stream reports local geodetic datum and datum offsets from a reference datum. It is in compliance with NMEA-0183 Standards version 3.0. The difference between NMEADTM and NMEAPNCTDTM is the added datum codes for ITRF and GDA94. When the datum code is unknown (e.g. RTK mode), the output will be empty.

Field#	Field Name	Description
F1	Local datum code	Local Datum Code W84 = WGS84 W72 = WGS72 S85 = SGS85 PE90 = P90 999 = User defined ITR = ITRF G94 = GDA94
F2	Local datum subdivision code	Local datum subdivision code (if available)
F3	Lat offset	Latitude offset from reference position (in minutes)
F4	N/S	Direction of latitude (N=north, S= south)
F5	Lon offset	Longitude offset from reference position (in minutes)
F6	E/W	Direction of longitude (E= east, W= west)
F7	Altitude offset	Altitude offset from reference position (in meters)
F8	Reference datum code	Reference Datum Code W84 = WGS84 W72 = WGS72 S85 = SGS85 PE90 = P90 ITR = ITRF G94 = GDA94
F9		Checksum

Table 50: PNCTDTM Message Output Format

Navigation Mode	[DATUM] (user command)	Local Datum	Reference Datum	Offsets
Non-Diff, SBAS	DEFAULT or WGS84	W84	W84	0
	GDA94	G94	W84	Offsets from WGS84
	USERDATUM	999	W84	Offsets from WGS84
C-Nav <sup>®</sup> Corrections Service	DEFAULT	ITR	ITR	0
	WGS84	W84	W84	0
	GDA94	G94	W84	Offsets from WGS84
	USERDATUM	999	W84	Offsets from WGS84
RTK, RTK-X, RTCM-code	Any	blank	blank	blank

**Table 51: PNCTDTM Message Output for Each Nav Mode**

## NMEAPNCTGGA (ASCII)

This message reports position and fix related status information. It is a C-Nav<sup>®</sup> proprietary NMEA type message, and it conforms to the header, checksum and electrical characteristics of a standard NMEA string, but is not recognized by the NMEA governing body as an officially sanctioned message.

Output Format:	\$PNCTGGA,time,lat,N/S,lon,E/W,quality,used,hdop,alt,M,separation,M,age,ld*checksum	
Field #	Field Name	Description
F1	time	UTC time for position fix in hours, minutes, seconds (hhmmss.ss) (000000.00 to 235959.99)
F2	Lat	Latitude in degrees and decimal minutes (ddmm.mmmmm) (0000.000000 to 8959.999999)
F3	N/S	Direction of latitude (N = north, S = south)
F4	Lon	Longitude in degrees and decimal minutes (dddmm.mmmmm) (00000.000000 to 17959.999999)
F5	E/W	Direction of longitude (E = east, W = west)
F6	quality	Quality of the position fix (0 to 8) 0 = fix not available, or invalid 1 = GPS SPS Mode, fix valid 2 = Differential GPS SPS Mode, fix valid 3 = GPS PPS Mode, fix valid 4 = Real Time Kinematic, fixed integers 5 = Float RTK, floating integers 6 = estimated (dead reckoning) Mode 7 = Manual input mode 8 = Simulation mode
F7	used	Number of satellites in the position fix, 00 - 12
F8	hdop	Horizontal Dilution of Precision, 1 (ideal) to > 20 (poor)
F9	Alt	Altitude above mean sea level (geoidal height) in meters, a theoretical value for practical purposes can range from -50 or so for low places on Earth, to very large positive values for the heights.
F10	M	Units for altitude (M = meters)
F11	separation	Geoidal separation: the difference between the WGS-84

		earth ellipsoid surface and mean-sea-level (geoid) surface. “-“ = mean-sea-level surface below WGS-84 earth ellipsoid surface. Note: if no geoid is loaded, geoidal separation is reported as 0.
F12	M	Units for geoidal separation (M = meters)
F13	age	Time since last dGPS data was received, in seconds
F14	ld	4-digit integer as denoted as XXYY, where XX is the satellite beam in use (See <a href="#">Table 53</a> ), and YY is the GPS correction signal type being used (See <a href="#">Table 55</a> )
F15		checksum

**Table 52: PNCTGGA Message Output Format**

Example:

*\$PNCTGGA,032215.00,3713.870081,N,12148.058703,W,2,08,1.8,59.608,M,-33.440,M,8.0,0122\*47*

Network	Code (XX)	Designation	Satellite ID	Longitude	Uplink Site
Net 1	00	N/A	N/A	Unknown	Unknown
	01	4F3	402	98.0W	Laurentides
	02	4F2	525	25E	Burum
	03	4F1	643	143.5E	Auckland
Net 2	04	3F3	678	178E	Santa Paula
	05	3F4	446	54W	Southbury
	06	3F1	564	64E	Perth
	07	3F2	484	15.5W	Southbury
	09	N/A	N/A	Manual Override	

**Table 53: Beam Selection ID**

System	Signal ID	Signal Channel
GPS	0	All Signals
	1	L1 C/A
	2	L1 P(Y)
	3	L1 M
	4	L2 P(Y)
	5	L2C-M
	6	L2C-L
	7	L5-I
	8	L5-Q
	9-F	Reserved
GLONASS	0	All Signals
	1	G1 C/A
	2	G1 P
	3	G2 C/A
	4	GLONASS (M) G2 P
	5-F	Reserved

**Table 54: Signal ID**

ID (YY)	GPS Correction Signal
00	Non dGPS
01	dGPS, RTCM type 1 (GPS-code); and type 31 (GLONASS – code) or type 9 (GPS – code); and type 34 (GLONASS partial correction set – code), Single Freq. and Dual Freq.
02	WAAS/EGNOS, Single Freq. (GPS)
03	WAAS/EGNOS, Dual Freq. (GPS)
04	Reserved
05	Reserved
06	C-Nav® Correction Services (CCS), Single Freq. (no “Tide” Adjustment) (GPS)
07	Reserved
08	Reserved
09	Reserved
10	dGPS/dGLONASS, RTCM type 1 or 9 and 31 or 34, Dual Freq.
11	C-Nav® Correction Services (CCS), Dual Freq. (no “Tide” Adjustment) (GPS)
12	Code base Nav, Single Freq. NCT Proprietary Format
13	Code base Nav, Single Freq. RTCM 18/19 (GPS and GLONASS)
14	Code base Nav, Single Freq. RTCM 20/21 (GPS and GLONASS)
15	Code base Nav, Single Freq. CMR (GPS and GLONASS)
16	Code base Nav, Dual Freq. NCT Proprietary Format (GPS and GLONASS)
17	Code base Nav, Dual Freq. RTCM 18/19 (GPS and GLONASS)
18	Code base Nav, Dual Freq. RTCM 20/21 (GPS and GLONASS)
19	Code base Nav, Dual Freq. CMR (GPS and GLONASS)
20	RTK Mode, NCT Proprietary Format 5e/5c (GPS and GLONASS) or 5b/5c (GPS)
21	RTK Mode, RTCM 18/19 (GPS and GLONASS)
22	RTK Mode, RTCM 20/21 (GPS and GLONASS)
23	RTK Mode, CMR (GPS and GLONASS)
24	C-Nav® Correction Services (CCS), Single Freq., Adjusted for “Tides” (GPS)
25	C-Nav® Correction Services (CCS), Dual Freq., Adjusted for “Tides” (GPS)

26	RTK Extend Active (C-Nav <sup>®</sup> Correction Services filling in for missing RTK epochs) (GPS)
33	GNSS, Single Freq., no "Tides"
34	GNSS, Dual Freq., no "Tides"
35	GNSS, Single Freq., Adjusted for "Tides"
36	GNSS, Dual Freq., Adjusted for "Tides"

**Table 55: Navigation Mode**

## NMEAPNCTGST (ACSII)

This message satisfies the UKOOA compliance requirements by starting with the standard NMEA GST message and scaling all error statistics by 1.96, and by adding a value for the F-Test of Unit Variance.

Output Format:	\$PNCTGST,time,rms,majoraxis,minoraxis,orientation,lateer,loner,alterr,fisher*checksum	
Field#	Field Name	Description
F1	time	UTC time for position fix in hours, minutes, seconds (hhmmss.ss) (000000.00 to 235959.99)
F2	rms	Total RMS standard deviation of ranges inputs to the navigation solution
F3	Majoraxis*	Standard deviation of semi-major axis of error ellipse in meters
F4	Minoraxis*	Standard deviation of semi-minor axis of error ellipse in meters
F5	orientation	Orientation of semi-major axis of error ellipse in true north degrees (0 to 180°)
F6	Laterr*	Standard deviation of latitude error in meters
F7	Loner*	Standard deviation of longitude error in meters
F8	Alter*	Standard deviation of altitude error in meters
F9	fisher	Fisher Test Result
F10		Checksum

**Table 56: PNCTGST Message Output Format**

\*Indicates the result is scaled by 1.96. This output stream reports pseudo-range noise statistic information, and is in compliance with NMEA-0183 Standards version 3.0.

Examples:

*\$GNGST,192518.00,0.3762,0.1054,0.0953,074.8583,0.0960,0.1048,0.2168\*7A*

*\$PNCTGST,193028.00,0.2993,0.1722,0.1448,084.7181,0.1451,0.1720,0.3391,1\*65*



## NMEAPNCTMDE (ASCII)

This output stream reports the Marginally Detectable Error (MDE) generated by the receiver as part of the self-monitoring duties performed to support Receiver Autonomous Integrity Monitoring (RAIM). It is a C-Nav<sup>®</sup> proprietary NMEA type message, and it conforms to the header, checksum and electrical characteristics of a standard NMEA string, but is not recognized by the NMEA governing body as an officially sanctioned message.

Output Format:	\$PNCTMDE,time,svid,Type,bias,mde,laterr,longerr,alterr,*checksum	
Field#	Field Name	Description
F1	time	UTC time for position fix in hours, minutes, seconds (hhmmss.ss) (000000.00 to 235959.99)
F2	svid	The GNSS svid
F3	Type	Measurement type: 0 = CA, 1 = P1, 2 = L1, 3 = P2, 4 = L2, 5 = RC Code, 6 = RC PHASE
F4	bias	Standardized bias which is noncentrality parameter for w-test
F5	mde	MDE in meters
F6	laterr	Expected error in latitude (meters)
F7	longerr	Expected error in longitude (meters)
F8	alterr	Expected error in altitude (meters)
F9		Checksum

**Table 57: PNCTMDE Message Output Format**

Example:

*\$PNCTMDE,165535.00,,,,,,\*6A*

## NMEAPNCTSET (ASCII)

This output message reports C-Nav<sup>®</sup> proprietary SET (Solid Earth Tides), PT (Polar Tides) and OL (Ocean Loading) values. It is a C-Nav<sup>®</sup> proprietary NMEA type message, and it conforms to the header, checksum and electrical characteristics of a standard NMEA string, but is not recognized by the NMEA governing body as an officially sanctioned message.

Output Format:	\$PNCTSET,time,SET_dN,SET_dE,SET_dU,PT_dN,PT_dE,PT_dU,OL_dN,OL_dE,OL_dU*checksum	
Field#	Field Name	Description
F1	time	UTC time for position fix in hours, minutes, seconds (hhmmss.ss) (000000.00 to 235959.99)
F2	SET_dN	Solid earth tides, delta North (meters)
F3	SET_dE	Solid earth tides, delta East (meters)
F4	SET_dU	Solid earth tides, delta Up (meters) (range TBD)
F5	PT_dN	Polar Tides, delta North (meters) (range TBD)
F6	PT_dE	Polar Tides, delta East (meters) (range TBD)
F7	PT_dU	Polar Tides, delta Up (meters) (range TBD)
F8	OL_dN	Ocean Loading, delta North (meters) (range TBD)
F9	OL_dE	Ocean Loading, delta East (meters) (range TBD)
F10	OL_dU	Ocean Loading, delta Up (meters) (range TBD)
F11		Checksum

**Table 58: PNCTSET Message Output Format**

Example:

`$PNCTSET,214040.00,-0.060,-0.018,0.110,,,,,*47`

## Appendix E - L-Band Correction Signals

The C-Nav3050® GNSS receiver can obtain C-Nav® Corrections Service (CCS) corrections from six separate and independent geostationary communication satellites.

The Satellite-Based Augmentation System (SBAS) signals obtained from geostationary communication satellites are selected by GPS L1 PRN ID.

The L-Band identifiers for the tracking and decoding of the C-Nav® Corrections Service corrections are as follows:

L-Band ID	SV Name	Network	C-NavC <sup>1</sup> C-NavC <sup>2</sup>	SBAS	Geo-stationary Position
402	INMARSAT-4-F3	Net-1	YES	NO	98° W
525	INMARSAT-4-F2	Net-1	YES	NO	25° E
643	INMARSAT-4-F1	Net-1	YES	NO	143.5° E
678	INMARSAT-3-F3	Net-2	YES	NO	178° E
446	INMARSAT-3-F4	Net-2	YES	NO	54° W
564	INMARSAT-3-F1	Net-2	YES	NO	64° E
484	INMARSAT-3-F2	Net-2	YES	NO	15.5° W
PRN 120	Inmarsat-3-F2 / AOR-E	NA	NO	EGNOS	15.5° W
PRN 124	ARTEMIS	NA	NO	EGNOS	21.5° E
PRN 126	Inmarsat-3-F5 / IOR-W	NA	NO	EGNOS	25° E
PRN 127	Inmarsat-4-F1 / IOR	NA	NO	GAGAN	82° E
PRN 129	MTSAT-1R	NA	NO	MSAS	140° E
PRN 137	MTSAT-2	NA	NO	MSAS	145° E
PRN 135	Intelsat Galaxy XV	NA	NO	WAAS	133° W
PRN 138	TeleSat Anik F1R	NA	NO	WAAS	107.3° W

**Table 59: L-Band Correction Signals\***

\*Refer to *Appendix C, Tables C1 & C2* for information on changes to Asia/Pacific Network satellites based on C-Nav3050® GNSS receiver firmware version.



---

## Appendix G - Standards

### Standards:

BS EN 61108 – 2003  
BS EN 60945: 2002 (inc Corr.1:2008)  
BS EN 61162-1: 2011

### IMO Resolution

MSC.191(79)  
MSC.112(73)  
A.694(17)

## Appendix H - Software License Agreement

### Software License Agreement for C-Nav, A Division of Oceaneering International, Inc. C-Nav3050® Receiver.

IMPORTANT – READ CAREFULLY: THIS SOFTWARE LICENSE AGREEMENT IS A LEGAL CONTRACT BETWEEN YOU AND THE LICENSOR C-NAV, A DIVISION OF OCEANEERING INTERNATIONAL, INC. ("LICENSOR" OR "C-NAV") AND GOVERNS YOUR USE OF THE C-NAV3050 GNSS™ RECEIVER (THE "RECEIVER"). AN ADDITIONAL *END-USER LICENSE AGREEMENT ("EULA") IS REQUIRED FOR USE OF THE C-NAV3050™ GPS CORRECTIONS SERVICE.*

*BY ACTIVATING OR OTHERWISE USING THE RECEIVER, YOU ARE ACCEPTING AND AGREEING TO THE TERMS OF THIS LICENSE AGREEMENT WITH RESPECT TO THE SOFTWARE (THE "SOFTWARE") THAT HAS BEEN PRE-INSTALLED ON YOUR RECEIVER OR PROVIDED BY C-NAV. YOU AGREE THAT THIS SOFTWARE LICENSE AGREEMENT, INCLUDING THE WARRANTY DISCLAIMERS, LIMITATIONS OF LIABILITY AND TERMINATION PROVISIONS BELOW, IS BINDING UPON YOU, AND UPON ANY COMPANY ON WHOSE BEHALF YOU USE THE SOFTWARE, AS WELL AS THE EMPLOYEES OF ANY SUCH COMPANY (COLLECTIVELY REFERRED TO AS "YOU" IN THIS SOFTWARE LICENSE AGREEMENT). IF YOU DO NOT AGREE TO THE TERMS OF THIS AGREEMENT, OR IF YOU ARE NOT AUTHORIZED TO ACCEPT THESE TERMS ON BEHALF OF YOUR COMPANY OR ITS EMPLOYEES, PLEASE DISCONTINUE ACTIVATION OR USE OF THE RECEIVER. THIS LICENSE AGREEMENT REPRESENTS THE ENTIRE AGREEMENT CONCERNING THE SOFTWARE BETWEEN YOU AND THE LICENSOR AND IT REPLACES ANY PRIOR PROPOSAL, REPRESENTATION, OR UNDERSTANDING BETWEEN YOU AND THE LICENSOR.*

1. *Description of Software.* Your RECEIVER comes with all Software pre-installed or on the memory device accompanying the RECEIVER or if Software is purchased separately from the RECEIVER it is delivered on a memory device shipped pursuant to such separate purchase. License fees for your use of some features of the Software are included in the purchase price for the RECEIVER when purchased with the RECEIVER. License fees for Software purchased separately from the RECEIVER must be paid for separately. Use of other features of the Software requires an additional payment of license fees, for which you will receive an activation license ("Activation License") that, when entered into the RECEIVER – following the

instructions supplied in the User Manual(s) – will make those features operational. You are responsible for maintaining the confidentiality of all Activation Licenses and will not disclose them to any third party or permit any third party to use them without paying the applicable license fees.

2. *License.* Licensor hereby grants to you, and you accept, a non-exclusive license to use the Software in machine-readable, object code form, only as authorized in this License Agreement and the applicable provisions of the User Manual(s), which you agree to review carefully prior to using the Software. The Software may be used only on the RECEIVER in which it was initially installed or for which it was initially purchased; or, in the event of the inoperability of that RECEIVER, on a replacement RECEIVER provided to you by an authorized dealer pursuant to the Limited Warranty of Section 5. You agree that you will not assign, sublicense, transfer, pledge, lease, rent, or share your rights under this License Agreement, except that you may permanently transfer all of your rights under this License Agreement in connection with the sale of the RECEIVER on which the Software covered by this Agreement is installed. Please consult the Open Source Software License appendix for further information concerning additional licenses, rights, or responsibilities associated with any Open Source Software components which may be included with this Software.
3. *Licensor's Rights.* You acknowledge and agree that the Software is proprietary to Licensor and is protected under copyright law. You further acknowledge and agree that all right, title, and interest in and to the Software, including associated intellectual property rights, are and shall remain with Licensor. This License Agreement does not convey to you any title or interest in or to the Software, but only a limited right of use revocable in accordance with the terms of this License Agreement. You agree that you will not: (a) reverse assemble, reverse compile, modify, or otherwise translate the Software, or attempt to defeat the copyright protection and application enabling mechanisms therein; (b) copy or reproduce the Software; or, (b) remove or obliterate any copyright, trademark or other proprietary rights notices from the Software. You also agree not to permit any third party acting under your control to do any of the foregoing.
4. *License Fees.* The license fees paid by you are paid in consideration of the licenses granted under this License Agreement.
5. *Limited Warranty.* Licensor warrants, for your benefit alone and not for the benefit of any other party, that during the "*Warranty Period*" defined below, the Software will operate substantially in accordance with the applicable functional specifications ("*Specifications*") set forth in the User Manual(s). If, prior to expiration of the Warranty Period, the Software fails to perform substantially in accordance with the Specifications, you may return the

RECEIVER to the place of purchase for repair or replacement of the non-performing Software. As used in this Agreement, the "*Warranty Period*" is 12 months from the date you take delivery of the Receiver.

6. **DISCLAIMER OF WARRANTIES.** YOU HEREBY AGREE THAT THE LIMITED WARRANTY PROVIDED ABOVE (THE "*LIMITED WARRANTY*") CONSTITUTES YOUR SOLE AND EXCLUSIVE REMEDY FOR ANY PROBLEM WHATSOEVER WITH THE SOFTWARE. EXCEPT AS PROVIDED IN THE LIMITED WARRANTY, THE SOFTWARE IS LICENSED "AS IS," AND LICENSOR, ITS AFFILIATES AND THIRD PARTY SUPPLIERS EXPRESSLY DISCLAIM AND YOU EXPRESSLY WAIVE, RELEASE AND RENOUNCE ALL WARRANTIES ARISING BY LAW OR OTHERWISE WITH RESPECT TO THE SOFTWARE, INCLUDING, BUT NOT LIMITED TO: ANY IMPLIED WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE; ANY IMPLIED WARRANTY ARISING FROM COURSE OF PERFORMANCE, COURSE OF DEALING OR TRADE USAGE; ANY WARRANTY OF TITLE OR NON-INFRINGEMENT; AND, ANY OTHER WARRANTY ARISING UNDER ANY THEORY OF LAW, INCLUDING TORT, NEGLIGENCE, STRICT LIABILITY, CONTRACT OR OTHER LEGAL OR EQUITABLE THEORY. NO REPRESENTATION OR OTHER AFFIRMATION OF FACT INCLUDING, BUT NOT LIMITED TO, STATEMENTS REGARDING SUITABILITY FOR USE, SHALL BE DEEMED TO BE A WARRANTY BY LICENSOR OR ANY OF ITS AFFILIATES OR THIRD PARTY SUPPLIERS. LICENSOR DOES NOT WARRANT THAT THE SOFTWARE IS ERROR-FREE OR WILL OPERATE WITHOUT INTERRUPTION.
  
7. **LIMITATION OF LIABILITY.** EXCEPT AS SET FORTH IN THE LIMITED WARRANTY, UNDER NO CIRCUMSTANCES SHALL LICENSOR, ITS AFFILIATES OR ITS THIRD PARTY SUPPLIERS BE LIABLE TO YOU OR TO ANY THIRD PARTIES FOR DIRECT, INDIRECT, INCIDENTAL OR CONSEQUENTIAL DAMAGES OF ANY KIND, INCLUDING ANY LOSS OR DAMAGE CAUSED BY THE SOFTWARE; ANY PARTIAL OR TOTAL FAILURE OF THE SOFTWARE; PERFORMANCE, NONPERFORMANCE OR DELAYS IN CONNECTION WITH ANY INSTALLATION, MAINTENANCE, WARRANTY OR REPAIRS OF THE SOFTWARE, DAMAGE TO PROPERTY, LOSS OF PROFITS, LOSS OF BUSINESS OR LOSS OF GOODWILL, LOSS OF USE OF EQUIPMENT OR SERVICES OR DAMAGES TO BUSINESS OR REPUTATION ARISING FROM THE PERFORMANCE OR NON-PERFORMANCE OF ANY ASPECT OF THIS AGREEMENT, WHETHER IN CONTRACT, TORT OR OTHERWISE, AND WHETHER OR NOT LICENSOR, ITS AFFILIATES OR ITS THIRD PARTY SUPPLIERS HAVE BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES. IN NO EVENT SHALL LICENSOR'S CUMULATIVE LIABILITY



TO YOU OR TO ANY OTHER PARTY FOR ANY LOSSES OR DAMAGES RESULTING FROM ANY CLAIMS, LAWSUITS, DEMANDS, OR ACTIONS ARISING FROM OR RELATING TO USE OF THE SOFTWARE EXCEED YOUR TOTAL PAYMENT FOR THE RECEIVER AND FOR THE LICENSE OF THE SOFTWARE.

8. *Software Maintenance.* Licensor may, at its sole option, offer you maintenance of the Software, even though the Warranty Period (as defined above) has expired. Such maintenance may include providing modifications, corrections or enhancements ("*Upgrades*") to the Software and/or the applicable User Manual(s). Licensor reserves the right, in its sole discretion, to charge you for maintenance (except in cases where corrections are provided under the Limited Warranty). Your acceptance of this License Agreement constitutes your agreement that any Upgrades will be deemed included in the Software as defined in this License Agreement and that they shall be governed by the terms and conditions applicable to the Receiver Software under this License Agreement.
9. *Termination of License.* Licensor may terminate the license granted under this Agreement upon written notice of termination provided to you if you violate any material term of this Agreement pertaining to your use of the Software or Licensor's rights, including, without limitation, the provisions of Sections 2 and 3 above.
10. *Compliance with Law.* You agree that you will use the Software in accordance with United States law and the laws of the country in which you are located, as applicable, including foreign trade control laws and regulations. The Software may be subject to export and other foreign trade controls restricting re-sales and/or transfers to other countries and parties. By accepting the terms of this Agreement, you acknowledge that you understand that the Software may be so controlled, including, but not limited to, by the Export Administration Regulations and/or the foreign trade control regulations of the Treasury Department of the United States. Any other provision of this Agreement to the contrary notwithstanding, you agree that the Software will not be resold, re-exported or otherwise transferred. The Software remains subject to applicable U.S. laws.
11. *Indemnification.* You agree to defend, indemnify and hold Licensor, its affiliates and third party supplier, and their officers, directors, employees, agents and representatives (each an "*Indemnified Party*"), harmless from and against all claims, demands proceedings, injuries, liabilities, losses, or costs and expenses (including reasonable legal fees) brought by any third party against any such persons arising from or in connection with your use of the Software, regardless of whether such losses are caused, wholly or partially, by any negligence, breach of contract or other fault of an Indemnified Party.

12. *Trademark.* C-Nav3050<sup>™</sup> is a trademark of Licensor. No right, license, or interest to such trademark is granted hereunder, and you agree that no such right, license, or interest shall be asserted by you with respect to such trademark.
13. *Costs of Litigation.* If any claim or action is brought by either party to this License Agreement against the other party regarding the subject matter hereof, the prevailing party shall be entitled to recover, in addition to any other relief granted, reasonable attorney fees and expenses of litigation.
14. *Severability and Waiver.* Should any term of this License Agreement be declared void or unenforceable by any court of competent jurisdiction, such declaration shall have no effect on the remaining terms hereof. The failure of either party to enforce any rights granted hereunder or to take action against the other party in the event of any breach hereunder shall not be deemed a waiver by that party as to subsequent enforcement of rights of subsequent actions in the event of future breaches.
15. *Language Clause.* If you are a resident of Canada at the time you accept this License Agreement, then the parties hereby acknowledge that they have required this License Agreement, and all other documents relating hereto, be drawn up in the English language only. Les parties reconnaissent avoir demandé que le présent contrat ainsi que toute autre entente ou avis requis ou permis à être conclu ou donné en vertu des stipulations du présent contrat, soient rédigés en langue anglaise seulement. If you are a resident of any country other than the United States, Canada, Great Britain, Australia or New Zealand then you agree as follows: there may be a translated version of this License Agreement. If there is an inconsistency or contradiction between the translated version and the English version of this License Agreement, the English version of this License Agreement shall control.
16. *Assignment by Licensor.* Licensor may assign this Agreement without your prior consent to any company or entity affiliated with Licensor, or by an assignment associated with a corporate restructuring, merger or acquisition.
17. *Governing Law and Forum.* This Agreement will be governed by and construed in accordance with the substantive laws in force in the County of Los Angeles in the State of California. This Agreement will not be governed by the conflict of law rules of any jurisdiction or the United Nations Convention on Contracts for the International Sale of Goods, the application of which is expressly excluded.
18. *Specific Exceptions.*
  - 18.1 *Limited Warranty for Users Residing in European Economic Area Countries and Switzerland.* If you obtained the Software in any European Economic Area countries and Switzerland, and you usually reside in such country,

then Section 6 does not apply, instead, Licensor warrants that the Software provides the functionalities set forth in the Operators Manuals (the "*agreed upon functionalities*") for the Warranty Period. As used in this Section, "Warranty Period" means one (1) year. Non-substantial variation from the agreed upon functionalities shall not be considered and does not establish any warranty rights. THIS LIMITED WARRANTY DOES NOT APPLY TO Software PROVIDED TO YOU FREE OF CHARGE, FOR EXAMPLE, UPDATES, OR SOFTWARE THAT HAS BEEN ALTERED BY YOU, TO THE EXTENT SUCH ALTERATIONS CAUSED A DEFECT. To make a warranty claim, during the Warranty Period you must return, at our expense, the Software and proof of purchase to the location where you obtained it. If the functionalities of the Software vary substantially from the agreed upon functionalities, Licensor is entitled -- by way of re-performance and at its own discretion -- to repair or replace the Software. If this fails, you are entitled to a reduction of the purchase price (reduction) or to cancel the purchase agreement (rescission). For further warranty information, please contact Licensor at the address listed in Section 21.

18.2 *Limitation of Liability for Users Residing in European Economic Area Countries and Switzerland.*

(a) If you obtained the Software in any European Economic Area country or Switzerland, and you usually reside in such country, then Sections 7 and 11 do not apply, Instead, subject to the provisions in Section 13.2.2, Licensor's statutory liability for damages shall be limited as follows: (a) Licensor shall be liable only up to the amount of damages as typically foreseeable at the time of entering into this License Agreement in respect of damages caused by a slightly negligent breach of a material contractual obligation and (b) Licensor shall not be liable for damages caused by a slightly negligent breach of a non-material contractual obligation.

(b) The aforesaid limitation of liability shall not apply to any mandatory statutory liability, in particular, to liability under the German Product Liability Act, liability for assuming a specific guarantee or liability for culpably caused personal injuries.

(c) You are required to take all reasonable measures to avoid and reduce damages, in particular to make back-up copies of the Software and your computer data subject to the provisions of this Agreement.

19. *Representations of Licensee.* BY ACCEPTING THIS AGREEMENT, YOU: (A) ACKNOWLEDGE THAT YOU HAVE READ AND UNDERSTAND THIS AGREEMENT; (B) REPRESENT THAT YOU HAVE THE AUTHORITY TO ENTER INTO THIS AGREEMENT; (C) AGREE THAT THIS AGREEMENT IS ENFORCEABLE AGAINST YOU AND ANY LEGAL ENTITY THAT

OBTAINED THE Software AND ON WHOSE BEHALF IT IS USED; AND, (D) AGREE TO PERFORM THE OBLIGATIONS OF THIS AGREEMENT.

20. *Identification of Licensor and Notices.* The Licensor is C-Nav, a Division of Oceanering International, Inc. All notices to Licensor shall be sent by email, certified or registered mail to the corresponding address for the Licensor given below. All notices required to be given to you shall, in Licensor's sole discretion, either be sent via email, facsimile transmission, first class, certified or registered mail to the relevant address given to Licensor in connection with your purchase of the RECEIVER. Any of the foregoing methods of notification used by Licensor shall be effective upon dispatch. You agree to notify Licensor of any change in your designated addresses in the manner set forth above.

Place of Purchase	Address
North America	C-Nav World DGNS
Asia, Australia, New Zealand	ATTN: GNSS Receiver Customer Support
Europe	730 East Kaliste Saloom Road
Africa, Middle East	Lafayette, LA 70508
Latin & South America	United States of America <a href="#">C-Nav Support</a>

All notices to Licensor shall be effective upon receipt.

## Open Source Software License Appendix

Listing of modules/components not licensed under the C-Nav proprietary license:

- [freeRTOS v4.7.2](#)
- [lwIP v1.2.0](#)

### License Text - Module/Component: freeRTOS v4.7.2

#### GNU GENERAL PUBLIC LICENSE

Version 2, June 1991

Copyright (C) 1989, 1991

Free Software Foundation, Inc.

59 Temple Place, Suite 330, Boston, MA

02111-1307 USA

Everyone is permitted to copy and distribute verbatim copies of this license document, but changing it is not allowed.

See the end of this section for a special exception to the General Public License (GPL).

### Preamble

The licenses for most software are designed to take away your freedom to share and change it. By contrast, the GNU General Public License is intended to guarantee your freedom to share and change free software--to make sure the software is free for all its users. This General Public License applies to most of the Free Software Foundation's software and to any other program whose authors commit to using it. (Some other Free Software Foundation software is covered by the GNU Library General Public License instead.) You can apply it to your programs, too.

When we speak of free software, we are referring to freedom, not price. Our General Public Licenses are designed to make sure that you have the freedom to distribute copies of free software (and charge for this service if you wish), that you receive source code or can get it if you want it, that you can change the software or use pieces of it in new free programs; and that you know you can do these things.

To protect your rights, we need to make restrictions that forbid anyone to deny you these rights or to ask you to surrender the rights. These restrictions translate to certain responsibilities for you if you distribute copies of the software, or if you modify it.

For example, if you distribute copies of such a program, whether gratis or for a fee, you must give the recipients all the rights that you have. You must make sure that they, too, receive or can get the source code. And you must show them these terms so they know their rights.

We protect your rights with two steps: (1) copyright the software, and (2) offer you this license which gives you legal permission to copy, distribute and/or modify the software.

Also, for each author's protection and ours, we want to make certain that everyone understands that there is no warranty for this free software. If the software is modified by someone else and passed on, we want its recipients to know that what they have is not the original, so that any problems introduced by others will not reflect on the original authors' reputations.

Finally, any free program is threatened constantly by software patents. We wish to avoid the danger that redistributors of a free program will individually obtain patent licenses, in effect making the program proprietary. To prevent this, we

have made it clear that any patent must be licensed for everyone's free use or not licensed at all.

The precise terms and conditions for copying, distribution and modification follow.

## **GNU GENERAL PUBLIC LICENSE: TERMS AND CONDITIONS FOR COPYING, DISTRIBUTION AND MODIFICATION**

0. This License applies to any program or other work which contains a notice placed by the copyright holder saying it may be distributed under the terms of this General Public License. The "Program", below, refers to any such program or work, and a "work based on the Program" means either the Program or any derivative work under copyright law: that is to say, a work containing the Program or a portion of it, either verbatim or with modifications and/or translated into another language. (Hereinafter, translation is included without limitation in the term "modification".) Each licensee is addressed as "you".

Activities other than copying, distribution and modification are not covered by this License; they are outside its scope. The act of running the Program is not restricted, and the output from the Program is covered only if its contents constitute a work based on the Program (independent of having been made by running the Program). Whether that is true depends on what the Program does.

1. You may copy and distribute verbatim copies of the Program's source code as you receive it, in any medium, provided that you conspicuously and appropriately publish on each copy an appropriate copyright notice and disclaimer of warranty; keep intact all the notices that refer to this License and to the absence of any warranty; and give any other recipients of the Program a copy of this License along with the Program.

You may charge a fee for the physical act of transferring a copy, and you may at your option offer warranty protection in exchange for a fee.

2. You may modify your copy or copies of the Program or any portion of it, thus forming a work based on the Program, and copy and distribute such modifications or work under the terms of Section 1 above, provided that you also meet all of these conditions:
- a) You must cause the modified files to carry prominent notices stating that you changed the files and the date of any change.
  - b) You must cause any work that you distribute or publish, that in whole or in part contains or is derived from the Program or any part thereof, to be licensed as a whole at no charge to all third parties under the terms of this License.
  - c) If the modified program normally reads commands interactively when run, you must cause it, when started running for such interactive use in the most ordinary way, to print or display an announcement including an

appropriate copyright notice and a notice that there is no warranty (or else, saying that you provide a warranty) and that users may redistribute the program under these conditions, and telling the user how to view a copy of this License. (Exception: if the Program itself is interactive but does not normally print such an announcement, your work based on the Program is not required to print an announcement.)

These requirements apply to the modified work as a whole. If identifiable sections of that work are not derived from the Program, and can be reasonably considered independent and separate works in themselves, then this License, and its terms, do not apply to those sections when you distribute them as separate works. But when you distribute the same sections as part of a whole which is a work based on the Program, the distribution of the whole must be on the terms of this License, whose permissions for other licensees extend to the entire whole, and thus to each and every part regardless of who wrote it.

Thus, it is not the intent of this section to claim rights or contest your rights to work written entirely by you; rather, the intent is to exercise the right to control the distribution of derivative or collective works based on the Program.

In addition, mere aggregation of another work not based on the Program with the Program (or with a work based on the Program) on a volume of a storage or distribution medium does not bring the other work under the scope of this License.

3. You may copy and distribute the Program (or a work based on it, under Section 2) in object code or executable form under the terms of Sections 1 and 2 above provided that you also do one of the following:
  - a) Accompany it with the complete corresponding machine-readable source code, which must be distributed under the terms of Sections 1 and 2 above on a medium customarily used for software interchange; or,
  - b) Accompany it with a written offer, valid for at least three years, to give any third party, for a charge no more than your cost of physically performing source distribution, a complete machine-readable copy of the corresponding source code, to be distributed under the terms of Sections 1 and 2 above on a medium customarily used for software interchange; or,
  - c) Accompany it with the information you received as to the offer to distribute corresponding source code. (This alternative is allowed only for noncommercial distribution and only if you received the program in object code or executable form with such an offer, in accord with Subsection b above.)

The source code for a work means the preferred form of the work for making modifications to it. For an executable work, complete source code means all the source code for all modules it contains, plus any associated interface definition

files, plus the scripts used to control compilation and installation of the executable. However, as a special exception, the source code distributed need not include anything that is normally distributed (in either source or binary form) with the major components (compiler, kernel, and so on) of the operating system on which the executable runs, unless that component itself accompanies the executable.

If distribution of executable or object code is made by offering access to copy from a designated place, then offering equivalent access to copy the source code from the same place counts as distribution of the source code, even though third parties are not compelled to copy the source along with the object code.

4. You may not copy, modify, sublicense, or distribute the Program except as expressly provided under this License. Any attempt otherwise to copy, modify, sublicense or distribute the Program is void, and will automatically terminate your rights under this License. However, parties who have received copies, or rights, from you under this License will not have their licenses terminated so long as such parties remain in full compliance.
5. You are not required to accept this License, since you have not signed it. However, nothing else grants you permission to modify or distribute the Program or its derivative works. These actions are prohibited by law if you do not accept this License. Therefore, by modifying or distributing the Program (or any work based on the Program), you indicate your acceptance of this License to do so, and all its terms and conditions for copying, distributing or modifying the Program or works based on it.
6. Each time you redistribute the Program (or any work based on the Program), the recipient automatically receives a license from the original licensor to copy, distribute or modify the Program subject to these terms and conditions. You may not impose any further restrictions on the recipients' exercise of the rights granted herein. You are not responsible for enforcing compliance by third parties to this License.
7. If, as a consequence of a court judgment or allegation of patent infringement or for any other reason (not limited to patent issues), conditions are imposed on you (whether by court order, agreement or otherwise) that contradict the conditions of this License, they do not excuse you from the conditions of this License. If you cannot distribute so as to satisfy simultaneously your obligations under this License and any other pertinent obligations, then as a consequence you may not distribute the Program at all. For example, if a patent license would not permit royalty-free redistribution of the Program by all those who receive copies directly or indirectly through you, then the only way you could satisfy both it and this License would be to refrain entirely from distribution of the Program.



If any portion of this section is held invalid or unenforceable under any particular circumstance, the balance of the section is intended to apply and the section as a whole is intended to apply in other circumstances.

It is not the purpose of this section to induce you to infringe any patents or other property right claims or to contest validity of any such claims; this section has the sole purpose of protecting the integrity of the free software distribution system, which is implemented by public license practices. Many people have made generous contributions to the wide range of software distributed through that system in reliance on consistent application of that system; it is up to the author/donor to decide if he or she is willing to distribute software through any other system and a licensee cannot impose that choice.

This section is intended to make thoroughly clear what is believed to be a consequence of the rest of this License.

8. If the distribution and/or use of the Program is restricted in certain countries either by patents or by copyrighted interfaces, the original copyright holder who places the Program under this License may add an explicit geographical distribution limitation excluding those countries, so that distribution is permitted only in or among countries not thus excluded. In such case, this License incorporates the limitation as if written in the body of this License.

9. The Free Software Foundation may publish revised and/or new versions of the General Public License from time to time. Such new versions will be similar in spirit to the present version, but may differ in detail to address new problems or concerns.

Each version is given a distinguishing version number. If the Program specifies a version number of this License which applies to it and "any later version", you have the option of following the terms and conditions either of that version or of any later version published by the Free Software Foundation. If the Program does not specify a version number of this License, you may choose any version ever published by the Free Software Foundation.

10. If you wish to incorporate parts of the Program into other free programs whose distribution conditions are different, write to the author to ask for permission. For software which is copyrighted by the Free Software Foundation, write to the Free Software Foundation; we sometimes make exceptions for this. Our decision will be guided by the two goals of preserving the free status of all derivatives of our free software and of promoting the sharing and reuse of software generally.

#### NO WARRANTY

11. BECAUSE THE PROGRAM IS LICENSED FREE OF CHARGE, THERE IS NO WARRANTY FOR THE PROGRAM, TO THE EXTENT PERMITTED BY APPLICABLE LAW. EXCEPT WHEN OTHERWISE STATED IN WRITING THE COPYRIGHT HOLDERS AND/OR OTHER PARTIES PROVIDE THE

PROGRAM "AS IS" WITHOUT WARRANTY OF ANY KIND, EITHER EXPRESSED OR IMPLIED, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE. THE ENTIRE RISK AS TO THE QUALITY AND PERFORMANCE OF THE PROGRAM IS WITH YOU. SHOULD THE PROGRAM PROVE DEFECTIVE, YOU ASSUME THE COST OF ALL NECESSARY SERVICING, REPAIR OR CORRECTION.

12. IN NO EVENT UNLESS REQUIRED BY APPLICABLE LAW OR AGREED TO IN WRITING WILL ANY COPYRIGHT HOLDER, OR ANY OTHER PARTY WHO MAY MODIFY AND/OR REDISTRIBUTE THE PROGRAM AS PERMITTED ABOVE, BE LIABLE TO YOU FOR DAMAGES, INCLUDING ANY GENERAL, SPECIAL, INCIDENTAL OR CONSEQUENTIAL DAMAGES ARISING OUT OF THE USE OR INABILITY TO USE THE PROGRAM (INCLUDING BUT NOT LIMITED TO LOSS OF DATA OR DATA BEING RENDERED INACCURATE OR LOSSES SUSTAINED BY YOU OR THIRD PARTIES OR A FAILURE OF THE PROGRAM TO OPERATE WITH ANY OTHER PROGRAMS), EVEN IF SUCH HOLDER OR OTHER PARTY HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES.

END OF TERMS AND CONDITIONS

### How to Apply These Terms to Your New Programs

If you develop a new program, and you want it to be of the greatest possible use to the public, the best way to achieve this is to make it free software which everyone can redistribute and change under these terms.

To do so, attach the following notices to the program. It is safest to attach them to the start of each source file to most effectively convey the exclusion of warranty; and each file should have at least the "copyright" line and a pointer to where the full notice is found.

<one line to give the program's name and a brief idea of what it does.> Copyright (C) <year> <name of author>

This program is free software; you can redistribute it and/or modify it under the terms of the GNU General Public License as published by the Free Software Foundation; either version 2 of the License, or (at your option) any later version.

This program is distributed in the hope that it will be useful, but WITHOUT ANY WARRANTY; without even the implied warranty of MERCHANTABILITY or FITNESS FOR A PARTICULAR PURPOSE. See the GNU General Public License for more details.

You should have received a copy of the GNU General Public License along with this program; if not, write to the Free Software Foundation, Inc., 59 Temple

Place, Suite 330, Boston, MA  
02111-1307 USA

Also add information on how to contact you by electronic and paper mail.

If the program is interactive, make it output a short notice like this when it starts in an interactive mode:

```
Gnomovision version 69, Copyright (C) year name of author Gnomovision comes  
with ABSOLUTELY NO WARRANTY; for details type `show w'. This is free  
software, and you are welcome to redistribute it under certain conditions; type  
`show c' for details.
```

The hypothetical commands `show w' and `show c' should show the appropriate parts of the General Public License. Of course, the commands you use may be called something other than `show w' and `show c'; they could even be mouse-clicks or menu items--whatever suits your program.

You should also get your employer (if you work as a programmer) or your school, if any, to sign a "copyright disclaimer" for the program, if necessary. Here is a sample; alter the names:

```
Yoyodyne, Inc., hereby disclaims all copyright interest in the program  
`Gnomovision' (which makes passes at compilers) written by James Hacker.
```

```
<signature of Ty Coon>, 1 April 1989
```

```
Ty Coon, President of Vice
```

This General Public License does not permit incorporating your program into proprietary programs. If your program is a subroutine library, you may consider it more useful to permit linking proprietary applications with the library. If this is what you want to do, use the GNU Library General Public License instead of this License.

-----  
I have included the following exception to the GPL. The exception should only be used should you wish to combine FreeRTOS with a proprietary product. If you opt to use this exception you are encouraged to make a donation to the FreeRTOS project. The link on the [www.FreeRTOS.org](http://www.FreeRTOS.org) can be used for this purpose. Any such donation is entirely voluntary and does not result in any enhanced support or any warranty rights.

This exception can only be used if you use FreeRTOS solely through the API published on the [www.FreeRTOS.org](http://www.FreeRTOS.org) WEB site, and on condition that the combined work is not itself an RTOS.

-----  
**EXCEPTION TEXT:**

Linking FreeRTOS statically or dynamically with other modules is making a combined work based on FreeRTOS. Thus, the terms and conditions of the GNU General Public License cover the whole combination.

As a special exception, the copyright holder of FreeRTOS gives you permission to link FreeRTOS with independent modules that communicate with FreeRTOS solely through the FreeRTOS API interface, regardless of the license terms of these independent modules, and to copy and distribute the resulting combined work under terms of your choice, provided that every copy of the combined work is accompanied by a written statement that details to the recipient the version of FreeRTOS used and an offer by yourself to provide the FreeRTOS source code should the recipient request it. Any FreeRTOS source code, whether modified or in its original release form, or whether in whole or in part, can only be distributed by you under the terms of the GNU General Public License plus this exception. An independent module is a module which is not derived from or based on FreeRTOS.

Note that people who make modified versions of FreeRTOS are not obligated to grant this special exception for their modified versions; it is their choice whether to do so. The GNU General Public License gives permission to release a modified version without this exception; this exception also makes it possible to release a modified version which carries forward this exception.

### Notice / Acknowledgement Obligations

FreeRTOS.org V4.7.2 - Copyright (C) 2003-2008 Richard Barry.

FreeRTOS v4.7.2 source code is available through email request to: [C-Nav Support](#)

### **License Text - Module/Component: lwIP v1.2.0**

Open Source package license

/\*

\* Copyright (c) 2001, 2002 Swedish Institute of Computer Science.

\* All rights reserved.

\*

\* Redistribution and use in source and binary forms, with or without modification, are permitted provided that the following conditions are met:

\*

\* 1. Redistributions of source code must retain the above copyright notice,

\* this list of conditions and the following disclaimer.

\* 2. Redistributions in binary form must reproduce the above copyright notice,

\* this list of conditions and the following disclaimer in the documentation

\* and/or other materials provided with the distribution.

\* 3. The name of the author may not be used to endorse or promote products

\* derived from this software without specific prior written permission.

- \*
- \* THIS SOFTWARE IS PROVIDED BY THE AUTHOR ``AS IS" AND ANY EXPRESS OR IMPLIED
- \* WARRANTIES, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF
- \* MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE ARE DISCLAIMED. IN NO EVENT
- \* SHALL THE AUTHOR BE LIABLE FOR ANY DIRECT, INDIRECT, INCIDENTAL, SPECIAL,
- \* EXEMPLARY, OR CONSEQUENTIAL DAMAGES (INCLUDING, BUT NOT LIMITED TO, PROCUREMENT
- \* OF SUBSTITUTE GOODS OR SERVICES; LOSS OF USE, DATA, OR PROFITS; OR BUSINESS
- \* INTERRUPTION) HOWEVER CAUSED AND ON ANY THEORY OF LIABILITY, WHETHER IN
- \* CONTRACT, STRICT LIABILITY, OR TORT (INCLUDING NEGLIGENCE OR OTHERWISE) ARISING
- \* IN ANY WAY OUT OF THE USE OF THIS SOFTWARE, EVEN IF ADVISED OF THE POSSIBILITY
- \* OF SUCH DAMAGE.
- \*
- \* This file is part of the lwIP TCP/IP stack.
- \*
- \* Author: Adam Dunkels <[adam@sics.se](mailto:adam@sics.se)>

## Notice / Acknowledgement Obligations

Copyright (c) 2001-2004 Swedish Institute of Computer Science.  
All rights reserved.

THIS SOFTWARE IS PROVIDED BY THE AUTHOR ``AS IS" AND ANY EXPRESS OR IMPLIED WARRANTIES, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE ARE DISCLAIMED. IN NO EVENT SHALL THE AUTHOR BE LIABLE FOR ANY DIRECT, INDIRECT, INCIDENTAL, SPECIAL, EXEMPLARY, OR CONSEQUENTIAL DAMAGES (INCLUDING, BUT NOT LIMITED TO, PROCUREMENT OF SUBSTITUTE GOODS OR SERVICES; LOSS OF USE, DATA, OR PROFITS; OR BUSINESS INTERRUPTION) HOWEVER CAUSED AND ON ANY THEORY OF LIABILITY, WHETHER IN

CONTRACT, STRICT LIABILITY, OR TORT (INCLUDING NEGLIGENCE OR OTHERWISE) ARISING IN ANY WAY OUT OF THE USE OF THIS SOFTWARE, EVEN IF ADVISED OF THE POSSIBILITY OF SUCH DAMAGE.

## Appendix I - RoHS Certification

RoHS (Restriction of Use of Hazardous Substances) regulations limit or ban specific substances – lead, cadmium, polybrominated biphenyl (PBB), mercury, hexavalent chromium, and polybrominated diphenyl ether (PBDE) flame retardants – in new electronic and electric equipment.

For Cadmium and Hexavalent chromium, there must be less than 0.01% of the substance by weight at raw homogeneous materials level. For Lead, PBB, and PBDE, there must be no more than 0.1% of the material, when calculated by weight at raw homogeneous materials. Any RoHS compliant component must have 100 ppm or less of mercury and the mercury must not have been intentionally added to the component.

The following components are RoHS compliant. They have been tested for RoHS controlled substances and found to be in accordance with RoHS regulations.

CNV92\_310413\_3002

Part Name	Toxic or hazardous substances and elements					
	Lead (Pb)	Mercury (Hg)	Cadmium (Cd)	Hexavalent Chromium (Cr(VI))	Polybrominated biphenyls (PBB)	Polybrominated dephenyl ethers PBDE)
PCBAs	X	O	O	O	O	O
Switch	O	O	O	O	O	O
Clamp	O	O	O	O	O	O
Housing	O	O	O	O	O	O
Labels	O	O	O	O	O	O
End Plate	O	O	O	O	O	O
End Cover	O	O	O	O	O	O
Cable	O	O	O	O	O	O
Hardware	O	O	O	X	O	O
Gaskets	O	O	O	O	O	O
Brackets	O	O	O	O	O	O

**Table 60: Toxic or Hazardous Substances or Elements Disclosure**

“O” indicates that this toxic or hazardous substance contained in all of the homogeneous materials for this part is below the limit requirement in SJ/T11363-2006 (Standard of the Electronics Industry of the People’s Republic of China).

“X” indicates that this toxic or hazardous substance contained in at least one of the homogeneous materials for this part is above the limit requirement in SJ/T11363-2006 (Standard of the Electronics Industry of the People’s Republic of China).



# Glossary

## Abbreviations

1PPS -	1 Pulse Per Second
2dRMS -	Twice the distance Root Mean Square
A/S -	Antispoofing
APC -	Antenna Phase Center
BER -	Bit Error Rate
bps -	bits per second
BSW -	British Standard Whitworth
C/A -	Coarse/Acquisition
CCS -	C-Nav® Corrections Service
CCS OTI -	C-Nav® Corrections Service Over-The-Internet
CEP -	Circular Error Probable
CDU -	Control Display Unit
COM -	Communication
CMR -	Compact Measurement Record
Db -	Decibel
DCE -	Data Communications Equipment
Deg -	Degree
DGPS -	Differential Global Positioning System
DOP -	Dilution of Precision
DTE -	Data Terminal Equipment
ECDIS -	Electronic Chart Display & Information System
ECEF -	Earth Centered, Earth Fixed
EGNOS -	European Geostationary Navigation Overlay Service
FCC -	Federal Communications Commission (U.S.)
GAGAN -	GPS Aided Geo Augmented Navigation
GDOP -	Geometric Dilution of Precision

GIS -	Geographic Information System
GLONASS -	GLObalnaya NAVigatsionnaya Sputnikovaya Sistema
GMT -	Greenwich Mean Time
GNSS -	Global Navigation Satellite System
GPS -	Global Positioning System
HDOP -	Horizontal Dilution of Precision
HF -	High Frequency
HOW -	Hand Over Word
Hz -	Hertz
I/O -	Input / Output
IGN -	Ignition
IMO -	International Maritime Organization
INMARSAT -	International Maritime Satellite Consortium, Ltd.
INS -	Inertial Navigation System
IODC -	Issue of Data, Clock
ITRF -	International Terrestrial Reference Frame
JPL -	Jet Propulsion Laboratory
Kbps -	Kilobits per second
KHz -	Kilohertz
LAN -	Local Area Network
Lat -	Latitude
LCD -	Liquid Crystal Display
LED -	Light Emitting Diode
LES -	Land Earth Station
LF -	Low Frequency
Long -	Longitude
LORAN -	Long Range Navigation System
LNA -	Low Noise Amplifier
MED -	Marine Equipment Directive
MSAS -	MTSAT Satellite-based Augmentation System

MSL -	Mean Sea Level
NAD27 -	North American Datum 1927
NAD83 -	North American Datum 1983
NASA -	National Aeronautics and Space Administration
NGS -	National Geodetic Survey
NOAA -	National Oceanic and Atmospheric Administration (U.S.)
NMEA -	National Marine Electronics Association (U.S.)
NTRIP -	Network transport of RTCM Internet Protocol
P/N -	Part Number
PCM -	Pulse Code Modulation
PDOP -	Positional Dilution of Precision
PPS -	Precise Positioning Service
prn -	pseudo-random noise
PVT -	Position, Velocity, Time
RAIM -	Receiver Autonomous Integrity Monitoring
RHCP -	Right-hand Circular Polarization
RINEX -	Receiver Independent Exchange
RMS -	Root Mean Square
RTCM -	Radio Technical Commission for Maritime Services
RTK -	Real-time Kinematic
S/A -	Selective Availability
SBAS -	Satellite Based Augmentation System
SEP -	Spherical Error Probable
SI -	International System of Units
SNR -	Signal-to-Noise Ratio
SPS -	Standard Positioning Service
SSR -	Spread Spectrum Radio
SV -	Space Vehicle
TDOP -	Time Dilution of Precision
UHF -	Ultra High Frequency
USB -	Universal Serial Bus
USGS -	U.S. Geological Survey
UTC -	Universal Time Coordinated
VDOP -	Vertical Dilution of Precision
VHF -	Very High Frequency

WAAS - Wide Area Augmentation System  
WADGPS - Wide Area Differential Global Positioning System  
WDOP - Weighted Dilution of Precision  
WGS84 - World Geodetic System 1984

### Definitions

**1 Pulse Per Second (1PPS)** is a precision electronic pulse output (at TTL levels) from the GNSS receiver that marks exact second intervals. It is used for precise timing and to synchronize receivers and acquisition computers.

**.yym files** see meteorological files (where yy = two digit year data was collected).

**.yyN files** see navigation files (where yy = two digit year data was collected).

**.yyo files** see observation files (where yy = two digit year data was collected).

**Absolute Positioning** is the ability of a GNSS receiver to produce positional values without another receiver for reference.

**Accuracy** is the degree of conformity of a measured or calculated quantity to a standard or true value. Accuracy is therefore related to the quality of the results.

**Almanac** is found in subframe 5 of the Navigation Message. It is a data file that helps the receiver track and lock-on to satellites as it contains a summary of orbital parameters for all GPS satellites. The almanac can be acquired from any GPS satellite.

**Altitude** is the vertical distance above the ellipsoid or geoid. It is always stored as height above ellipsoid in the GNSS receiver but can be displayed as height above ellipsoid (HAE) or height above mean sea level (MSL).

**Ambiguity** is the unknown number of whole carrier wavelengths between satellite and receiver.

**Antenna** is a device used to collect and amplify the electromagnetic GNSS signals broadcast by a satellite. These electromagnetic waves are then

converted into electrical currents that are decoded by the receiver. Patch or Microstrip antennas are most commonly used in GNSS.

**Antenna Phase Center (APC)** is the point in an antenna where the GNSS signal from the satellites is received. The height above ground of the APC must be measured accurately to ensure accurate GNSS readings. The APC height can be calculated by adding the height to an easily measured point, such as the base of the antenna mount, to the known distance between this point and the APC.

**Antispoofing (A/S)** is an encryption technique developed by the US Department of Defense (DoD) that when implemented, denies access to the P-Code by any unauthorized users. With Antispoofing on, the user will need a DoD issued “key” in order to gain access to the P-Code.

**Apogee** is the point in the orbit of a satellite about the earth that is the greatest distance from the center of the earth.

**Autocorrelation** in reference to code is a plot of the scalar product of the noise sequence with a delayed copy of itself.

**Autonomous positioning (GNSS)** is a mode of operation in which a GNSS receiver computes position fixes in real time from satellite data alone, without reference to data supplied by a reference station or orbital clock corrections. Autonomous positioning is typically the least precise positioning procedure a GNSS receiver can perform, yielding position fixes that are precise to 100 meters with Selective Availability on, and 30 meters with S/A off.

**Average Deviation** is a measure of variability in a data set but it is more robust than standard deviation. It is not related to the bell-shaped curve. It is the average of the absolute deviations of the values from the mean. The data values are subtracted from the mean producing a list of deviations from the mean. The deviations are not squared like they are for the standard deviation; the absolute values of the deviations are used.

**Azimuth** the azimuth of a line is its direction as given by the angle between the meridian and the line measured in a clockwise direction from the north branch of the meridian.

**Bad Packets** refer to the number of bad C-Nav<sup>®</sup> Corrections Service (CCS) packets received since the unit was turned on.

**Bandwidth** is a measure of the width of the frequency spectrum of a signal expressed in Hertz.

**Baseline** is the resultant three-dimensional vector ( $V$ ) between any two stations from which simultaneous GP data have been collected and processed. Generally given in earth-centered Cartesian coordinates where:  $V = (\Delta x, \Delta y, \Delta z)$

**Base Station** see reference station.

**Baud Rate (*bits per second*)** is the number of bits sent or received each second. For example, a baud rate of 9600 means there is a data flow of 9600 bits each second. One character roughly equals 10 bits.

**Beat Frequency** is either of the two additional frequencies obtained when two signals of two frequencies are mixed, equal to the sum or difference of the original frequencies.

**Binary Biphase Modulation** is a phase change on a constant frequency carrier of either 0 or 180 degrees. These represent the binary digits 0 and 1, respectively.

**Binary Code** is a system used in communication where selected strings of 0s and 1s are assigned definite meanings.

**Binary Pulse Code Modulation** is a two-state phase modulation using a string of binary numbers or codes. The coding is generally represented by 1 and 0 with definite meanings attached to each.

**Bits per second** see baud rate.

**Broadcast Ephemeris** is the ephemeris broadcast by the GNSS satellites.

**British Standard Whitworth (BSW)** is a type of coarse screw thread. A 5/8" diameter BSW is the standard mount for survey instruments. (1" Mount included).

**C-Nav<sup>®</sup> Corrections Service (CCS)** is a set of real-time global orbit and clock corrections for GNSS satellites. C-Nav<sup>®</sup> equipped receivers are capable of real-time decimeter positioning (see [Appendix C - C-Nav<sup>®</sup> Corrections Service \(CCS\)](#) (Page 106)).

**C/A code** see Coarse Acquisition code.

**CAN BUS** is a balanced (differential) 2-wire interface that uses an asynchronous transmission scheme. Often used for communications in vehicular applications.

**Carrier** is a high-frequency radio wave having at least one characteristic (frequency, amplitude, or phase), which may be varied by modulation from an accepted value. In general, the carrier wavelength is much shorter than the wavelength of the codes.

**Carrier Beat Phase** is the difference between the phase of the incoming Doppler shifted satellite carrier signal and the phase of the nominally constant reference frequency generated in the receiver.

**Channel** a channel of a GNSS receiver consists of the circuitry necessary to receive the signal for a single GNSS satellite.

**Chip** *a.* The minimum transition time interval for individual bits of either a 0 or 1 in a binary pulse code usually transmitted in a pseudo-random sequence. *b.* A tiny square piece of thin semiconductor material on which an integrated circuit is formed or is to be formed.

**Circular Error Probable (CEP)** is a measurement of precision using standard deviation that is applicable in horizontal stations. Probability for CEP is 50%, meaning that if 100 observations are made, half of them will be within the circular error probable with

Radius =  $0.5887 (\sigma_x + \sigma_y)$

**Civilian code** see Coarse Acquisition code.

**Clock Bias** is the difference between GNSS Time and UTC.

**Coarse Acquisition code (C/A or Civilian code)**

is the pseudo-random code generated by GPS satellites. It is intended for civilian use and the accuracy of readings using this code can be degraded if selective availability (S/A) is introduced by the US Department of Defense.

**Collimate** is to physically align a survey target or antenna over a mark.

**COM** is the shortened form of the word Communications. Indicates a data communications port to/from the GNSS receiver to a controller or data collection device.

**Compact Measurement Record (CMR / CMR+)** is a standard format for DGNSS corrections used to transmit corrections from a reference station to rover receivers. See Related Standards in Notices.

**Controller** is a device consisting of hardware and software used to communicate and manipulate the I/O functions of the GNSS receiver.

**Control Point** is a point to which coordinates have been assigned. These coordinates can then be held fixed and are used in other dependent surveys.

**Control Segment** is a worldwide network of GNSS monitoring and control stations that ensure the accuracy of the GNSS satellite orbits and operation of their atomic clocks. The original control segment for GPS consists of control facilities in Diego Garcia, Ascension Island, Kwajalein, and Hawaii, with a master control station at the Consolidated Space Operations Center (CSPOC) at Colorado Springs, Colorado.

**Convergence Period** is the time necessary for the received C-Nav<sup>®</sup> signal corrections to be applied and the position filtered to optimal performance. The convergence period is typically 30 to 45 minutes to achieve decimeter accuracy.

**Cycle Ambiguity** see Ambiguity.

**Cycle Slip** is a discontinuity in measured carrier beat phase resulting from a temporary loss of lock in the carrier-tracking loop of a GNSS receiver.

**Datum** A reference datum is a known and constant surface, which can be used to describe the location of unknown points. Geodetic datums define the size and




shape of the earth and the origin and orientation of the coordinate systems used to map the earth.

**DB9P** A type of electrical connector containing 9 contacts. The P indicates a plug pin (male).

**DB9S** A type of electrical connector containing 9 contacts. The S indicates a slot pin (female).

**DCE** Data Communications Equipment. Defined pin assignments based on the IEEE RS-232 signaling standard. See [Figure 49](#):

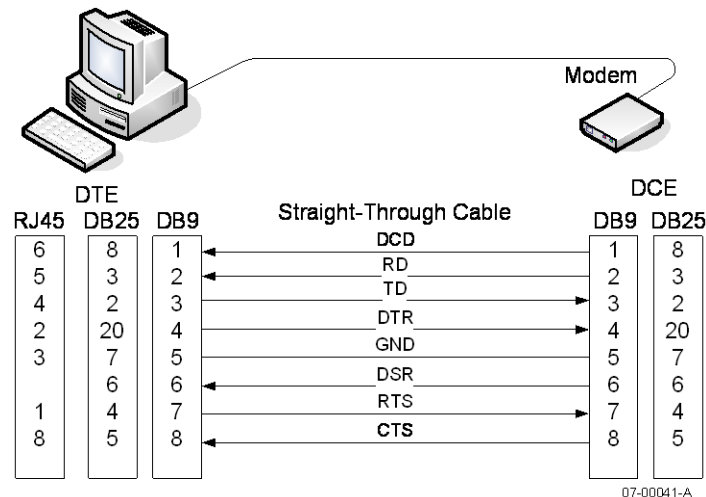

**Figure 49: DTE to DCE RS-232 Pin Assignments**

**Deflection of the Vertical** is the angle between the perpendicular to the geoid (plumb line) and the perpendicular to the ellipsoid.

**DGNSS** see Differential GPS / GNSS.

**DGPS** see Differential GPS / GNSS.

**Differencing** is a technique used in baseline processing to resolve the integer cycle ambiguity and to reduce a number of error sources including oscillator variations and atmospheric and orbital modeling errors. This technique “differences” the measurement of the carrier beat phase across time, frequency,

receivers, satellites, or any combination of these. The most popular differences are single, double and triple.

**Differential GPS / GNSS (DGPS / DGNSS)** is a positioning procedure that uses two receivers, a rover at an unknown location and a reference station at a known, fixed location. The reference station computes corrections based on the actual and observed ranges to the satellites being tracked. The coordinates of the unknown location can be computed with sub-meter level precision by applying these corrections to the satellite data received by the rover.

**Dilution of Precision (DOP)** is a class of measures of the magnitude of error in GNSS position fixes due to the orientation of the GNSS satellites with respect to the GNSS receiver. There are several DOPs to measure different components of the error. Note: this is a unit-less value. See also PDOP.

**Doppler Aiding** is a signal processing strategy that uses measured Doppler shifts to help the receiver smoothly track the GNSS signal, allowing more precise velocity and position measurement.

**Doppler Shift** is the apparent change in frequency of a received signal due to the rate of change of the distance between the transmitter and receiver.

**Double Difference** between receivers and between satellites is found by differencing the single difference for one satellite with the single difference for another satellite where both single differences are from the same epoch.

**Dual-Frequency** is a type of GPS receiver that uses both L1 and L2 signals from GPS satellites. A dual-frequency receiver can compute more precise position fixes over longer distances and under more adverse conditions because it compensates for ionospheric delays.

**Dynamic Mode** when a GNSS receiver operates in dynamic mode, it assumes that it is in motion and certain algorithms for GNSS position fixing are enabled in order to calculate a tighter position fix.

**Dynamic Positioning (GNSS)** is the determination of the position of a moving receiver such as one mounted on a boat. Generally, each set of coordinates is computed from a single data sample. GPS was originally conceived for dynamic

positioning of a single receiver, however, it may be used in a differential mode to increase relative accuracy.

**Eccentricity** is the ratio of the distance from the center of an ellipse to its focus on the semi-major axis.

**Elevation** is the distance above or below Local Vertical Datum.

**Elevation Mask** the lowest elevation, in degrees, at which a receiver can track a satellite. Measured from the horizon to zenith, 0° to 90°.

**Ellipsoid** is a mathematical model approximating the earth's surface, generated by rotating an ellipse on its minor axis. GNSS positions are computed relative to the WGS-84 ellipsoid. An ellipsoid has a smooth surface, which does not match the earth's geoidal surface closely, so GNSS altitude measurements can contain a large vertical error component. Conventionally surveyed positions usually reference a geoid, which has an undulating surface and approximates the earth's surface more closely to minimize altitude errors.

**Ephemeris** is a tabulation of the positions of all GNSS satellites at given points in time.

**Epoch** is a period of time or a date selected as a point of reference.

**Error Ellipse** is a statistical measure of the positional error at a given point computed from the propagation of all errors affecting the position solution and expressed by its semi-major and semi-minor axis (vectors of greatest and least magnitude) and the covariance (rotation angle in the reference coordinate system). Two-dimensional errors are typically propagated at one standard deviation (39.4% probability that the positioning lies on or within the ellipse) or 2.1447 times the standard deviation (95% confidence) level.

**European Geostationary Navigation Overlay Service (EGNOS)** a European satellite system used to augment the two military satellite navigation systems now operating, the US GPS and Russian GLONASS systems.

**Fractional Instantaneous Phase Measurement** is a measurement of the carrier beat phase that does not include any integer cycle count.

**Frequency Band** is a range of frequencies in a region of the electromagnetic spectrum.

**Frequency Spectrum** is the distribution of signal amplitudes as a function of frequency of the constituent signal waves.

**Geodetic Leveling Network** is a network of vertical control or benchmarks whose heights are known as accurately as possible, and whose horizontal position is known only approximately.

**Geoid** is the gravity-equipotential surface that best approximates mean sea level over the entire surface of the earth. The surface of a geoid is too irregular to use for GNSS readings, which are measured relative to an ellipsoid. Conventionally surveyed positions reference a geoid. Calculating the distance between the geoid and ellipsoid at each position and subtracting this from the GNSS altitude measurement can obtain more accurate GNSS readings.

**Geoidal Height** is the undulation of the geoid above or below the reference ellipsoid.

**Geographical Information System (GIS)** is a computer system capable of assembling, storing, manipulating, updating, analyzing and displaying geographically referenced information, i.e. data identified according to their locations. GIS technology can be used for scientific investigations, resource management, and development planning. GIS software is used to display, edit, query and analyze all the graphical objects and their associated information.

**Global Positioning System (GPS)** geometrically, there can only be one point in space, which is the correct distance from each of four known points. GPS measures the distance from a point to at least four satellites from a constellation of 24 NAVSTAR satellites orbiting the earth at a very high altitude (approximately 20,200 km). These distances are used to calculate the point's position.

**GLONASS** short for GLObalnaya NAVigatsionnaya Sputnikovaya Sistema, is a Russian satellite-based navigation system that works alongside GPS (Global Positioning System) to provide position information to compatible devices. With an additional 24 satellites to utilize, GLONASS compatible receivers can acquire satellites up to 20% faster than devices that rely on GPS alone.

**GPS Time** is a measure of time. GPS time is based on UTC, but does not add periodic 'leap seconds' to correct for changes in the earth's period of rotation. As of June 2012 GPS time is 16 seconds ahead of UTC.

**Greenwich Mean Time (GMT)** is the local time of the 0° meridian passing through Greenwich, England.

**Handover Word** is the word in the GPS message that contains time synchronization information for the transfer from the C/A-code to the P-code.

**Horizontal Geodetic Network** is a network for which the horizontal, coordinate, latitude, and longitude of the control points in the network are determined as accurately as possible, and heights are known only approximately.

**Independent Baseline** those baselines that provide a unique position solution for a given station.

**Integer-cycle Ambiguity** is the unknown number of whole carrier cycles between the satellite and the receiver.

**Ionosphere** is the region of the earth's atmosphere between the stratosphere and the exosphere approximately 50 to 250 miles above the earth's surface.

**Ionospheric Refraction Delay** is a delay in the propagation of the GNSS signal caused by the signal traveling through the ionosphere.

**Issue of Data, Clock (IODC)** indicates the issue number of the data set and thereby provides the user with a convenient means of detecting any change in the correction parameters. The transmitted IODC will be different from any value transmitted by the satellite during the preceding seven days.

**Kalman Filtering** is a linear system in which the mean squared error between the desired output and the actual output is minimized when the input is a random signal generated by white noise. The Kalman filter looks at a target to remove the effects of the noise and get a good estimate of the location of the target at the present time (filtering), at a future time (prediction), or at a time in the past (interpolation or smoothing). The Kalman filter is a recursive estimator with two phases: predict and update. The predict phase uses the estimate from a previous state to produce an estimate of the current state. The update phase uses the current state measurements to arrive at a new more accurate estimate.

**L-Band** is the group of radio frequencies extending from approximately 400 MHz to approximately 1600 MHz. The GPS carrier frequencies L1 (1575.4 MHz) and L2 (1227.6 MHz) are in the L-Band range.

**L1 carrier frequency** is the primary L-Band carrier used by GPS satellites to transmit satellite data. The frequency is 1575.42 MHz. It is modulated by C/A code, P-code, or Y-code, and a 50-bit / second navigation message. The bandwidth of this signal is 1.023 MHz.

**L2 carrier frequency** is the secondary L-Band carrier used by GPS satellites to transmit satellite data. The frequency is 1227.6 MHz. It is modulated by P-code, or Y-code, and a 50-bit/second navigation message. The bandwidth of this signal is 10.23 MHz.

**Land Earth Station (LES)** is the point on the earth's surface where data is up linked to a satellite.

**Latitude (Lat)** is the north / south component of the coordinate of a point on the surface on the earth; expressed in angular measurement from the plane of the equator to a line from the center of the earth to the point of interest. It is often abbreviated as Lat.

**Least Squares Adjustment** is a mathematical technique used on data sets that attempts to find the number that provides the 'best fit' to the data. It does so by minimizing the sum of the squares of the residuals, which are the difference between the estimated 'best fit' and the data point squared. It is carried out using an iterative process. Furthermore, it is a method of determining the curve that best describes the relationship between expected and observed sets of data by minimizing the sums of the squares of deviation between observed and expected values.

**LEMO** is a type of data or power connector.

**Logging Interval** is the frequency at which positions generated by the receiver are logged to data files.

**Longitude (Lon)** is the east/west component of the coordinate of a point on the surface of the earth; expressed as an angular measurement from the plane that

passes through the earth's axis of rotation and the 0° meridian and the plane that passes through the axis of rotation and the point of interest. It is often abbreviated as Lon.

**Mean Sea Level (MSL)** is a vertical surface that represents sea level.

**Meridian** one of the lines joining the north and south poles at right angles to the equator, designated by degrees of longitude, from 0° at Greenwich to 180°.

**Meteorological (.YYm) files** one of the three file types that make up the *RINEX* file format. Where YY indicates the last two digits of the year the data was collected. A meteorological file contains atmospheric information.

**Monitor Station** is one of five worldwide stations maintained by the DoD and used in the GPS control segment to monitor and control satellite clock and orbital parameters. Corrections are calculated and uploaded to each satellite at least once per day. See Control Segment.

**Multipath** is a phenomenon whereby GNSS signals from a satellite arrive at an antenna having traversed different paths. The signal traversing the longer path may have been reflected off one or more objects - the ground, a vehicle, boat, building or some other surface - and once received by the antenna, will yield a larger pseudo-range estimate and increase the error.

**Multipath Error** is a positioning error resulting from interference between radio waves that has traveled between the transmitter and the receiver by two paths of different electrical lengths.

**Navigation Code** uses the two GPS carrier waves and operates on a very low frequency (about 50 Hz). This code communicates the GPS message (a string of data) from the GPS satellites to the GPS receivers on L1 and L2 carrier waves.

**Navigation (.YYn) files** one of the three file types that make up the *RINEX* file format. Where YY indicates the last two digits of the year the data was collected. A navigation file contains satellite position and time information.

**Navigation Message** is the 1500-bit message broadcast by each satellite at 50bps on both L1 and L2 beacons. This message contains system time, clock correction parameters, ionospheric delay model parameters, and the vehicle's

ephemeris and health. This information is used to process the GPS signal to obtain user position and velocity.

**NAVSTAR** is the name given to GPS satellites, originally manufactured by Rockwell International.

**National Marine Electronics Association (NMEA)** is a worldwide organization promoting the standardization of digital interfaces to marine electronics devices.

**Observation (.YYo) files** one of the three file types that make up the *RINEX* file format. Where YY indicates the last two digits of the year the data was collected. An observation file contains raw GPS position information.

**P-code** is the extremely long pseudo-random code generated by a GPS satellite. It is intended for use only by the U.S. military, so it can be encrypted to Y-code, and then denies unauthorized user's access.

**Parity** is a method of detecting communication errors by adding an extra parity bit to a group of bits. The parity bit can be a 0 or 1 value so that every byte will add up to an odd or even number (depending on whether odd or even parity is chosen).

**PDOP Mask** is the highest PDOP value at which a receiver computes positions.

**Perigee** is the point in the orbit of a satellite about the earth that is the least distant from the center of the earth.

**Phase Center** is the point in an antenna where the GNSS signal from the satellites is received. The height above ground of the phase center must be measured accurately to ensure accurate GNSS readings. The phase center height can be calculated by adding the height to an easily measured point, such as the base of the antenna mount, to the known distance between this point and the phase center.

**Phase Lock** is the technique where the phase of a signal is set to replicate the phase of a reference signal by comparing the phase of the two signals and then using the resultant phase difference to adjust the reference oscillator to eliminate the difference.

**Phase Measurement** is measurement expressed as a percentage of a portion of a wave (e.g. a sine wave). For example, a complete wavelength



**Position** is the latitude, longitude, and altitude of a point. An estimate of error is often associated with a position.

**Position Dilution of Precision (PDOP)** is a measure of the magnitude of Dilution of Position (DOP) errors in the x, y, and z coordinates.

**Post-processing** is a method of differential data correction, which compares data logged from a known reference point to data logged by a roving receiver over the same period of time. Variations in the position reported by the reference station can be used to correct the positions logged by the roving receiver. Post-processing is performed after the user collects the data and returns to the office, rather than in real time as data is logged, so it can use complex, calculations to achieve greater accuracy.

**Precise code** see P-code.

**Precise Ephemeris** is the ephemeris computed after the transmission of the satellite signal and based on satellite tracking information. It is used in post-processing of collected GNSS data.

**Precision** is the degree of agreement or repeatability among a series of individual measurements, values, or results. The precision of a numerical value can refer to the number of significant digits used to express a quantity or that an instrument can measure to. Precision is related to the quality of the operation through which the result is obtained.

**PRN (Uppercase)** typically indicates a GPS satellite number sequence from 1 – 32.

**Projection** is a mathematical formula that transforms feature locations between the earth's curved surface and a map's flat surface. A projected coordinate system includes the information needed to transform locations expressed as latitude values to x,y coordinates. Projections cause distortion in one or more of these spatial properties-distance, area, shape and direction.

**Protected code** see P-code.

**Pseudo-Random Noise (*prn*)** is a sequence of data that appears to be randomly distributed but can be exactly reproduced. Each GNSS satellite transmits a unique PRN in its signals. GNSS receivers use PRNs to identify and lock onto satellites and to compute their pseudo-ranges.

**Pseudo-range** is the apparent distance from the reference station's antenna to a satellite, calculated by multiplying the time the signal takes to reach the antenna by the speed of light (radio waves travel at the speed of light). The actual distance, or range, is not exactly the same because various factors cause errors in the measurement.

**Radio Technical Commission for Maritime Services (RTCM)** is a standard format for Differential GNSS corrections used to transmit corrections from a base station to rovers. RTCM allows both real-time kinematic (RTK) data collection and post-processed differential data collection. RTCM SC-104 (RTCM Special Committee 104) is the most commonly used version of RTCM message.

**Range** is the distance between a satellite and a GNSS receiver's antenna. The range is approximately equal to the pseudo-range. However, errors can be introduced by atmospheric conditions, which slow down the radio waves, clock errors, irregularities in the satellite's orbit, and other factors. A GNSS receiver's location can be determined if you know the ranges from the receiver to at least four GNSS satellites. Geometrically, there can only be one point in space, which is the correct distance from each of four known points.

**Real-Time Kinematic (RTK)** is a GNSS system that yields very accurate 3D position fixes immediately in real-time. The base station transmits its GNSS position to roving receivers as the receiver generates them, and the roving receivers use the base station readings to differentially correct their own positions. Accuracies of a few centimeters in all three dimensions are possible. RTK requires dual frequency GNSS receivers and high speed radio modems.

**Receiver Independent Exchange (RINEX)** is a set of standard definitions and formats designed to be receiver or software manufacturer independent and to promote the free exchange of GNSS data. The *RINEX* file format consists of separate files, the three most commonly used are:

Observation (.YYo) file,

Navigation (.YYn) file,

Meteorological (.YYm) files;

Where YY indicates the last two digits of the year the data was collected.

**Reference station** a reference station collects GNSS data for a fixed, known location. Some of the errors in the GNSS positions for this location can be applied to positions recorded at the same time by roving receivers which are relatively close to the reference station. A reference station is used to improve the quality and accuracy of GNSS data collected by roving receivers.

**Right Hand Circular Polarization (RHCP)** is used to discriminate satellite signals. GNSS signals are RHCP.

**Root Mean Square (RMS)** is a measurement of precision also applicable for horizontal stations. Probability for RMS is 68.3%, meaning that if 100 observations are made, 68 of them will be within the root mean square, 1 standard deviation.

**Rover** is any mobile GNSS receiver and field computer collecting data in the field. A roving receiver's position can be differentially corrected relative to a stationary reference GNSS receiver or by using GNSS orbit and clock corrections from a SBAS such as the C-Nav<sup>®</sup> Corrections Service (CCS).

**Roving Receiver** see rover

**Satellite Based Augmentation System (SBAS)** this is a more general term, which encompasses WAAS, C-Nav<sup>®</sup> Corrections Service, and EGNOS type corrections.

**Satellite Constellation** is the arrangement of a set of satellites in space.

**Satellite Message** is sometimes referred to as the Data (D) code. A low-frequency (50 Hz) stream of data on both carriers (L1 and L2) of the satellite signal. The stream of data is designed to inform the user about the health and position of the satellite. The satellite message can be decoded by the receiver and used for positioning in real time.

**Selective Availability (S/A)** is the deliberate degradation of the GPS signal by encrypting the P-code and dithering the satellite clock. When the US Department of Defense uses S/A, the signal contains errors, which can cause positions to be inaccurate by as much as 100 meters.

**Signal-to-Noise Ratio (SNR)** is a measure of a satellite's signal strength.

**Single Difference** between receivers is the instantaneous difference in the complete carrier beat phase measurements made at two receivers simultaneously observing the same signal.

**Single-frequency** is a type of receiver that only uses the L1 GPS signal. There is no compensation for ionospheric effects. The C-Nav3050<sup>®</sup> GNSS receiver could be optioned as a single frequency receiver.

**Space Segment** is the portion of the GNSS system with major components in space (e.g., satellites).

**Space Vehicle (SV)** a GNSS satellite.

**Spread Spectrum Radio (SSR)** is a radio that uses wide band, noise like (pseudo-noise) signals that are hard to detect, intercept, jam, or demodulate making any data transmitted secure. Because spread spectrum signals are so wide, they can be transmitted at much lower spectral power density (Watts per Hertz), than narrow band signals.

**Standard Deviation** is a measure of how widely values are dispersed from the mean. The larger the standard deviation is, the more spread out the values are from the mean. It is the square root of the average squared deviations of each of the values from the mean.

**Time Tag** is when a time value is appended to an actual measurement.

**Triple Difference** between receivers, between satellites, and between epochs (time) is the difference between a double difference at one epoch and the same double difference at the following epoch.

**Troposphere** is the inner layer of the atmosphere, located between 6 and 12 miles above the earth's surface.

**Twice Distance Root Mean Square (2dRMS)** is a measurement that varies in its probability from 95.4% to 98.2%, meaning that if 100 observations are taken, between 95 and 98 of those observations will be within the 2dRMS where approximation =  $2\sigma$

**Universal Time Coordinated (UTC)** a time standard maintained by the US Naval Observatory, based on local solar mean time at the Greenwich meridian. GPS time is based on UTC.

**User Segment** is the portion of the GNSS system with major components that can be interfaced by the user (e.g., GNSS receivers).

**Wide Area Augmentation System (WAAS)** is a set of corrections for the GPS satellites, which are valid for the Americas region. They incorporate satellite orbit and clock corrections.

**Wide Area Differential GNSS (WADGNSS)** is a set of corrections for the GPS satellites, which are valid for a wide geographic area.

**World Geodetic System 1984 (WGS84)** is the current standard datum for global positioning and surveying. The WGS-84 is based on the GRS-80 ellipsoid.

**Y-code** is the name given to encrypted P-code when the U.S. Department of Defense uses selective availability.

**Z-count Word** is the GPS satellite clock time at the leading edge of the data subframe of the transmitted GPS message.